aiwa

aiwa SERVICE

NSX-AV320

SERVICE MANUAL

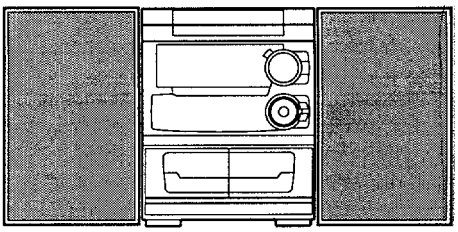

COMPACT DISC STEREO
CASSETTE RECEIVER

- BASIC TAPE MECHANISM : 6ZM-3 YPR1N
- BASIC CD MECHANISM : 4ZG-1 Z4DSHNC
- TYPE : EZ, K

REVISION PUBLISHING

SYSTEM	CD-CASSEIVER	SPEAKER	REMOTE CONTROLLER
NSX-AV320	CX-NAV320	SX-NAV304 SX-R275 SX-C605	RC-8AS04

- This Service Manual is the "Revision Publishing" and replaces Simple Manual NSX-AV320. (S/M Code No. 09-985-280-2FE)
- If requiring information about the CD mechanism, see Service Manual of 4ZG-1, S/M Code No. 09-983-249-3OT.

S/M Code No. 09–986–273–5FE

TABLE OF CONTENTS

SPECIFICATIONS 3
PROTECTION OF EYES FROM LASER BEAM DURING SERVICING 4
PRECAUTION TO REPLACE OPTICAL BLOCK 4
NOTE ON BEFORE REPAIR 5, 6
ELECTRICAL MAIN PARTS LIST ..... 7 ~ 10
TRANSISTOR ILLUSTRATION 11
BLOCK DIAGRAM – 1 (TUNER) 12
BLOCK DIAGRAM – 2 (MAIN / FRONT / PRO) ..... 13 ~ 15
SCHEMATIC DIAGRAM – 1 (MAIN 1 / 2) ..... 16 ~ 18
WIRING – 1 (MAIN) 19, 20
WIRING – 2 (FRONT) 21, 22
SCHEMATIC DIAGRAM – 2 (FRONT) ..... 23 ~ 25
IC BLOCK DIAGRAM – 1 26
SCHEMATIC DIAGRAM – 3 (PRO) ..... 27 ~ 28
WIRING – 3 (PRO) 29, 30
WIRING – 4 (AC) 31
WIRING – 5 (DECK) 32
SCHEMATIC DIAGRAM – 4 (MAIN 2 / 2) 33, 34
IC BLOCK DIAGRAM – 2 ..... 35, 37
FL GRID ASSIGNMENT AND ANODE CONNECTION 38
IC DESCRIPTION ..... 39 ~ 41
ADJUSTMENT <TUNER / DECK> 42, 43
PRACTICAL SERVICE FIGURE 44
MECHANICAL EXPLODED VIEW 1 / 1 ..... 45, 46
MECHANICAL PARTS LIST 1 / 1 47
TAPE MECHANISM EXPLODED VIEW 1 / 1 ..... 48, 49
TAPE MECHANISM PARTS LIST 1 / 1 50
SPRING APPLICATION POSITION 51
SPEAKER DISASSEMBLY INSTRUCTIONS 52
SPEAKER PARTS LIST 53
ACCESSORIES / PACKAGE LIST 53
REFERENCE NAME LIST 54

SPECIFICATIONS

<FM Tuner section>

Tuning range	87.5 MHz to 108 MHz
Usable sensitivity (IHF)	13.2 dBf
Antenna terminals	75 ohms (unbalanced)

<MW Tuner section>

Tuning range	531 kHz to 1602 kHz (9 kHz step) 530 kHz to 1710 kHz (10 kHz step)
Usable sensitivity	350 μV/m
Antenna	Loop antenna

<LW Tuner section>

Tuning range	144 kHz to 290 kHz
Usable sensitivity	1400 μV/m
Antenna	Loop antenna

<Amplifier section>

Power output	**Front** Rated: 30 W + 30 W (6 ohms, THD 1%, 1kHz/DIN 45500) Reference: 37 W + 37 W (6 ohms, THD 10%, 1kHz/DIN 45324) EZ: DIN MUSIC POWER: 75 W + 75 W **Rear (Surround)** Rated : 10 W + 10 W (8 ohms, THD 1%,1 kHz/DIN 45500) Reference: 12 W + 12 W (8 ohms, THD 10%, 1kHz/DIN 45324) EZ: DIN MUSIC POWER: 85 W + 85 W **Center** Rated: 20 W (8 ohms,THD 1%, 1 kHz/DIN 45500) Reference: 24 W (8 ohms, THD 10%, 1kHz/DIN 45324) EZ: DIN MUSIC POWER: 54 W
Total harmonic distortion	EZ: 0.1% (15 W, 1kHz, 6 ohms, DIN AUDIO)
Inputs	VIDEO/AUX : EZ: 400 mV K: 150 mV (adjustable) K: MIC :1.8 mV (10 kohms)
Outputs	SPEAKERS: accept speakers of 6 ohms or more EZ: SUPER WOOFER : 1.3V SURROUND SPEAKERS : accept speakers of 8 ohms to 16 ohms CENTER SPEAKER : accept speaker of 8 ohms or more PHONES (stereo jack) : accepts headphones of 32 ohms or more

<Cassette deck section>

Track format	4 tracks, 2 channels stereo
Frequency response	50 Hz - 15000 Hz
Recording system	AC bias
Heads	Deck 1 : Playback head x 1 Deck 2 : Recording/playback/ erase head x 1

<Compact disc player section>

Laser	Semiconductor laser (λ =780 nm)
D-A converter	1 bit dual
Signal-to-noise ratio	85 dB (1 kHz, 0 dB)
Harmonic distortion	0.05% (1 kHz, 0 dB)
Wow and flutter	Unmeasurable

<Speaker system SX-NAV304>

Cabinet type	2 way, bass reflex (magnetic shielded type)
Speakers	Woofer : 160 mm cone type Tweeter : 60 mm cone type
Impedance	6 ohms
Output sound pressure level	87 dB/W/m
Dimensions (W x H x D)	235 x 324 x 260 mm
Weight	4.1 kg

<General>

Power requirements	230 V AC, 50Hz
Power consumption	150 W
Dimensions of main unit (W x H x D)	260 x 330 x 346 mm
Weight of main unit	7.5 kg

- Design and specifications are subject to change without notice.
- Manufactured under license from Dolby Laboratories Licensing Corporation.
  "DOLBY" and "PRO LOGIC" are trademarks of DolbyLaboratories Licensing Corporation.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!
WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!
Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyt-täjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

VARNING!
Om apparaten används på annat sätt än vad som specificeras i denna bruksanvising, kan användaren utsättas för osynling laserstrålning, som överskrider gränsen för laserklass 1.

CAUTION
Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION
L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!
Usynlig laserstråling ved åbning, når sikkerhedsafbrydereer ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.
The CLASS 1 LASER PRODUCT label is located on the rear exterior.

CLASS 1	LASER PRODUCT
KLASSE 1	LASER PRODUKT
LUOKAN 1	LASER LAITE
KLASS 1	LASER APPARAT

Precaution to replace Optical block

(KSS – 213F)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

1) After the connection, remove solder shown in right figure.

PICK-UP Assy P.C.B

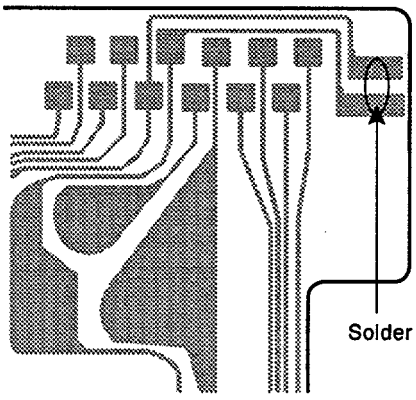

NOTE ON BEFORE STARTING REPAIR

1. Forced discharge of electrolytic capacitor of power supply block

When repair is going to be attempted in the set that uses relay circuit in the power supply block, electric potential is kept charged across the electrolytic capacitors (C101, 102) even though AC power cord is removed. If repair is attempted in this condition, the secondary defect can occur.
In order to prevent the secondary trouble, perform the following measures before starting repair work.

Discharge procedure

① Remove the AC power cord.
② Connect a discharging resistor at an end of lead wire that has clips at both ends. Connect the other end of the lead wire to metal chassis.
③ Contact the other end of the discharging resistor to the positive (+) side (+VH) of C101. (For two seconds)
④ Contact the same end of the discharging resistor as step ③ to the negative (-) side (-VH) of C102 in the same way. (For two seconds)
⑤ Check that voltage across C101 and C102 has decreased 1 V or less using a multimeter or an oscilloscope.

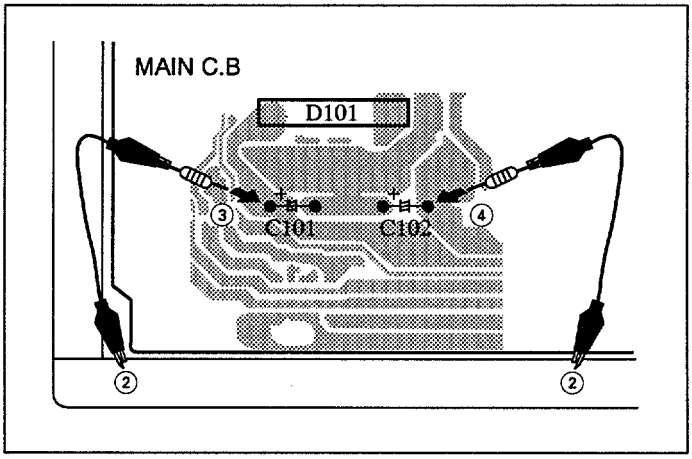

Fig-1

Select a discharging resistor referring to the following table.

Charging voltage (V) (C101, 102)	Discharging resistor (Ω)	Rated power (W)	Parts number
25-48	100	3	87-A00-247-090
49-140	220	5	87-A00-232-090

Note: The reference numbers (C101, C102) of the electrolytic capacitors can change depending on the models. Be sure to check the reference numbers of the charging capacitors on schematic diagram before starting the discharging work.

2. Check items before exchanging the MICROCOMPUTER

Be sure to check the following items before exchanging the MICROCOMPUTER. Exchange the MICROCOMPUTER after confirming that the MICROCOMPUTER is surely defective.

2-1. Regarding the HOLD terminal of the MICROCOMPUTER

When the HOLD terminal (INPUT) of the MICROCOMPUTER is "H", the MICROCOMPUTER is judged to be operating correctly. When this terminal is "L", the main power cannot be turned on. Therefore, be sure to check the terminal voltage of the HOLD terminal before exchange.
When the MICROCOMPUTER is not defective, the HOLD terminal can also go "L" when the POWER AMPLIFIER has any abnormalities that triggers the abnormality detection circuit on the MAIN C. B. that sets the HOLD terminal to "L".

- Good or no good judgement of the MICROCOMPUTER

① Turn on the AC main power.
② Confirm that the main power is turned on and the HOLD terminal of the MICROCOMPUTER keeps the "H" level or not.
③ When the HOLD terminal is "L" level, the abnormality detection circuit is judged to be working correctly and the MICROCOMPUTER is judged to be good.

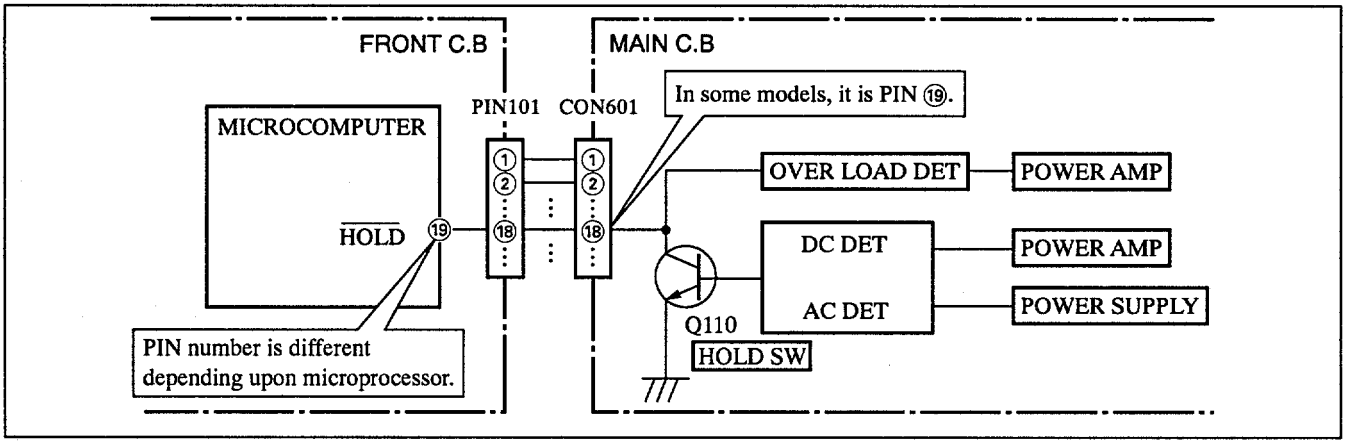

Fig-2-1

In such a case, check also if the POWER AMPLIFIER circuit or power supply circuit has any abnormalities or not.

2-2. Regarding reset

There are cases that the machine does not work correctly because the MICROCOMPUTER is not reset even though the AC power cord is re-inserted, or the software reset (pressing the STOP key + POWER key) is performed.
When the above described phenomenon occurs, it can leads to wrong judgement as if the MICROCOMPUTER is defective and to exchange the MICROCOMPUTER. In such a case, perform the forced-reset by the following procedure and check good or no good of the MICROCOMPUTER.

① Remove the AC power cord.

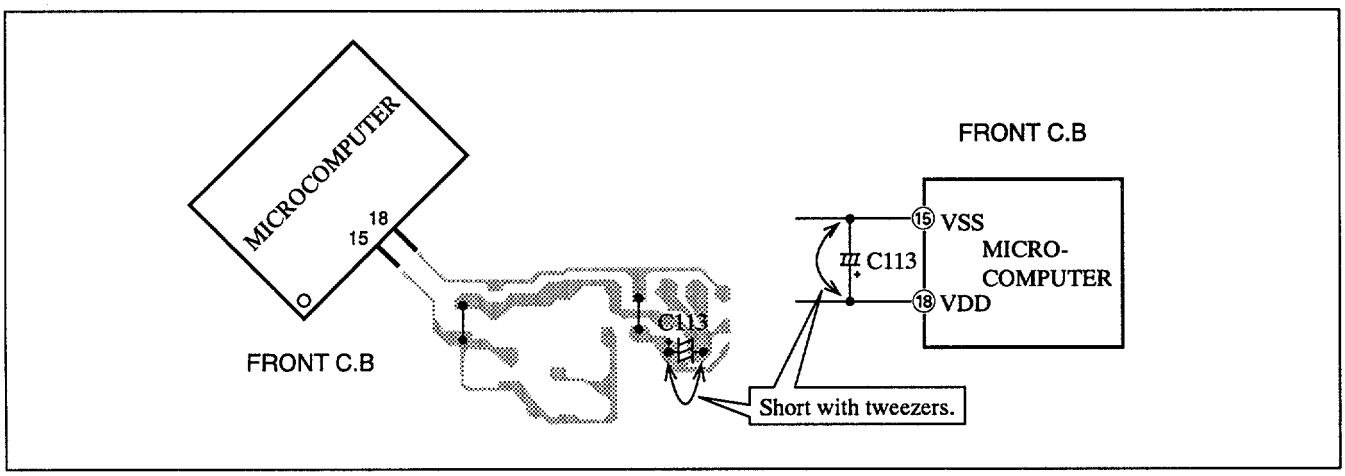

Fig-2-2

② Short both ends of the electrolytic capacitor C113 that is connected to VDD of the MICROCOMPUTER with tweezers.
③ Connect the AC power cord again. If the MICROCOMPUTER returns to the normal operation, the MICROCOMPUTER is good.

Note: The reference number or MICROCOMPUTER pin number of transistor (Q110) and electrolytic capacitor (C113) can change depending on the models. Be sure to check the reference numbers on schematic diagram before starting the discharging work.

2-3. Confirmation of soldering state of MICROCOMPUTER

Check the soldering state of the MICROCOMPUTER in addition to the above described procedures. Be sure to exchange the MICROCOMPUTER after surely confirming that the trouble is not caused by poor soldering but the MICROCOMPUTER itself.

ELECTRICAL MAIN PARTS LIST

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
IC			
	87-A20-083-010		IC,BA3835S
	88-NFV-602-010		C-IC,UPD780228-019-3BA
	87-NF8-614-010		IC,SPS-442-1-W
	87-017-915-080		IC,BU4094BCF
	87-A20-783-040		C-IC,BA7762AFS
	87-017-888-080		IC,NJM4558MD
	87-A20-954-040		C-IC,M62445FP-601
	86-NFZ-655-010		IC,LC72131D(Z)
	87-A20-913-010		IC,LA1837NL
	87-020-454-010		IC,DN6851
	87-A20-853-010		C-IC,M62463FP
	87-A20-440-040		IC,BU1920FS<EZ>
TRANSISTOR			
	89-213-702-010		TR,2SB1370 (1.8W)
	87-026-610-080		TR,KTC3198GR
	87-A30-076-080		C-TR,2SC3052F
	87-A30-196-080		TR,2SC4115SRS
	87-A30-075-080		C-TR,2SA1235F
	87-026-609-080		TR,KTA1266GR
	87-A30-198-080		TR,KTC3199GR
	87-A30-074-080		C-TR,RT1P 141C
	87-A30-071-080		C-TR,RT1N 144C
	87-A30-087-080		C-FET,2SK2158
	87-A30-107-070		C-TR,CMBT5401
	87-026-263-080		C-TR,RN1410
	87-A30-190-080		TR,CC5551
	87-A30-106-070		C-TR,CMBT5551
	87-A30-109-010		TR,2SD2495
	87-A30-108-010		TR,2SB1626
	87-A30-221-080		C-TR,DTA114WK
	87-A30-159-080		C-TR,KTA1298Y
	89-112-965-080		TR,2SA1296 (0.75W)
	87-A30-073-080		C-TR,RT1N 141C
	87-A30-105-080		C-TR,RT1P 441C
	87-026-238-080		C-TR,DTC144WK
	89-327-143-080		C-TR,2SC2714 (0.1W)
	87-A30-072-080		C-TR,RT1P 144C
	87-A30-214-010		TR,2SB1344
	87-A30-215-010		TR,2SD2025
	87-A30-086-070		C-TR,CSD1306E
	89-505-434-540		C-FET,2SK543-TB(4/5)
DIODE			
	87-A40-115-060		DIODE,RS603M
	87-A40-505-040		C-DIODE,KDS181
	87-A40-504-040		C-DIODE,KDS184
	87-070-274-080		DIODE,1N4003 SEM
	87-A40-435-080		ZENER,MTZJ30D
	87-A40-345-080		ZENER,MTZJ10C
	87-A40-004-080		ZENER,MTZJ16A
	87-A40-470-080		DIODE,1SS254
	87-A40-509-080		ZENER,MTZJ6.8C
	87-A40-488-080		DIODE,1SS244
	87-017-932-080		ZENER,MTJ6.2B
	87-A40-002-080		ZENER,MTZJ5.1C
	87-A40-438-080		ZENER,MTZJ4.7A
	87-A40-234-080		ZENER,MTZJ5.6A
	87-A40-442-080		ZENER,MTZJ9.1A
	87-070-136-080		ZENER,MTZJ5.1B
	87-A40-116-060		DIODE,RS403L-B-D-5L
MAIN C.B			
C109	87-010-196-080		CHIP CAPACITOR,0.1-25
C110	87-010-196-080		CHIP CAPACITOR,0.1-25
C111	87-010-196-080		CHIP CAPACITOR,0.1-25
C112	87-010-196-080		CHIP CAPACITOR,0.1-25
C113	87-010-407-080		CAP, ELECT 33-50V
C114	87-010-407-080		CAP, ELECT 33-50V
C115	87-010-407-080		CAP, ELECT 33-50V
C116	87-010-407-080		CAP, ELECT 33-50V
C117	87-010-430-080		CAP, ELECT 100-63
C118	87-010-263-080		CAP, ELECT 100-10V
C119	87-010-260-080		CAP, ELECT 47-25V
C120	87-010-403-080		CAP, ELECT 3.3-50V
C121	87-012-140-080		CAP 470P
C122	87-010-263-080		CAP, ELECT 100-10V
C123	87-010-247-080		CAP, ELECT 100-50V
C124	87-010-112-080		CAP, ELECT 100-16V
C125	87-010-235-080		CAP,E 470-16 SME
C153	87-010-917-090		CAP,E 3300-50 M SMG
C154	87-010-917-090		CAP,E 3300-50 M SMG
C205	87-010-805-080		CAP,S 1-16 FZ
C206	87-010-805-080		CAP,S 1-16 FZ
C209	87-010-546-080		CAP, ELECT 0.33-50V
C210	87-010-546-080		CAP, ELECT 0.33-50V
C211	87-010-185-080		C-CAP,S 3900P-50 B
C212	87-010-185-080		C-CAP,S 3900P-50 B
C213	87-010-186-080		CAP,CHIP 4700P
C214	87-010-186-080		CAP,CHIP 4700P
C215	87-010-403-080		CAP, ELECT 3.3-50V
C216	87-010-403-080		CAP, ELECT 3.3-50V
C217	87-010-260-080		CAP, ELECT 47-25V
C218	87-010-260-080		CAP, ELECT 47-25V
C219	87-010-805-080		CAP,S 1-16 FZ
C220	87-010-805-080		CAP,S 1-16 FZ
C221	87-010-191-080		C-CAP,S 0.015-50 Z F
C222	87-010-191-080		C-CAP,S 0.015-50 Z F
C223	87-010-197-080		CAP,CHIP 0.01 DM
C224	87-010-197-080		CAP,CHIP 0.01 DM
C225	87-010-176-080		C-CAP,S 680P-50 SL
C226	87-010-176-080		C-CAP,S 680P-50 SL
C228	87-010-196-080		CHIP CAPACITOR,0.1-25
C229	87-A10-812-080		C-CAP,S 220P-200 J CH
C230	87-A10-812-080		C-CAP,S 220P-200 J CH
C233	87-010-544-080		CAP, ELECT 0.1-50V
C234	87-010-544-080		CAP, ELECT 0.1-50V
C237	87-012-368-080		C-CAP,S 0.1-50 F
C238	87-012-368-080		C-CAP,S 0.1-50 F
C239	87-012-368-080		C-CAP,S 0.1-50 F
C240	87-012-368-080		C-CAP,S 0.1-50 F
C280	87-010-188-080		C-CAP,S 6800P-50 B
C299	87-010-196-080		CHIP CAPACITOR,0.1-25
C301	87-010-318-080		C-CAP,S 47P-50 CH
C302	87-010-318-080		C-CAP,S 47P-50 CH
C303	87-012-157-080		C-CAP,S 330P-50 CH
C304	87-012-157-080		C-CAP,S 330P-50 CH
C305	87-012-145-080		CAP, CHIP S 270P CH
C306	87-012-145-080		CAP, CHIP S 270P CH
C307	87-010-196-080		CHIP CAPACITOR,0.1-25
C309	87-010-196-080		CHIP CAPACITOR,0.1-25
C310	87-010-196-080		CHIP CAPACITOR,0.1-25
C311	87-010-198-080		CAP, CHIP 0.022
C312	87-010-198-080		CAP, CHIP 0.022
C313	87-010-180-080		CAP,CHIP S 1500P-50 KB
C314	87-010-180-080		CAP,CHIP S 1500P-50 KB
C315	87-010-178-080		CHIP CAP 1000P
C316	87-010-178-080		CHIP CAP 1000P
C321	87-016-492-080		C-CAP,S 0.33-16 FZ
C322	87-016-492-080		C-CAP,S 0.33-16 FZ
C324	87-010-260-080		CAP, ELECT 47-25V
C325	87-010-370-080		CAP,E 330-6.3 SME
C327	87-010-404-080		CAP, ELECT 4.7-50V
C328	87-010-404-080		CAP, ELECT 4.7-50V
C332	87-010-196-080		CHIP CAPACITOR,0.1-25

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
C335	87-010-401-080		CAP, ELECT 1-50V
C336	87-010-401-080		CAP, ELECT 1-50V
C337	87-010-196-080		CHIP CAPACITOR,0.1-25
C339	87-010-196-080		CHIP CAPACITOR,0.1-25
C340	87-010-196-080		CHIP CAPACITOR,0.1-25
C351	87-012-140-080		CAP 470P
C352	87-012-140-080		CAP 470P
C354	87-010-175-080		CAP 560P
C355	87-012-349-080		C-CAP,S 1000P-50 CH
C356	87-010-260-080		CAP, ELECT 47-25V
C357	87-010-197-080		CAP, CHIP 0.01 DM
C358	87-010-183-080		C-CAP,S 2700P-50 B
C359	87-010-183-080		C-CAP,S 2700P-50 B
C360	87-010-183-080		C-CAP,S 2700P-50 B
C370	87-010-196-080		CHIP CAPACITOR,0.1-25
C373	87-016-083-080		C-CAP,S 0.15-16 RK
C374	87-016-083-080		C-CAP,S 0.15-16 RK
C378	87-010-196-080		CHIP CAPACITOR,0.1-25
C379	87-010-382-080		CAP, ELECT 22-25V
C380	87-010-382-080		CAP, ELECT 22-25V
C386	87-010-196-080		CHIP CAPACITOR,0.1-25
C401	87-010-405-080		CAP, ELECT 10-50V
C402	87-010-405-080		CAP, ELECT 10-50V
C457	87-010-404-080		CAP, ELECT 4.7-50V
C458	87-010-404-080		CAP, ELECT 4.7-50V
C516	87-010-196-080		CHIP CAPACITOR,0.1-25
C601	87-010-180-080		C-CER 1500P
C602	87-010-180-080		C-CER 1500P
C613	87-010-196-080		CHIP CAPACITOR,0.1-25
C614	87-010-196-080		CHIP CAPACITOR,0.1-25
C619	87-010-185-080		C-CAP,S 3900P-50 B
C620	87-010-185-080		C-CAP,S 3900P-50 B
C621	87-010-401-080		CAP, ELECT 1-50V
C622	87-010-401-080		CAP, ELECT 1-50V
C629	87-010-405-080		CAP, ELECT 10-50V
C630	87-010-213-080		C-CAP,S 0.015-50 B
C631	87-010-194-080		CAP, CHIP 0.047
C632	87-010-263-080		CAP, ELECT 100-10V
C633	87-010-263-080		CAP, ELECT 100-10V
C634	87-010-196-080		CHIP CAPACITOR,0.1-25
C635	87-010-196-080		CHIP CAPACITOR,0.1-25
C636	87-010-194-080		CAP, CHIP 0.047
C637	87-010-183-080		C-CAP,S 2700P-50 B
C641	87-010-196-080		CHIP CAPACITOR,0.1-25
C653	87-010-318-080		C-CAP,S 47P-50 CH
C654	87-010-318-080		C-CAP,S 47P-50 CH
C663	87-010-322-080		C-CAP,S 100P-50 CH
C664	87-010-322-080		C-CAP,S 100P-50 CH
C667	87-010-196-080		CHIP CAPACITOR,0.1-25
C671	87-010-322-080		C-CAP,S 100P-50 CH
C672	87-010-322-080		C-CAP,S 100P-50 CH
C701	87-010-381-080		CAP, ELECT 330-16V
C702	87-010-404-080		CAP, ELECT 4.7-50V
C703	87-010-197-080		CAP, CHIP 0.01 DM
C704	87-010-197-080		CAP, CHIP 0.01 DM
C709	87-010-322-080		C-CAP,S 100P-50 CH
C711	87-010-263-080		CAP, ELECT 100-10V
C712	87-010-196-080		CHIP CAPACITOR,0.1-25
C713	87-010-197-080		CAP, CHIP 0.01 DM
C714	87-010-197-080		CAP, CHIP 0.01 DM
C715	87-010-322-080		C-CAP,S 100P-50 CH
C721	87-010-312-080		C-CAP,S 15P-50 CH
C722	87-010-312-080		C-CAP,S 15P-50 CH
C723	87-010-178-080		CHIP CAP 1000P
C725	87-010-178-080		CHIP CAP 1000P
C727	87-010-196-080		CHIP CAPACITOR,0.1-25
C728	87-010-248-080		CAP, ELECT 220-10V
C755	87-010-197-080		CAP, CHIP 0.01 DM
C756	87-010-197-080		CAP, CHIP 0.01 DM
C757	87-010-318-080		C-CAP,S 47P-50 CH
C758	87-010-149-080		C-CAP,S 5P-50 CH
C761	87-010-196-080		CHIP CAPACITOR,0.1-25
C762	87-010-197-080		CAP, CHIP 0.01 DM
C763	87-010-194-080		CAP, CHIP 0.047
C765	87-010-197-080		CAP, CHIP 0.01 DM
C766	87-010-197-080		CAP, CHIP 0.01 DM
C767	87-010-405-080		CAP, ELECT 10-50V
C768	87-010-197-080		CAP, CHIP 0.01 DM
C769	87-010-408-080		CAP, ELECT 47-50V
C770	87-015-821-080		C-CAP 0.047
C771	87-010-407-080		CAP, ELECT 33-50V
C772	87-010-194-080		CAP, CHIP 0.047
C773	87-010-196-080		CHIP CAPACITOR,0.1-25
C774	87-010-263-080		CAP, ELECT 100-10V
C775	87-010-404-080		CAP, ELECT 4.7-50V
C776	87-010-197-080		CAP, CHIP 0.01 DM
C777	87-010-400-080		CAP, ELECT 0.47-50V
C778	87-010-401-080		CAP, ELECT 1-50V
C779	87-010-401-080		CAP, ELECT 1-50V
C780	87-010-196-080		CHIP CAPACITOR,0.1-25
C781	87-010-405-080		CAP, ELECT 10-50V
C782	87-010-405-080		CAP, ELECT 10-50V
C783	87-015-819-080		CAPACITOR,0.01
C784	87-010-197-080		CAP, CHIP 0.01 DM
C785	87-010-403-080		CAP, ELECT 3.3-50V
C786	87-010-403-080		CAP, ELECT 3.3-50V
C789	87-010-188-080		CAP,CHIP 6800P
C790	87-010-188-080		CAP,CHIP 6800P
C791	87-010-405-080		CAP, ELECT 10-50V
C793	87-010-180-080		C-CAP,S 1500P<EZ>
C793	87-010-181-080		C-CAP,S 1800P<K>
C794	87-010-406-080		CAP, ELECT 22-50
C795	87-010-596-080		CAP, S 0.047-16
C796	87-010-403-080		CAP, ELECT 3.3-50V
C797	87-010-181-080		C-CAP,S 1800P-50 B
C798	87-010-181-080		C-CAP,S 1800P-50 B
C799	87-010-194-080		CAP, CHIP 0.047
C812	87-010-197-080		CAP, CHIP 0.01 DM
C814	87-010-197-080		CAP, CHIP 0.01 DM
C820	87-010-408-080		CAP, ELECT 47-50V
C821	87-010-197-080		CAP, CHIP 0.01 DM
C822	87-010-197-080		CAP, CHIP 0.01 DM
C823	87-010-197-080		CAP, CHIP 0.01 DM
C828	87-010-196-080		CHIP CAPACITOR,0.1-25
C829	87-010-196-080		CHIP CAPACITOR,0.1-25
C859	87-010-197-080		CAP, CHIP 0.01 DM<EZ>
C861	87-012-156-080		C-CAP,S 220P-50 CH<EZ>
C862	87-012-156-080		C-CAP,S 220P-50 CH<EZ>
C863	87-012-140-080		C-CAP,S 470P<EZ>
C864	87-010-405-080		CAP,ELECT 10-50V<EZ>
C865	87-010-196-080		CHIP CAPACITOR,0.1-25<EZ>
C866	87-010-405-080		CAP,ELECT 10-50V<EZ>
C867	87-010-197-080		CAP, CHIP 0.01 DM<EZ>
C868	87-010-316-080		C-CAP,S 33P-50 CH<EZ>
C869	87-010-314-080		C-CAP,S 22P-50 CH<EZ>
C940	87-010-197-080		CAP,CHIP 0.01 DM
C942	87-010-151-080		C-CAP,S 7P-50 CH
C947	87-010-197-080		CAP,CHIP 0.01 DM
C949	87-014-049-080		CAP,PP 470P-100J
C952	87-010-197-080		CAP,CHIP 0.01 DM
C957	87-010-311-080		C-CAP,S 12P
C958	87-010-197-080		CAP,CHIP 0.01 DM
C959	87-010-196-080		CHIP CAPACITOR,0.1-25
C960	87-010-196-080		CHIP CAPACITOR,0.1-25
C962	87-010-401-080		CAP,ELECT 1-50V
CF801	87-008-423-010		CERAMIC FILTER, SFE10.7
CF802	87-785-747-010		CF,MS2 GHY.R
FFE801	A8-6ZA-19C-170		6ZA-1 YFEENC
J201	87-A60-483-010		JACK,DIA6.3 BLK ST W/S KM
J203	87-033-240-010		TERMINAL,SP 4P32SV1-05

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
J212	87-A60-399-010		JACK,PIN 1P BLK HSP-241VBL<EZ>
J601	87-A60-425-010		JACK,PIN 2P YKC21-3828
J802	87-A60-427-010		TERMINAL,ANT PAL 2P YKD31-0429
L201	87-003-383-010		COIL,1UH-S
L202	87-003-383-010		COIL,1UH-S
L301	87-A50-049-010		COIL,TRAP 85K(COI)
L302	87-A50-049-010		COIL,TRAP 85K(COI)
L351	87-007-342-010		COIL,OSC 85K BIAS
L771	87-A50-266-010		COIL,FM DET-2N(TOK)
L772	87-A90-733-010		FLTR,PCFAZH-450 (TOK)
L781	87-005-847-080		COIL,2.2UH(CECS)
L832	86-NFZ-694-080		COIL,2.2UH K CECS
L941	87-A50-020-010		COIL,ANT LW(COI)
L942	87-A50-019-010		COIL,OSC LW(COI)
L981	87-NF4-651-010		COIL,AM PACK 2N(TOM)
R237	87-A00-258-080		RES,M/F 0.22-1W J
R238	87-A00-258-080		RES,M/F 0.22-1W J
R239	87-A00-258-080		RES,M/F 0.22-1W J
R240	87-A00-258-080		RES,M/F 0.22-1W J
R629	87-029-082-010		RES,FUSE 100-1/4W
SFR351	87-A90-433-080		SFR,50K H NVZ6TLTA
SFR352	87-A90-433-080		SFR,50K H NVZ6TLTA
TC942	87-011-221-080		CAP,TRIMMER 30P
X721	87-A70-061-010		VIB,XTAL 4.500MHZ CSA-309
X851	87-A70-091-010		VIB,XTAL 4.332MHZ CSA-309<EZ>
FRONT C.B			
	88-911-091-110		FF-CABLE,11P 1.25
	88-913-321-110		FF-CABLE,13P 1.25 320MM
	88-906-251-110		FF-CABLE,6P 1.25
C36	87-010-322-080		C-CAP,S 100P-50 CH
C37	87-010-322-080		C-CAP,S 100P-50 CH
C38	87-010-322-080		C-CAP,S 100P-50 CH
C39	87-010-322-080		C-CAP,S 100P-50 CH
C40	87-010-322-080		C-CAP,S 100P-50 CH
C41	87-010-322-080		C-CAP,S 100P-50 CH
C42	87-010-322-080		C-CAP,S 100P-50 CH
C43	87-010-322-080		C-CAP,S 100P-50 CH
C44	87-010-322-080		C-CAP,S 100P-50 CH
C45	87-010-322-080		C-CAP,S 100P-50 CH
C46	87-012-156-080		C-CAP,S 220P-50 CH
C150	87-010-196-080		CHIP CAPACITOR,0.1-25
C153	87-010-196-080		CHIP CAPACITOR,0.1-25
C154	87-010-196-080		CHIP CAPACITOR,0.1-25
C170	87-010-194-080		CAP, CHIP 0.047
C171	87-010-196-080		CHIP CAPACITOR,0.1-25
C172	87-010-406-040		CAP,E 22-50 M SME
C173	87-010-194-080		CAP, CHIP 0.047
C201	87-018-205-080		CAP, CERA-SOL 0.022
C202	87-010-198-080		CAP, CHIP 0.022
C203	87-010-198-080		CAP, CHIP 0.022
C204	87-012-140-080		CAP 470P
C205	87-010-316-080		C-CAP,S 33P-50 CH
C206	87-010-318-080		C-CAP,S 47P-50 CH
C207	87-010-312-080		C-CAP,S 15P-50 CH
C208	87-010-196-080		CHIP CAPACITOR,0.1-25
C209	87-010-494-040		CAP,E 1-50 GAS
C210	87-A10-189-040		CAP,E 220-10
C211	87-010-194-080		CAP, CHIP 0.047
C212	87-010-555-040		CAP,E 100-10 GAS
C213	87-010-196-080		CHIP CAPACITOR,0.1-25
C214	87-010-405-040		CAP,E 10-50
C215	87-012-156-080		C-CAP,S 220P-50 CH
C216	87-012-156-080		C-CAP,S 220P-50 CH
C217	87-010-197-080		CAP, CHIP 0.01 DM
C250	87-010-196-080		CHIP CAPACITOR,0.1-25
C270	87-010-196-080		CHIP CAPACITOR,0.1-25
C307	87-015-686-040		CAP,E 22-25 M 7L SRA
C354	87-010-196-080		CHIP CAPACITOR,0.1-25
C355	87-010-196-080		CHIP CAPACITOR,0.1-25
C373	87-010-196-080		CHIP CAPACITOR,0.1-25
C376	87-012-158-080		C-CAP,S 390P-50 CH
C378	87-010-196-080		CHIP CAPACITOR,0.1-25
C401	87-010-405-040		CAP,E 10-50
C402	87-010-405-040		CAP,E 10-50
C404	87-010-194-080		CAP, CHIP 0.047
C405	87-010-246-040		CAP,E 47-35 SME
C406	87-010-197-080		CAP, CHIP 0.01 DM
C410	87-010-560-040		CAP, E 10-50 GAS
C411	87-010-560-040		CAP, E 10-50 GAS
C501	87-010-401-040		CAP,E 1-50 SME
C502	87-010-177-080		C-CAP,S 820P-50 SL
C504	87-010-546-040		CAP,E 0.33-50 SME
C505	87-010-321-080		CHIP CAPACITOR,82P(J)
C506	87-010-405-040		CAP,E 10-50
C508	87-010-248-040		CAP,E 220-10 SME
C509	87-010-545-040		CAP,E 0.22-50 SME
C510	87-018-209-080		CAP,CER 0.1-50V
C511	87-010-406-040		CAP,E 22-50 SME
C513	87-010-405-040		CAP,E 10-50
C514	87-010-186-080		CAP,CHIP 4700P
CON101	87-099-720-010		CONN,30P TYK-B(P)
CON102	87-099-015-010		CONN,13P 6216V
CON301	87-099-013-010		CONN,11P 6216 V
CON601	87-099-016-010		CONN,14P 6216V
EMI501	87-008-372-080		FILTER, EMI BL OIRNI
FL401	88-NF8-603-010		FL,SVA-11MM12
J501	87-A60-651-010		JACK,3.5MONO
LED208	87-070-281-080		LED,SLZ736A-25H-S-T1 P-GRN
LED209	87-070-281-080		LED,SLZ736A-25H-S-T1 P-GRN
LED210	87-070-281-080		LED,SLZ736A-25H-S-T1 P-GRN
LED211	87-070-281-080		LED,SLZ736A-25H-S-T1 P-GRN
LED213	87-070-281-080		LED,SLZ736A-25H-S-T1 P-GRN
LED222	87-070-201-080		LED,SLP9118C-51-S RED
LED223	87-070-201-080		LED,SLP9118C-51-S RED
LED224	87-070-201-080		LED,SLP9118C-51-S RED
LED225	87-070-201-080		LED,SLP9118C-51-S RED
LED226	87-070-201-080		LED,SLP9118C-51-S RED
LED227	87-070-201-080		LED,SLP9118C-51-S RED
LED228	87-070-201-080		LED,SLP9118C-51-S RED
LED229	87-070-201-080		LED,SLP9118C-51-S RED
S401	87-A90-680-080		SW,TACT KSM0612BTS
S402	87-A90-680-080		SW,TACT KSM0612BTS
S403	87-A90-680-080		SW,TACT KSM0612BTS
S404	87-A90-680-080		SW,TACT KSM0612BTS
S405	87-A90-680-080		SW,TACT KSM0612BTS
S406	87-A90-680-080		SW,TACT KSM0612BTS
S407	87-A90-680-080		SW,TACT KSM0612BTS
S408	87-A90-680-080		SW,TACT KSM0612BTS
S409	87-A90-680-080		SW,TACT KSM0612BTS
S410	87-A90-680-080		SW,TACT KSM0612BTS
S411	87-A90-680-080		SW,TACT KSM0612BTS
S412	87-A90-680-080		SW,TACT KSM0612BTS
S413	87-A90-680-080		SW,TACT KSM0612BTS
S414	87-A90-680-080		SW,TACT KSM0612BTS
S415	87-A90-680-080		SW,TACT KSM0612BTS
S416	87-A90-680-080		SW,TACT KSM0612BTS
S417	87-A90-680-080		SW,TACT KSM0612BTS
S418	87-A90-680-080		SW,TACT KSM0612BTS
S419	87-A90-680-080		SW,TACT KSM0612BTS
S420	87-A90-680-080		SW,TACT KSM0612BTS
S421	87-A90-680-080		SW,TACT KSM0612BTS
S423	87-A90-680-080		SW,TACT KSM0612BTS
S424	87-A90-680-080		SW,TACT KSM0612BTS<EZ>
S425	87-A90-680-080		SW,TACT KSM0612BTS
S426	87-A90-680-080		SW,TACT KSM0612BTS<EZ>
S428	87-A90-680-080		SW,TACT KSM0612BTS<EZ>
SW201	87-A90-535-010		SW,RTRY EC16B24304
SW202	88-NF8-615-010		SW,RTRY EC16B24204L=25

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
X201	87-A70-075-080		VIB,CER 4.19MHZ CRHF
PRO C.B			
C101	87-012-368-080		C-CAP,S 0.1-50 Z F
C102	87-012-368-080		C-CAP,S 0.1-50 Z F
C103	87-016-051-090		CAP,E 2200-35 M SMG
C104	87-016-051-090		CAP,E 2200-35 M SMG
C105	87-010-196-080		C-CAP,S 0.1-25 Z F
C106	87-010-196-080		C-CAP,S 0.1-25 Z F
C109	87-010-188-080		C-CAP,S 6800P-50B
C112	87-012-368-080		C-CAP,S 0.1-50 Z F
C113	87-012-368-080		C-CAP,S 0.1-50 Z F
C207	87-010-545-080		CAP,E 0.22-50 M SME
C209	87-010-180-080		C-CAP,S 1500P-50 K B
C211	87-010-404-080		CAP,E 4.7-50 M SME
C215	87-A10-596-080		C-CAP,S 100P-100 J CH
C217	87-010-406-080		CAP,E 22-50 M SME
C219	87-A10-596-080		C-CAP,S 100P-100 J CH
C221	87-A10-899-080		CAP,E 47-25 M BP
C223	87-010-544-080		CAP,E 0.1-50 M SME
C225	87-010-993-080		C-CAP,S 0.056-25 K B
C227	87-010-196-080		C-CAP,S 0.1-25 Z F
C229	87-A10-799-080		C-CAP,S 5600P-16 J B
C230	87-A10-799-080		C-CAP,S 5600P-16 J B
C233	87-010-263-080		CAP,E 100-10 SME
C234	87-010-235-080		CAP,E 470-16 SME
C307	87-010-545-080		CAP,E 0.22-50 M SME
C309	87-010-181-080		C-CAP, 1800P-50 K B
C311	87-010-404-080		CAP,E 4.7-50 M SME
C315	87-A10-596-080		C-CAP,S 100P-100 J CH
C317	87-010-408-080		CAP,E 47-50 M SME
C319	87-A10-596-080		C-CAP,S 100P-100 J CH
C321	87-A10-899-080		CAP,E 47-25 M BP
C323	87-010-544-080		CAP,E 0.1-50 M SME
C325	87-010-993-080		C-CAP,S 0.056-25 K B
C327	87-010-196-080		C-CAP,S 0.1-25 Z F
C333	87-010-263-080		CAP,E 100-10 SME
C501	87-010-176-080		C-CAP,S 680P-50 J SL
C502	87-010-176-080		C-CAP,S 680P-50 J SL
C503	87-A10-804-080		C-CAP,S 0.1-25 J B
C504	87-A10-804-080		C-CAP,S 0.1-25 J B
C505	87-A10-804-080		C-CAP,S 0.1-25 J B
C506	87-A10-804-080		C-CAP,S 0.1-25 J B
C509	87-010-112-080		CAP,E 100-16 M SME
C510	87-010-221-080		CAP,E 470-10 M SME
C511	87-A10-891-080		CAP,E 4.7-25 SME(K)
C512	87-A10-800-080		C-CAP,S 6800P-16 J B
C513	87-010-374-080		CAP,E 47-10 M SME
C514	87-010-196-080		C-CAP,S 0.1-25 Z F
C515	87-010-400-080		CAP,E 0.47-50 M SME
C516	87-010-400-080		CAP,E 0.47-50 M SME
C519	87-010-544-080		CAP,E 0.1-50 M SME
C520	87-010-546-080		CAP,E 0.33-50 SME
C522	87-018-209-080		CAP,TC U 0.1-50 Z F
C523	87-A10-804-080		C-CAP,S 0.1-25 J B
C524	87-010-374-080		CAP,E 47-10 M SME
C526	87-010-196-080		C-CAP,S 0.1-25 Z F
C530	87-010-544-080		CAP,E 0.1-50 M SME
C531	87-010-546-080		CAP,E 0.33-50 SME
C532	87-010-971-080		C-CAP,S 4700P-50 J B
C533	87-012-349-080		C-CAP,S 1000P-50 J CH
C538	87-010-971-080		C-CAP,S 4700P-50 J B
C539	87-012-349-080		C-CAP,S 1000P-50 J CH
C540	87-010-401-080		CAP,E 1-50 M SME
C541	87-010-401-080		CAP,E 1-50 M SME
C542	87-A10-799-080		C-CAP,S 5600P-16 J B
C543	87-A10-802-080		C-CAP,S 0.047-16 J B
C544	87-A10-229-080		C-CAP,S 0.68-10 K

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
C545	87-012-393-080		C-CAP,S 0.22-16 K
C546	87-012-393-080		C-CAP,S 0.22-16 K
C547	87-010-404-080		CAP,E 4.7-50 M SME
C548	87-010-404-080		CAP,E 4.7-50 M SME
C549	87-012-393-080		C-CAP,S 0.22-16 K
C550	87-012-393-080		C-CAP,S 0.22-16 K
C551	87-016-081-080		C-CAP,S 0.1-16 K R
C552	87-A10-802-080		C-CAP,S 0.047-16 J B
C553	87-A10-802-080		C-CAP,S 0.047-16 J B
C554	87-016-081-080		C-CAP,S 0.1-16 K R
C555	87-016-081-080		C-CAP,S 0.1-16 K R
C556	87-A10-801-080		C-CAP,S 0.022-16 J B
C557	87-A10-801-080		C-CAP,S 0.022-16 J B
C558	87-016-081-080		C-CAP,S 0.1-16 K R
C579	87-010-402-080		CAP,E 2.2-50 M SME
C580	87-010-402-080		CAP,E 2.2-50 M SME
C581	87-010-196-080		C-CAP,S 0.1-25 Z F
J202	87-A60-605-010		JACK,3P W/R/O YKC21-3948
L201	87-003-383-010		COIL,1UH K
L301	87-003-383-010		COIL,1UH K
R243	87-A00-258-080		RES,M/F 0.22-1W J
R245	87-A00-258-080		RES,M/F 0.22-1W J
R343	87-A00-258-080		RES,M/F 0.22-1W J
R345	87-A00-258-080		RES,M/F 0.22-1W J
R509	87-022-214-080		C-RES,S 100K-1/10W F
AC1 C.B			
⚠ F101	87-035-455-010		FUSE,2A 250V T W/C
⚠ FC101	87-A90-505-080		FUSE CLAMP,TP00351-51
⚠ FC102	87-A90-505-080		FUSE CLAMP,TP00351-51
⚠ PT101	88-NFV-608-010		PT,8NF-28E
⚠ T101	87-A60-317-010		TERMINAL, 1P MSC
⚠ T102	87-A60-317-010		TERMINAL, 1P MSC
AC2 C.B			
⚠ PR101	87-026-682-080		PROTECTOR,10A 491 SERIES 60V
⚠ PR102	87-026-682-080		PROTECTOR,10A 491 SERIES 60V
⚠ PR105	87-A90-195-080		PROTECTOR,7A 491 SERIES 60V
⚠ PR106	87-A90-195-080		PROTECTOR,7A 491 SERIES 60V
W104	85-NF5-628-010		F-CABLE 7P-2.5
DECK C.B			
CON105	87-099-753-019		CONN,11P H 9604
CON301	86-ZM3-604-219		CON ASSY,3P-PB
CON351	86-ZM3-605-119		CON ASSY,8P-RPB
SFR1	87-024-581-089		SFR,3.3K DIA 6H
SOL1	82-ZM1-618-410		SOL ASSY,27
SOL2	82-ZM1-618-410		SOL ASSY,27
SW1	87-A90-248-010		SW,MICRO ESE11SH2CX0
SW2	87-A90-248-010		SW,MICRO ESE11SH2CX0
SW3	87-A90-248-010		SW,MICRO ESE11SH2CX0
SW4	87-A90-248-010		SW,MICRO ESE11SH2CX0
SW5	87-A90-248-010		SW,MICRO ESE11SH2CX0
W1	82-ZM3-601-019		RBN-CORD,4P-75

○ チップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち
Chip Resistor Part Coding

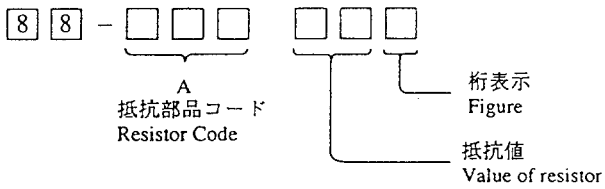

チップ抵抗
Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法／Dimensions (mm)				抵抗コード ：A Resistor Code: A
				外形／Form	L	W	t	
1／16W	1608	±5%	CJ		1.6	0.8	0.45	108
1／10W	2125	±5%	CJ		2	1.25	0.45	118
1／8W	3216	±5%	CJ		3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION

KTC3198
KTA1266

CC5551

2SB1370

KTC3199

2SA1296

2SB1626
2SB1344
2SD2025
2SD2495



2SC4115S

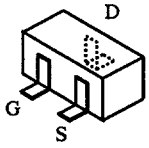

2SK2158

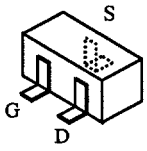

2SK543

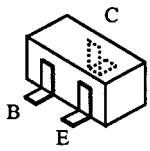

DTA114WK RN1410
DTC144WK RT1N141C
CSD1306E RT1N144C
CMBT5551 RT1P141C
CMBT5401 RT1P441C
2SA1235F RT1P144C
2SC3052F KTA1298Y
2SC2714

BLOCK DIAGRAM – 1 (TUNER)

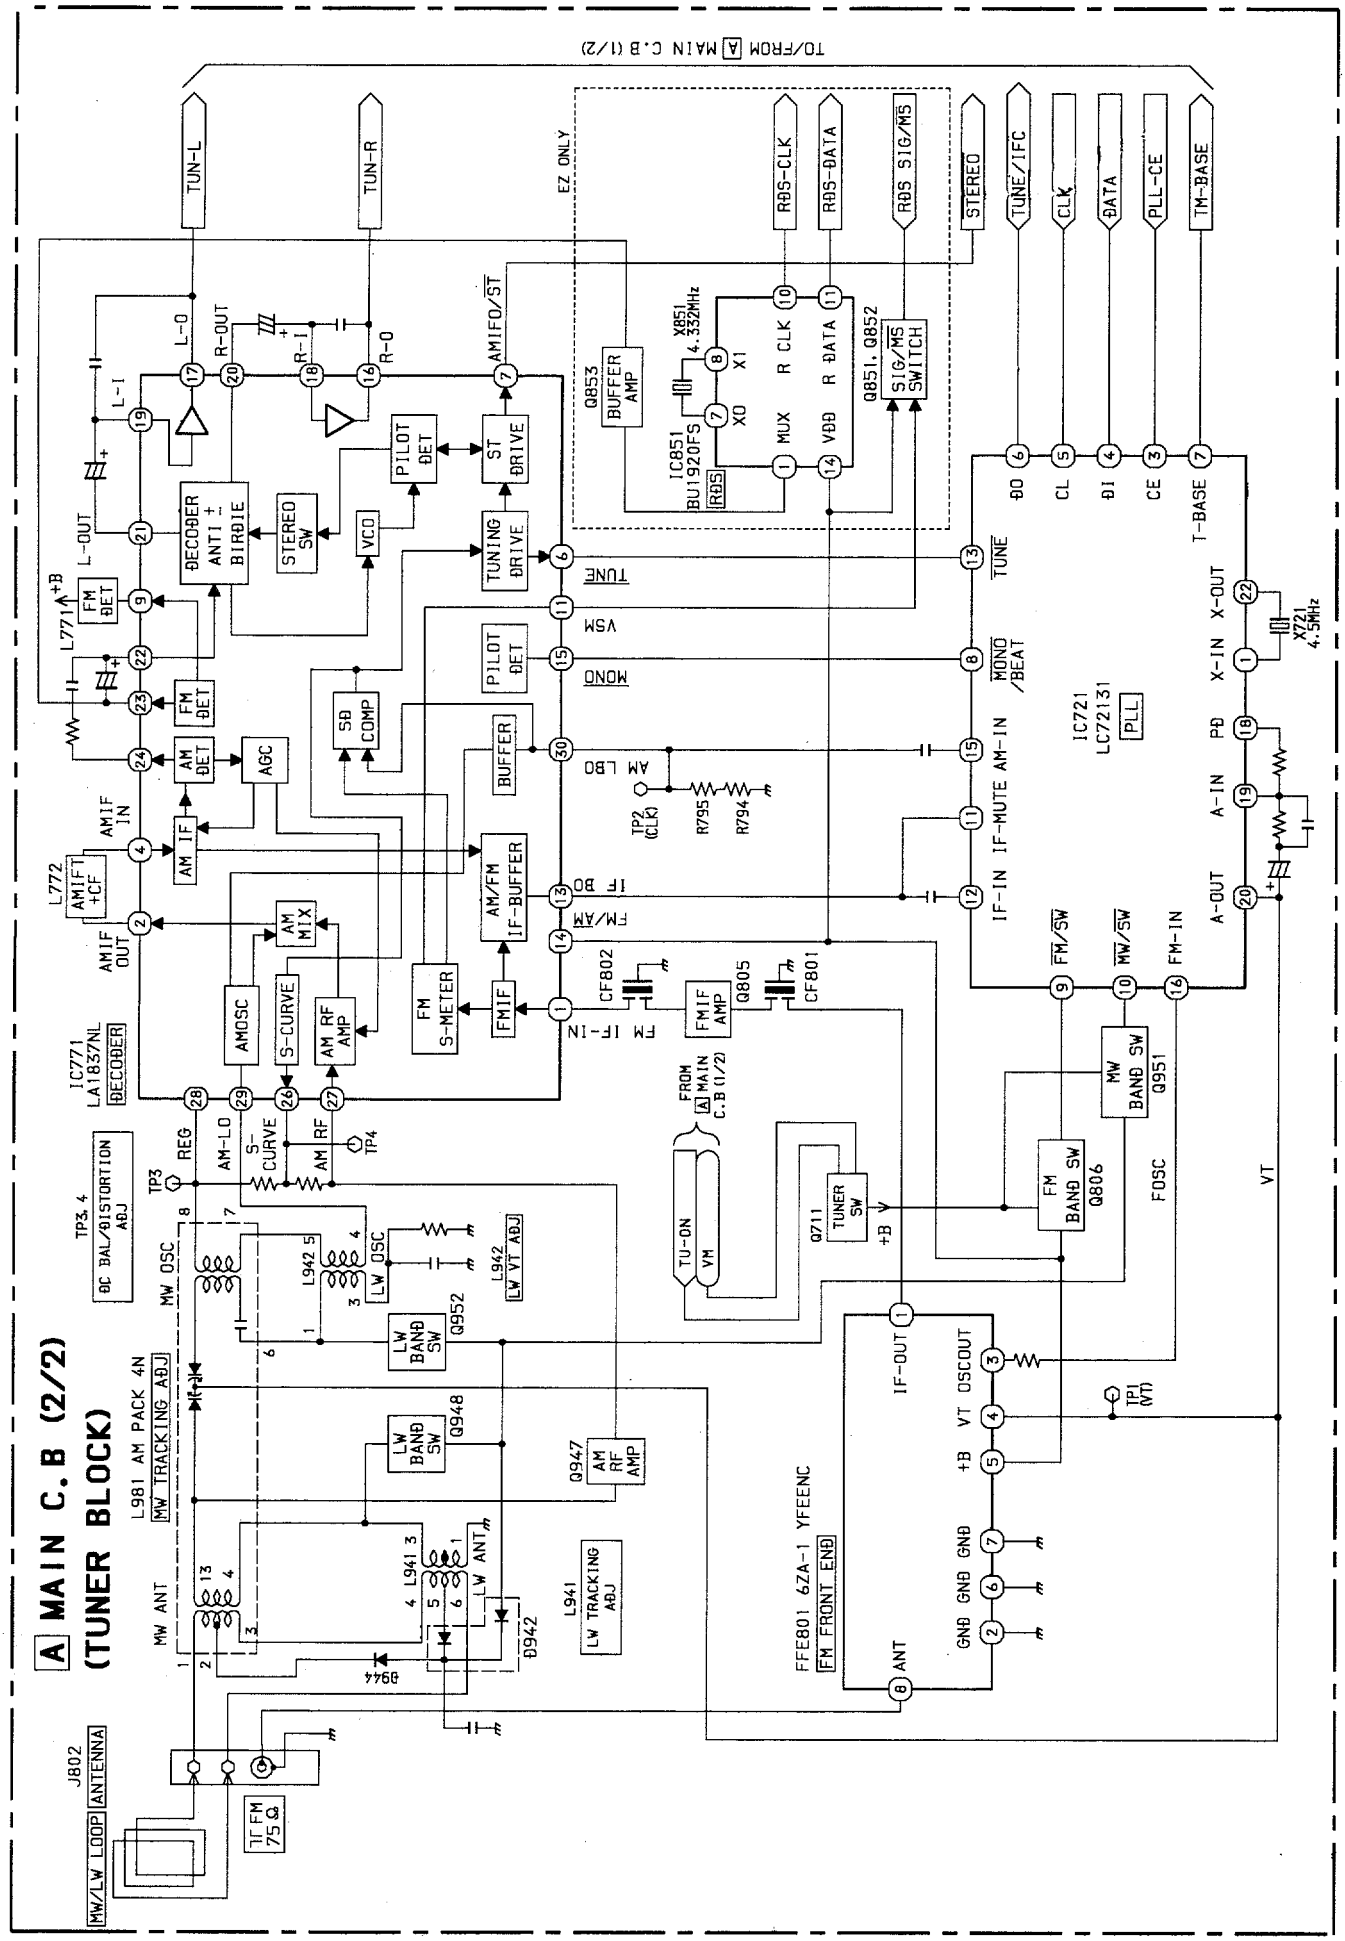

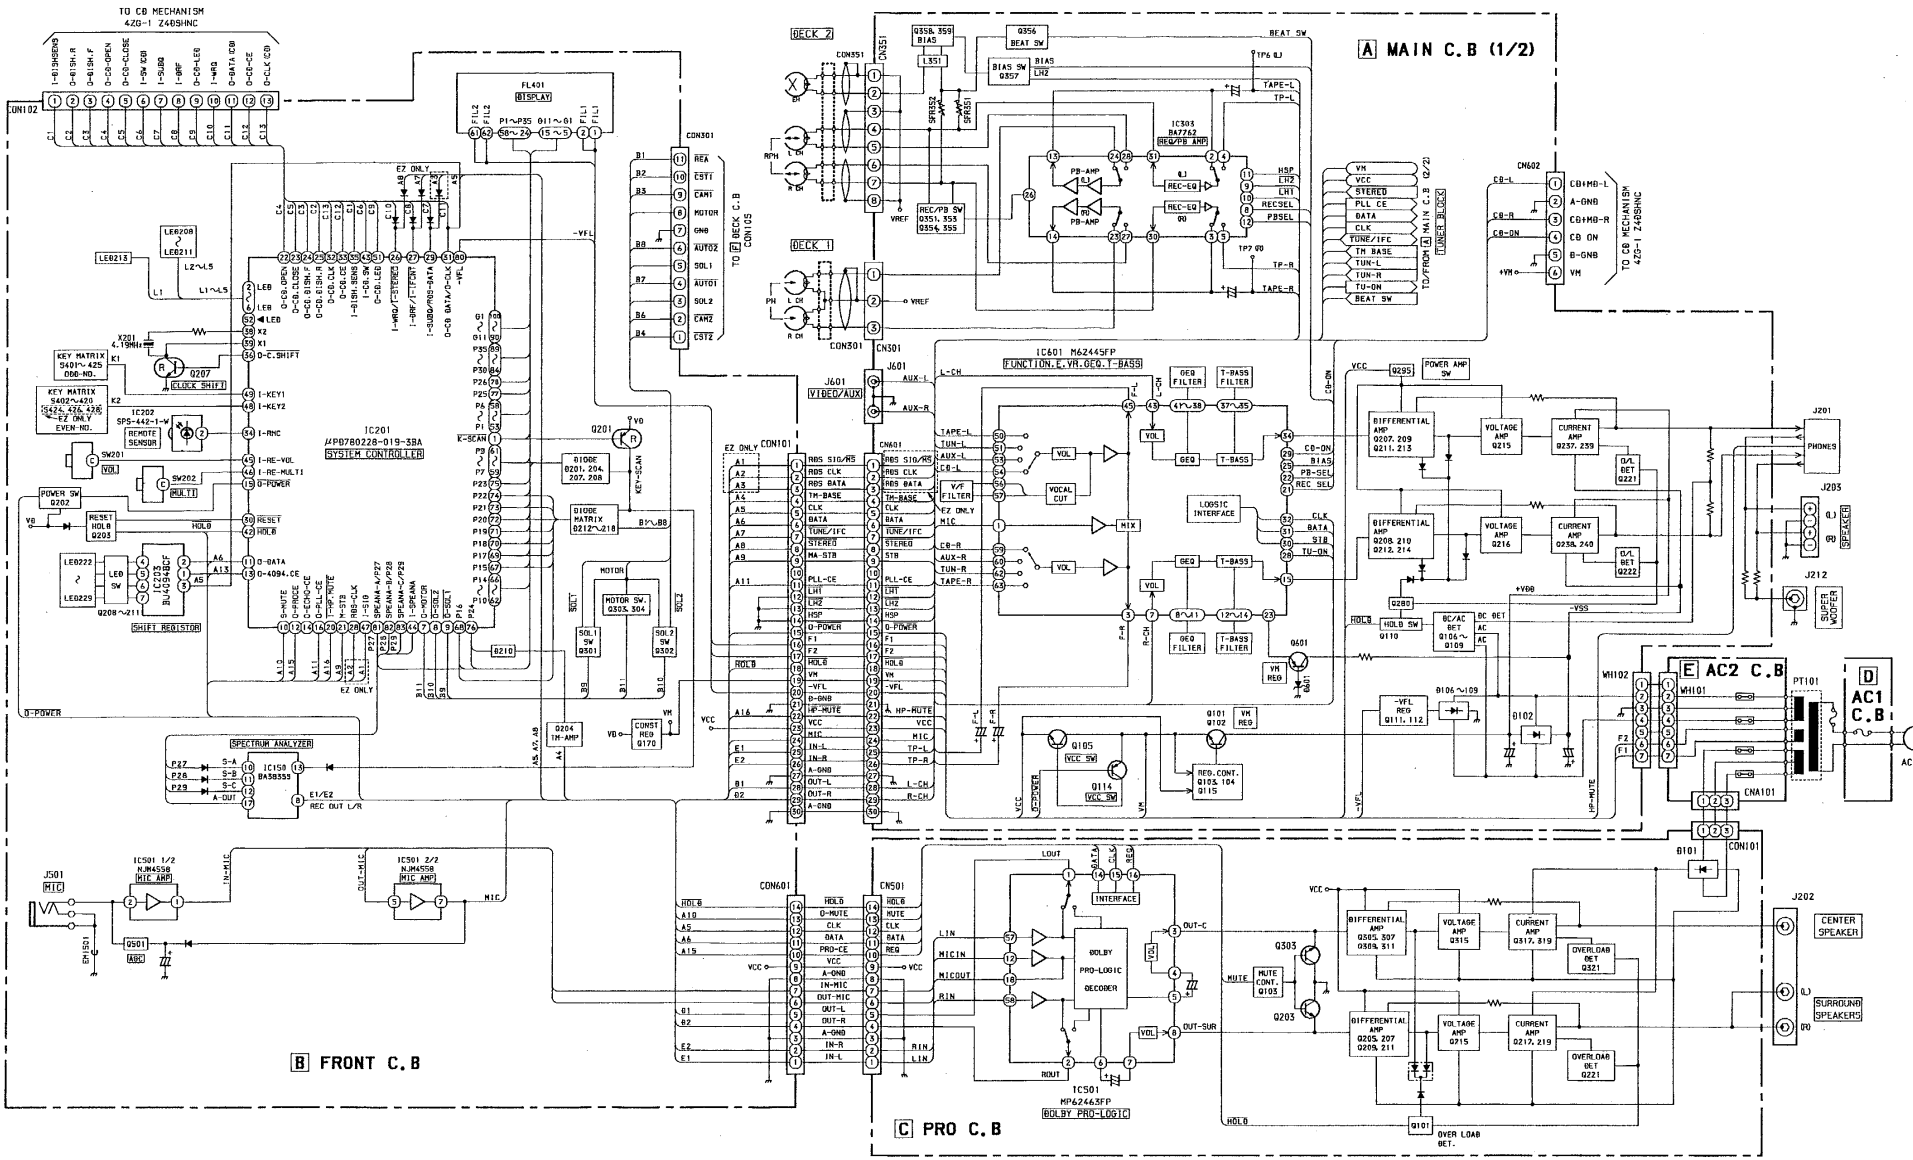
A MAIN C.B (1/2)
B FRONT C.B
C PRO C.B
D AC1 C.B
E AC2 C.B
TO CD MECHANISM 4ZG-1 Z40SHNC
DECK 2
DECK 1
IC601 M62445FP FUNCTION,E.VR,GEQ,T-BASS
IC201 μPD780228-019-3BA SYSTEM CONTROLLER
IC202 SPS-442-1-W REMOTE SENSOR
IC203 BU4094BCF
IC501 MP62445FP DOLBY PRO-LOGIC
IC501 1/2 NJM4558 MIC AMP
IC501 2/2 NJM4558 MIC AMP
IC301 BA7762 REC/PB AMP
IC159 BA58558
FL401 DISPLAY
DOLBY PRO-LOGIC DECODER
INTERFACE
SPECTRUM ANALYZER
SHIFT REGISTOR
CENTER SPEAKER
SURROUND SPEAKERS
SUPER WOOFER
PHONES
SPEAKER
AC 230V 50Hz

SCHEMATIC DIAGRAM – 1 (MAIN 1 / 2)

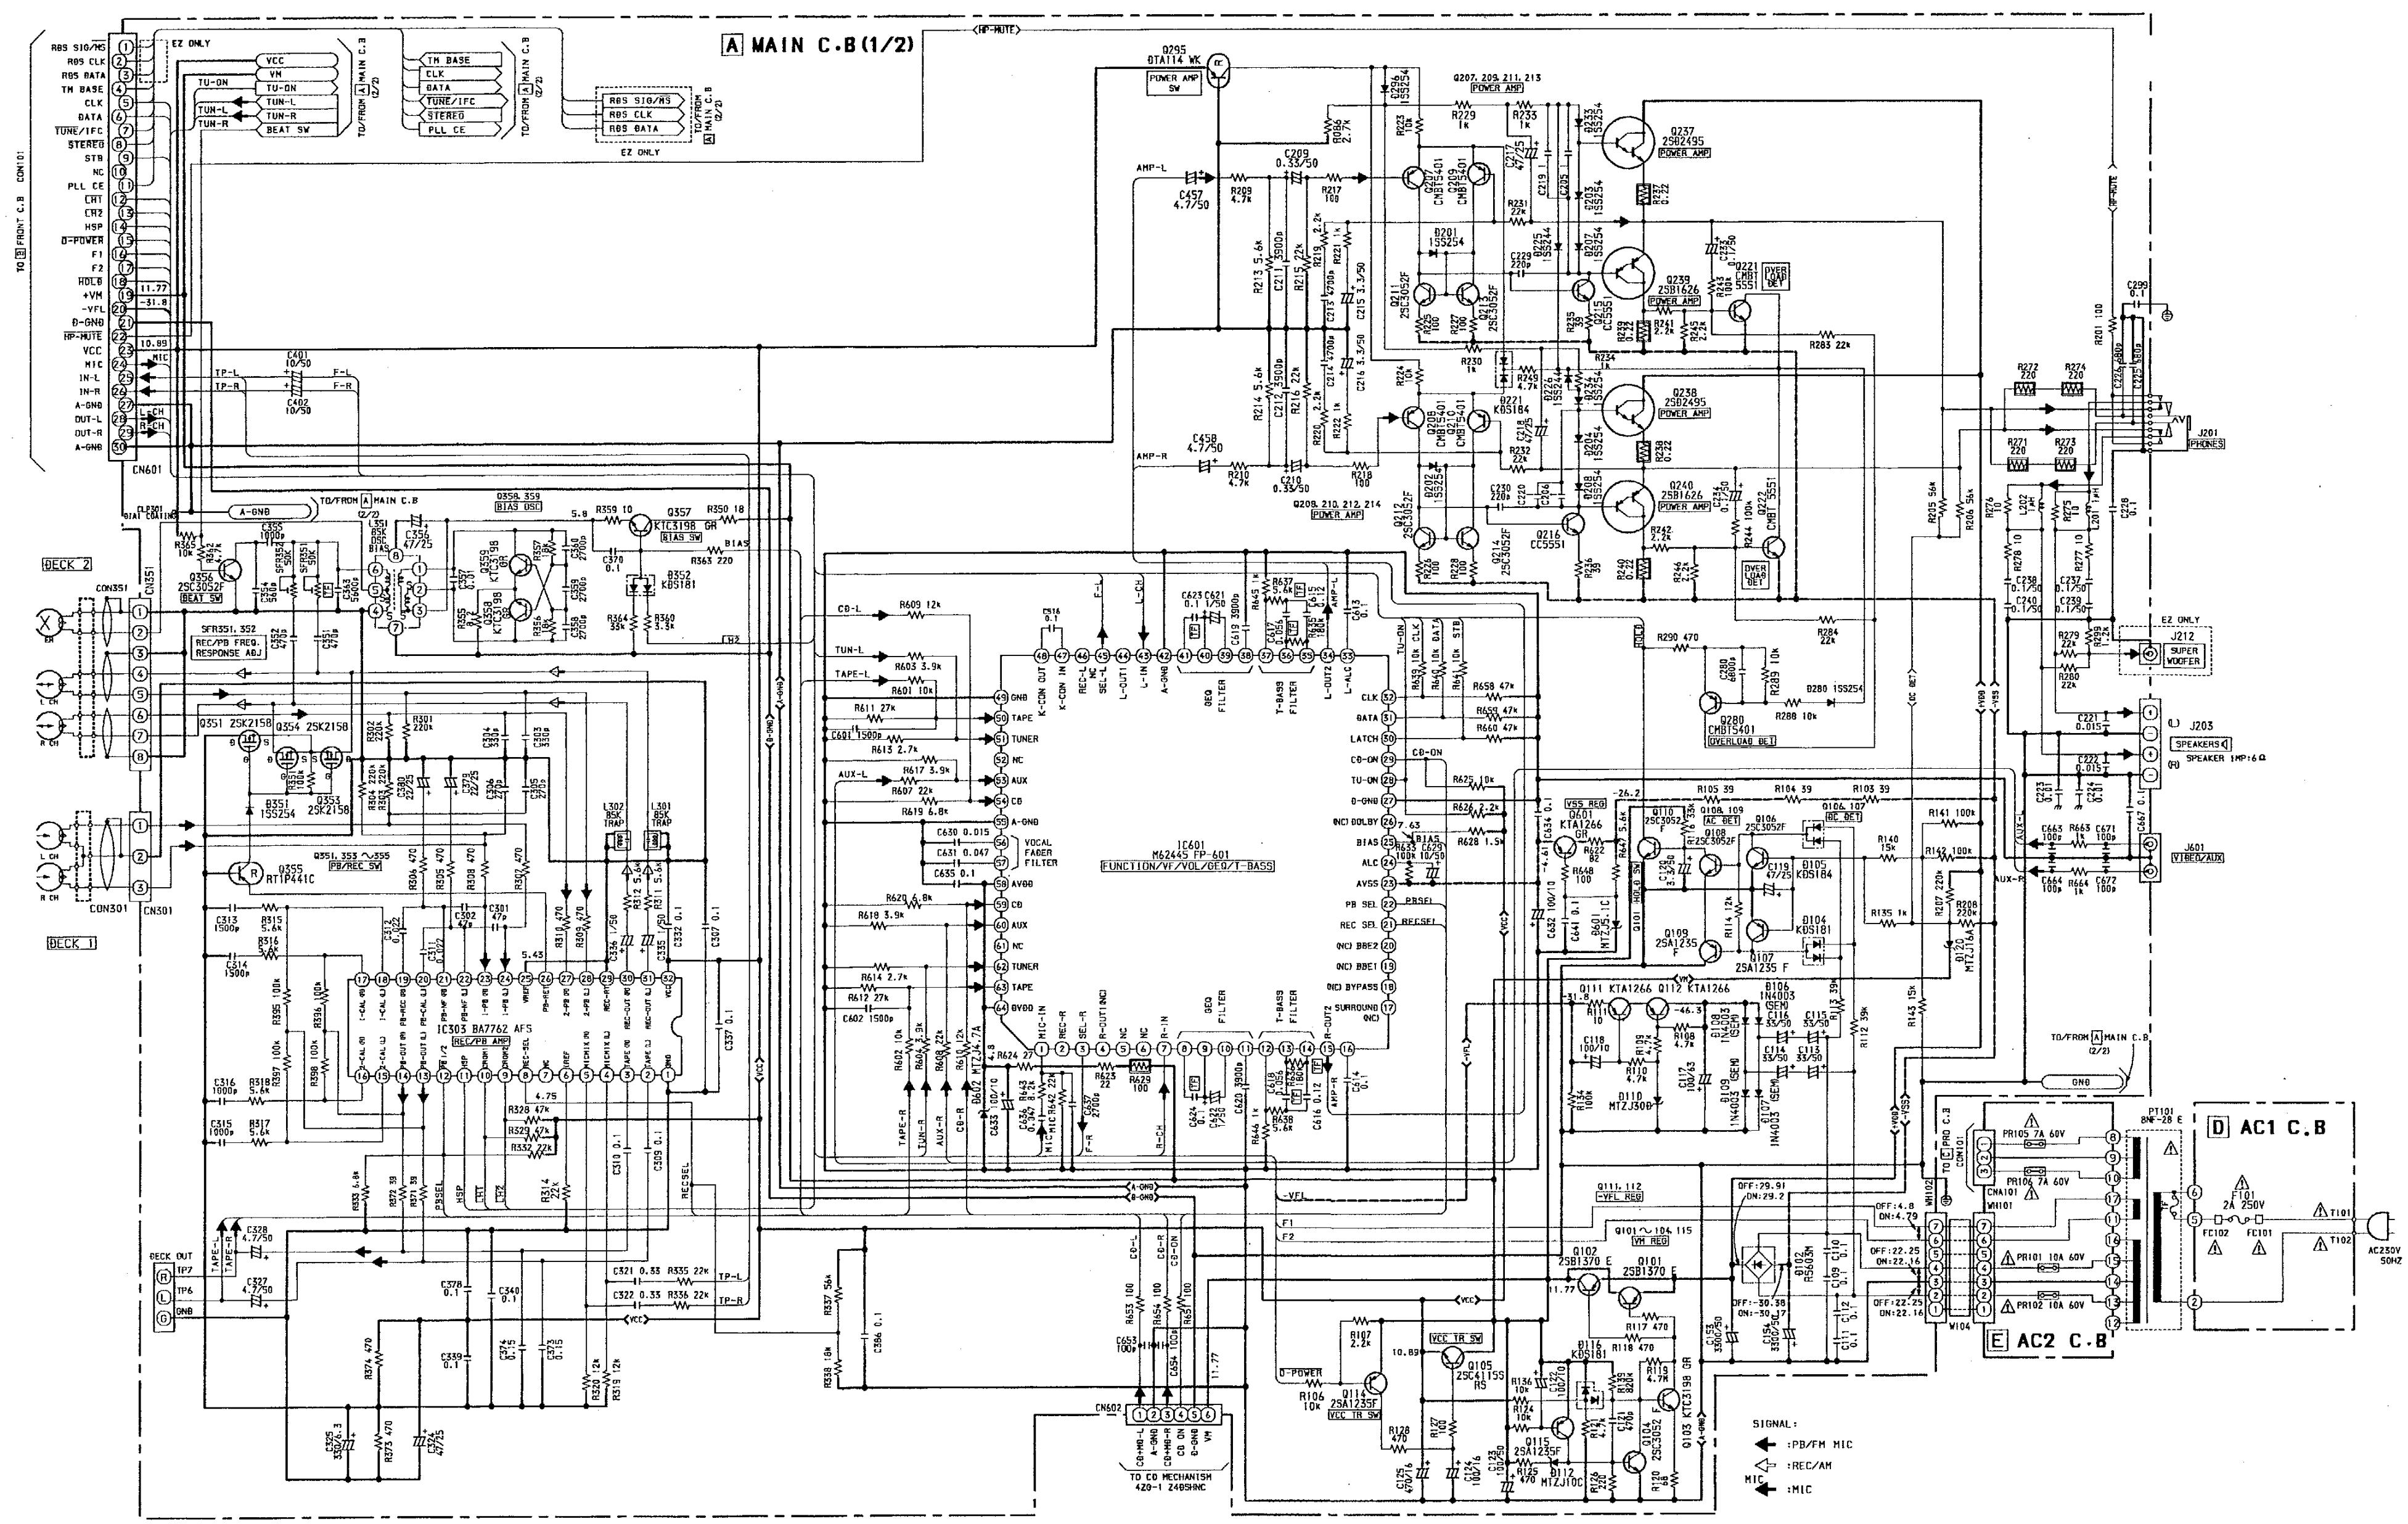

WIRING – 1 (MAIN)

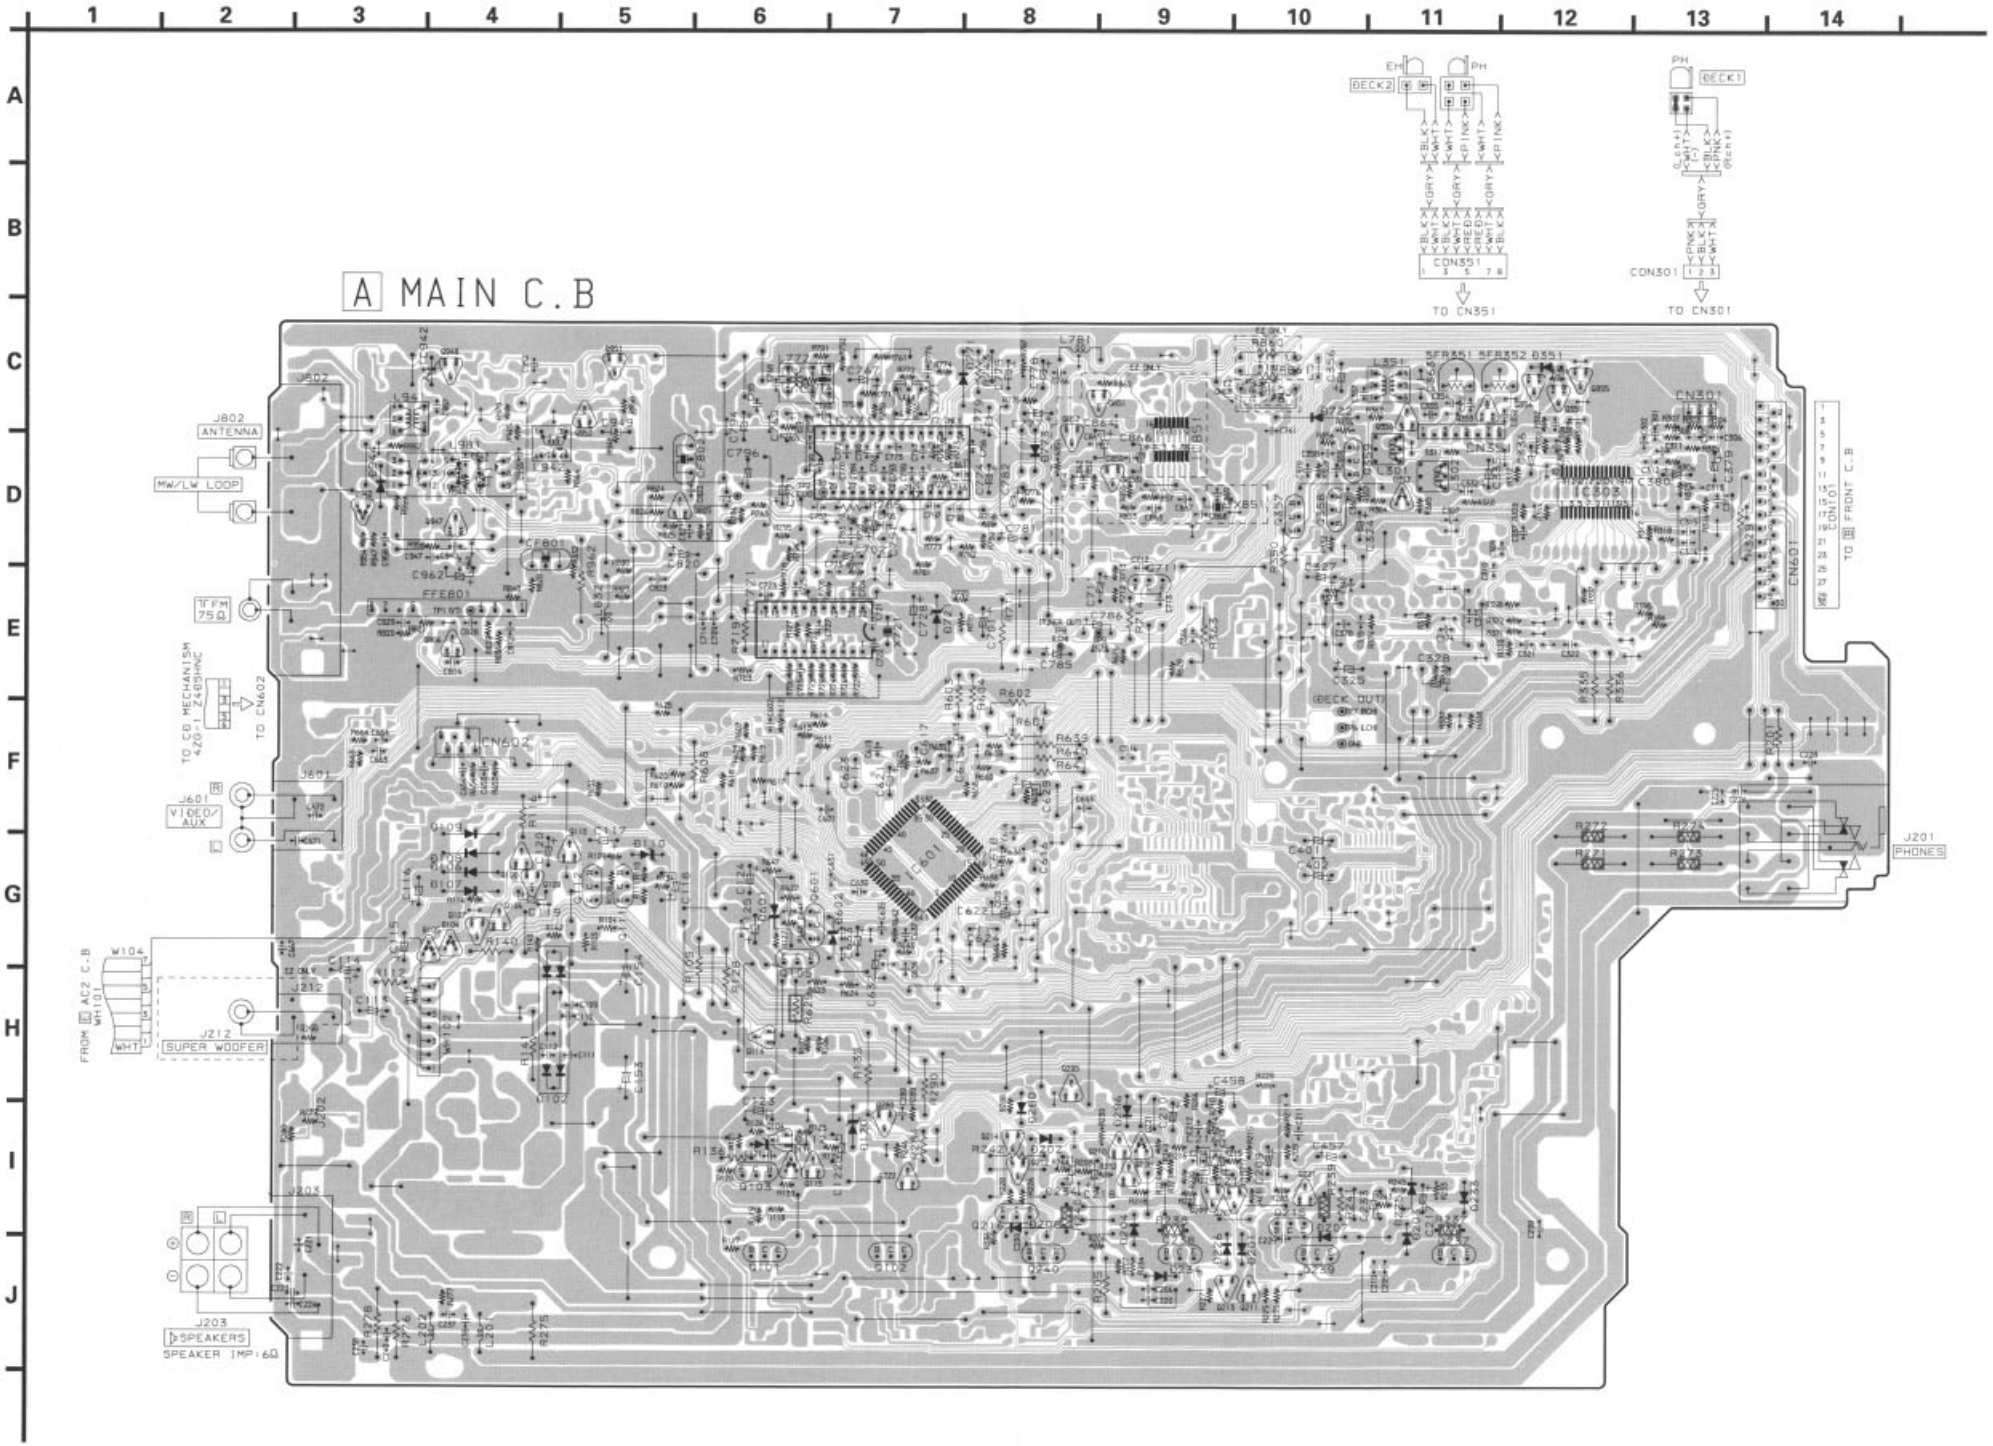

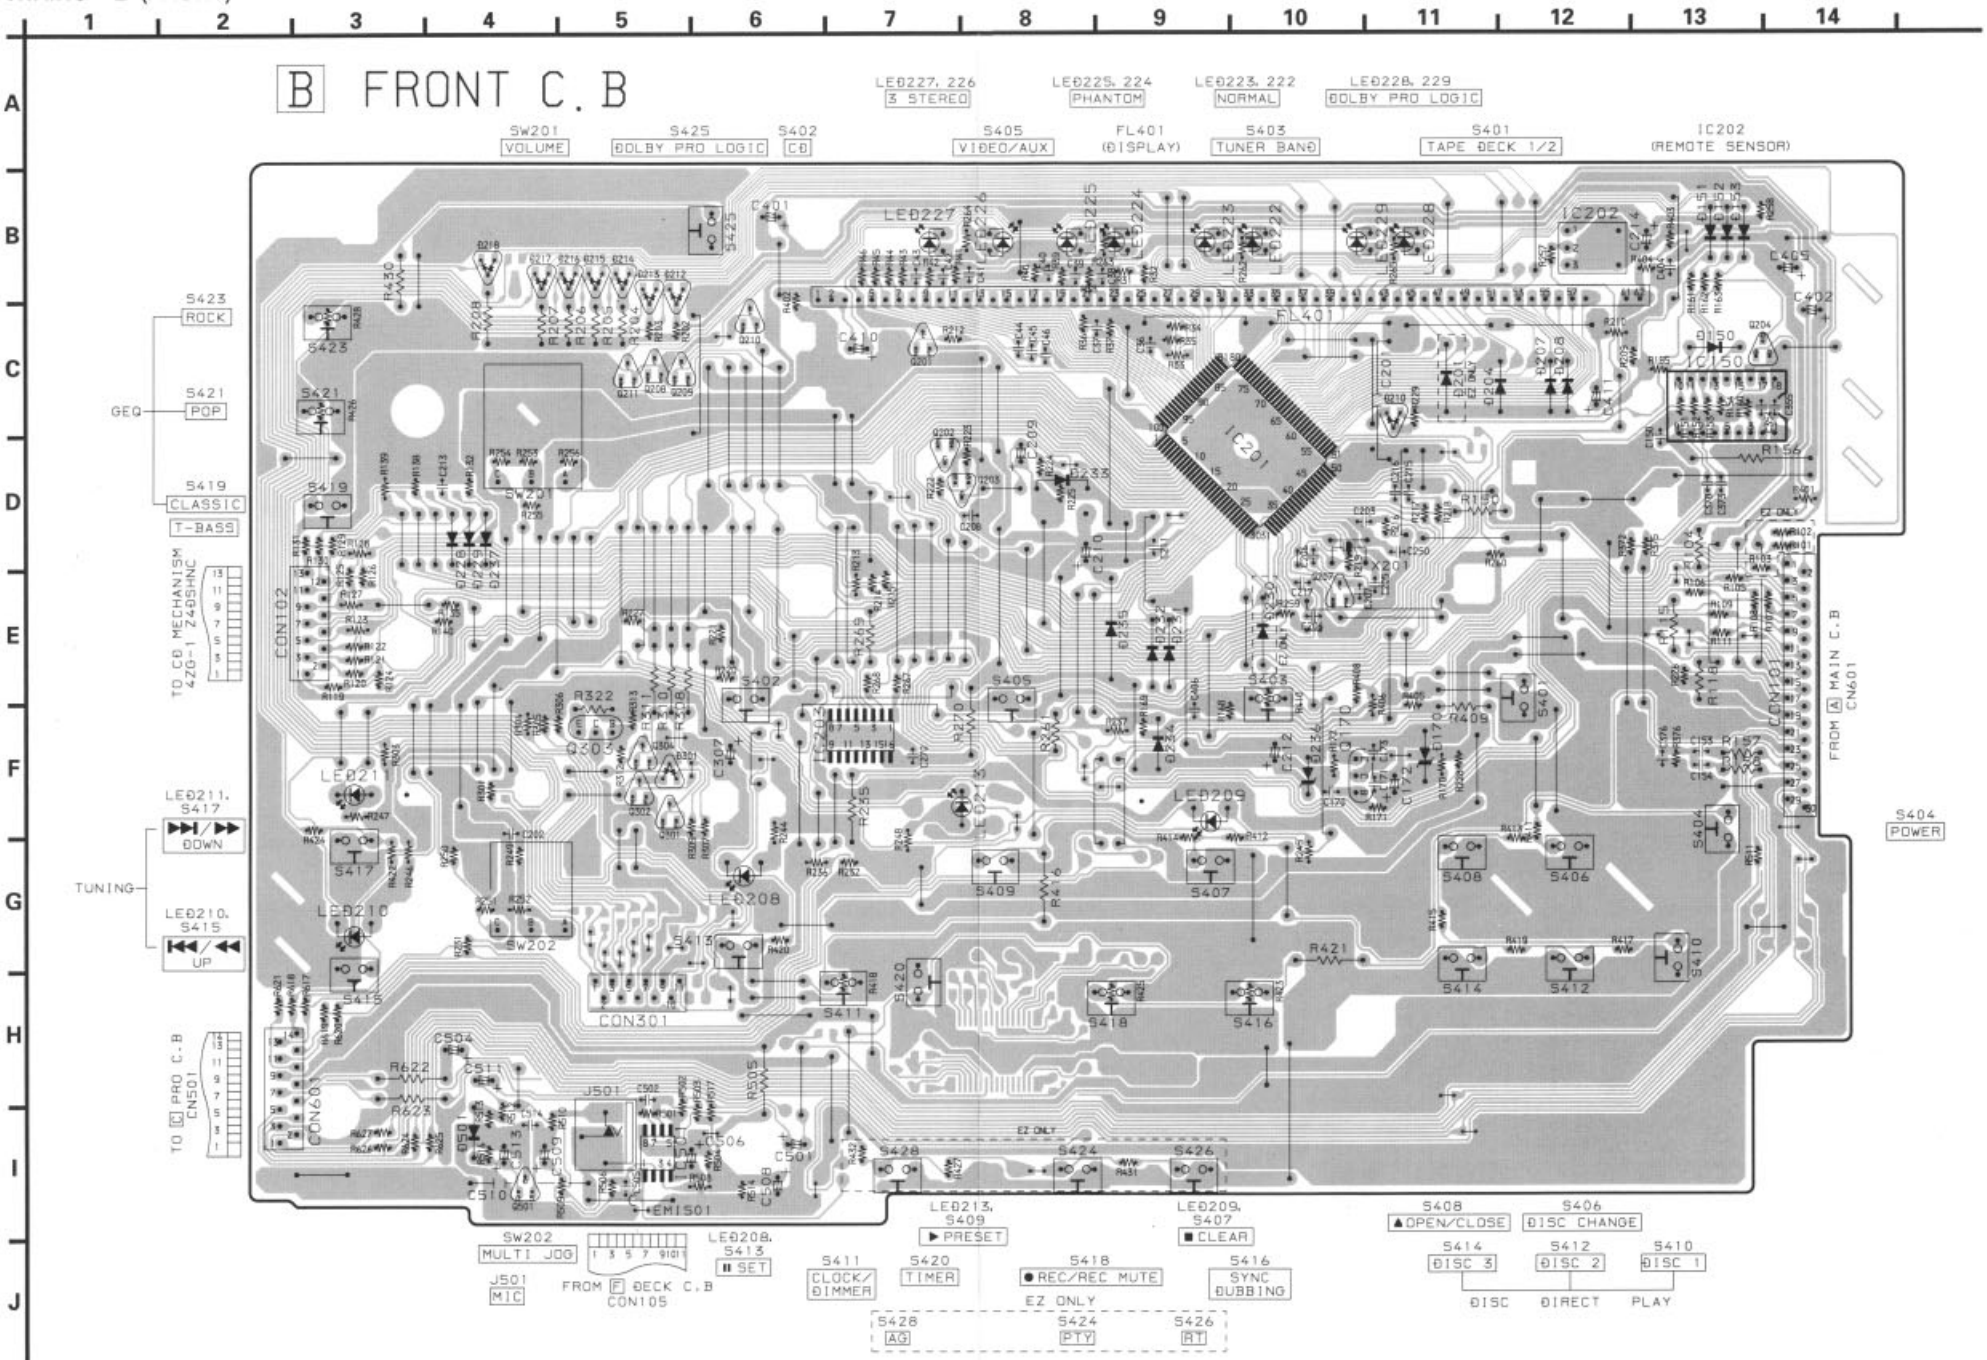
B FRONT C.B
LED227, 226
3 STEREO
LED225, 224
PHANTOM
LED223, 222
NORMAL
LED228, 229
DOLBY PRO LOGIC
SW201
VOLUME
S425
DOLBY PRO LOGIC
S402
CD
S405
VIDEO/AUX
FL401
(DISPLAY)
S403
TUNER BAND
S401
TAPE DECK 1/2
IC202
(REMOTE SENSOR)
S423
ROCK
S421
POP
S419
CLASSIC
T-BASS
GEQ
TO CD MECHANISM 420-1 Z40SHNC
CON102
FROM A MAIN C.B CN601
CON101
S404
POWER
LED211, S417
DOWN
LED210, S415
UP
TUNING
CON301
SW202
CON601
TO C PRO C.B CN501
J501
MIC
FROM F DECK C.B CON105
LED208, S413
SET
S411
CLOCK/ DIMMER
S420
TIMER
LED213, S409
PRESET
S418
REC/REC MUTE
LED209, S407
CLEAR
S416
SYNC DUBBING
EZ ONLY
S428
AG
S424
PTY
S426
RT
S408
OPEN/CLOSE
S406
DISC CHANGE
S414
DISC 3
S412
DISC 2
S410
DISC 1
DISC DIRECT PLAY

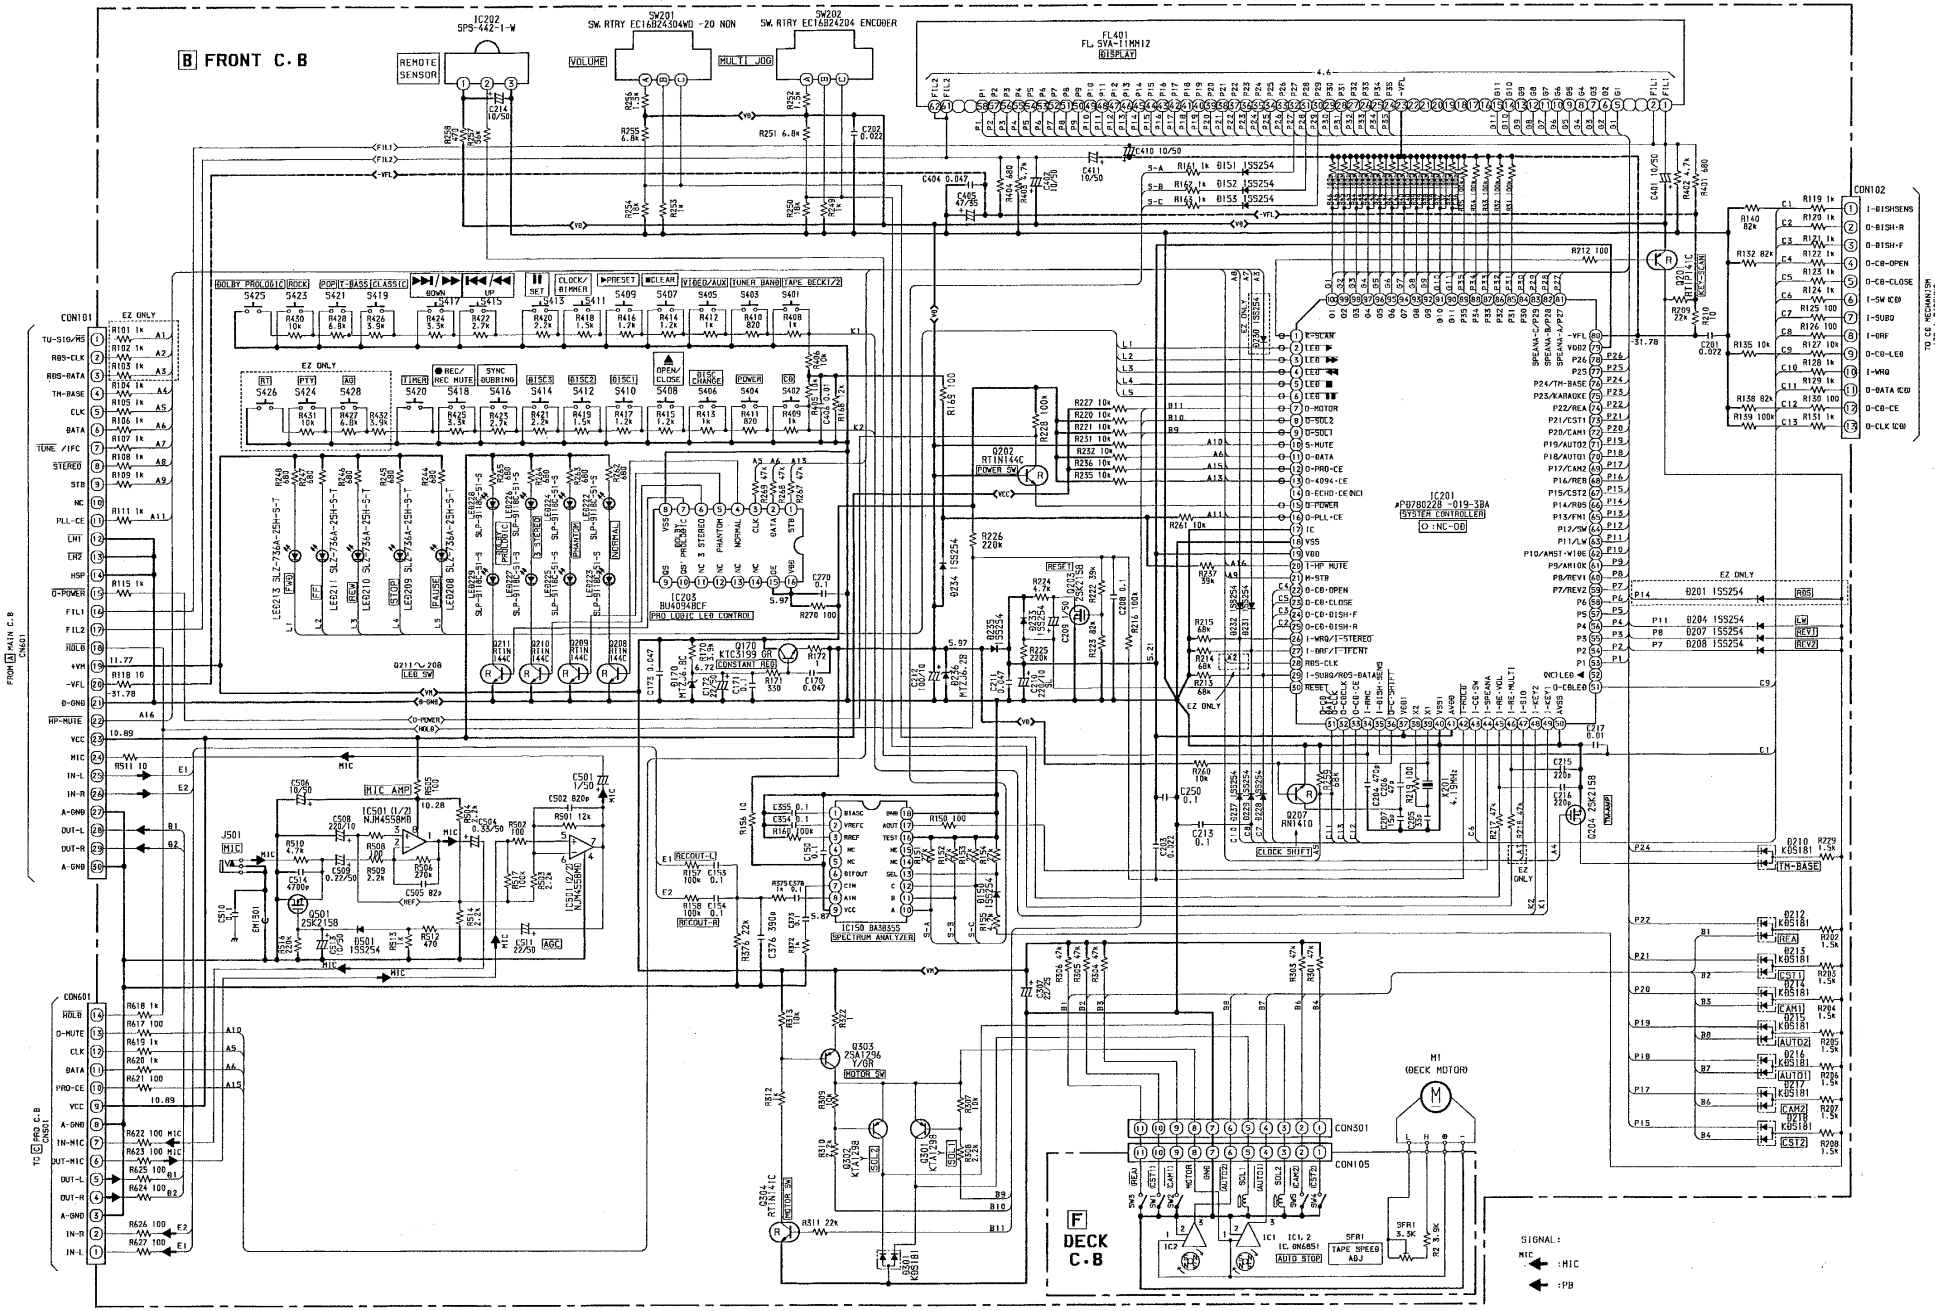
B FRONT C.B
REMOTE SENSOR
IC202 SPS-442-1-W
SW201 SW. RTRY EC16B24304W0 -20 NON
SW202 SW. RTRY EC16B24204 ENCODER
VOLUME
MULTI JOG
FL401 FL SVA-11MM12 DISPLAY
CON101
CON102
CON601
CON301
CON105
IC201 #P0780228 -019-3BA SYSTEM CONTROLLER
IC203 BU4094BCF PRO LOGIC LED CONTROL
IC150 BA3855S SPECTRUM ANALYZER
IC501 (1/2) NJM4558MD
IC501 (2/2) NJM4558MD
IC1, IC2 IC BA6851 AUTO STOP
M1 DECK MOTOR
F DECK C.B
MIC AMP
AUTO STOP
TAPE SPEED ADJ
SIGNAL:
MIC :MIC
:PB

IC BLOCK DIAGRAM – 1

IC, BA7762AFS

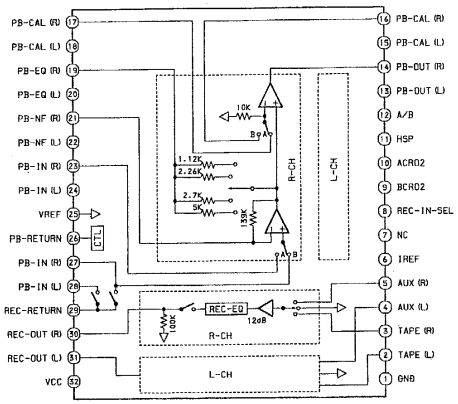

IC, M62445FP-601

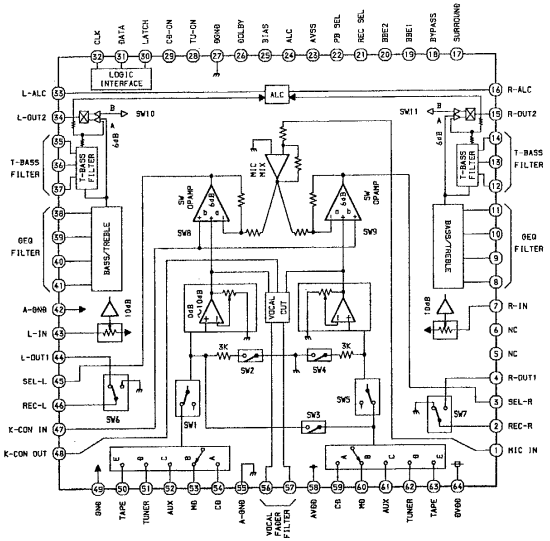

SCHEMATIC DIAGRAM – 3 (PRO)

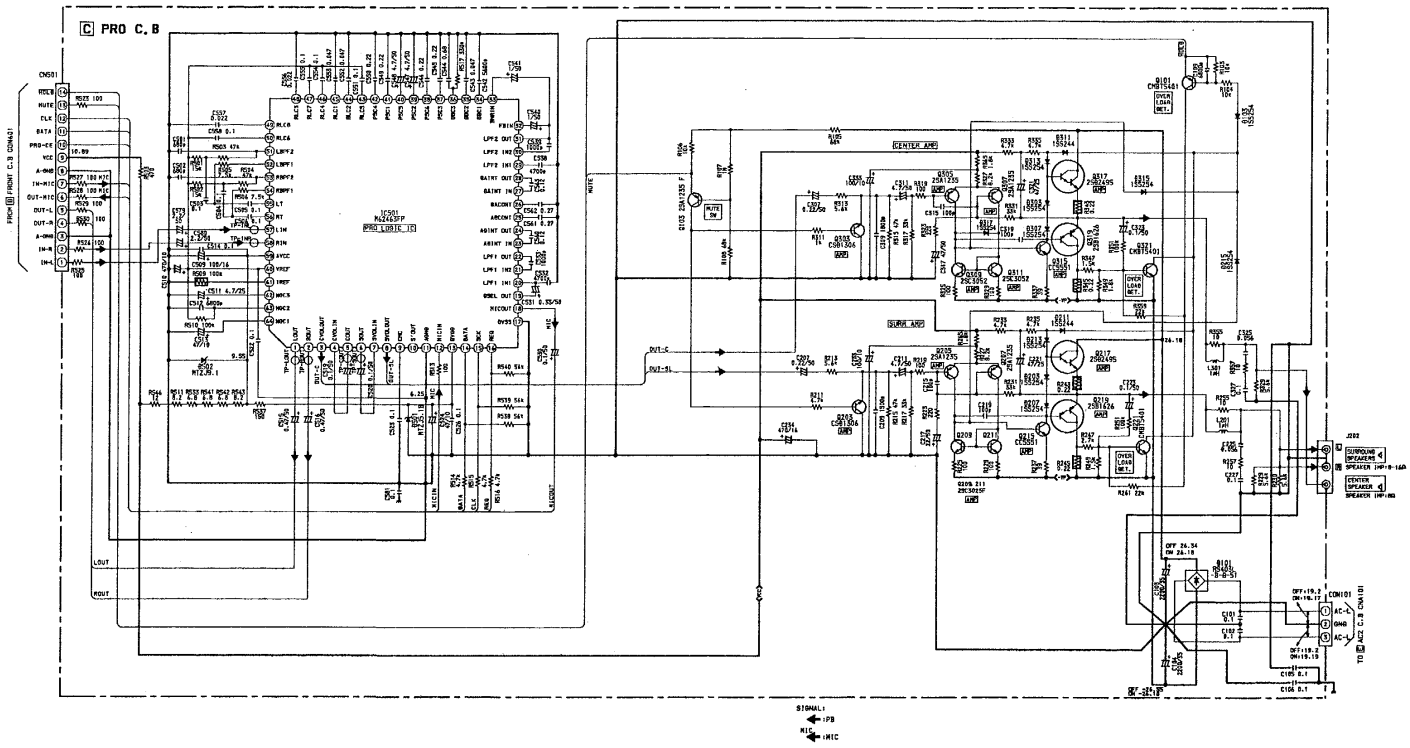

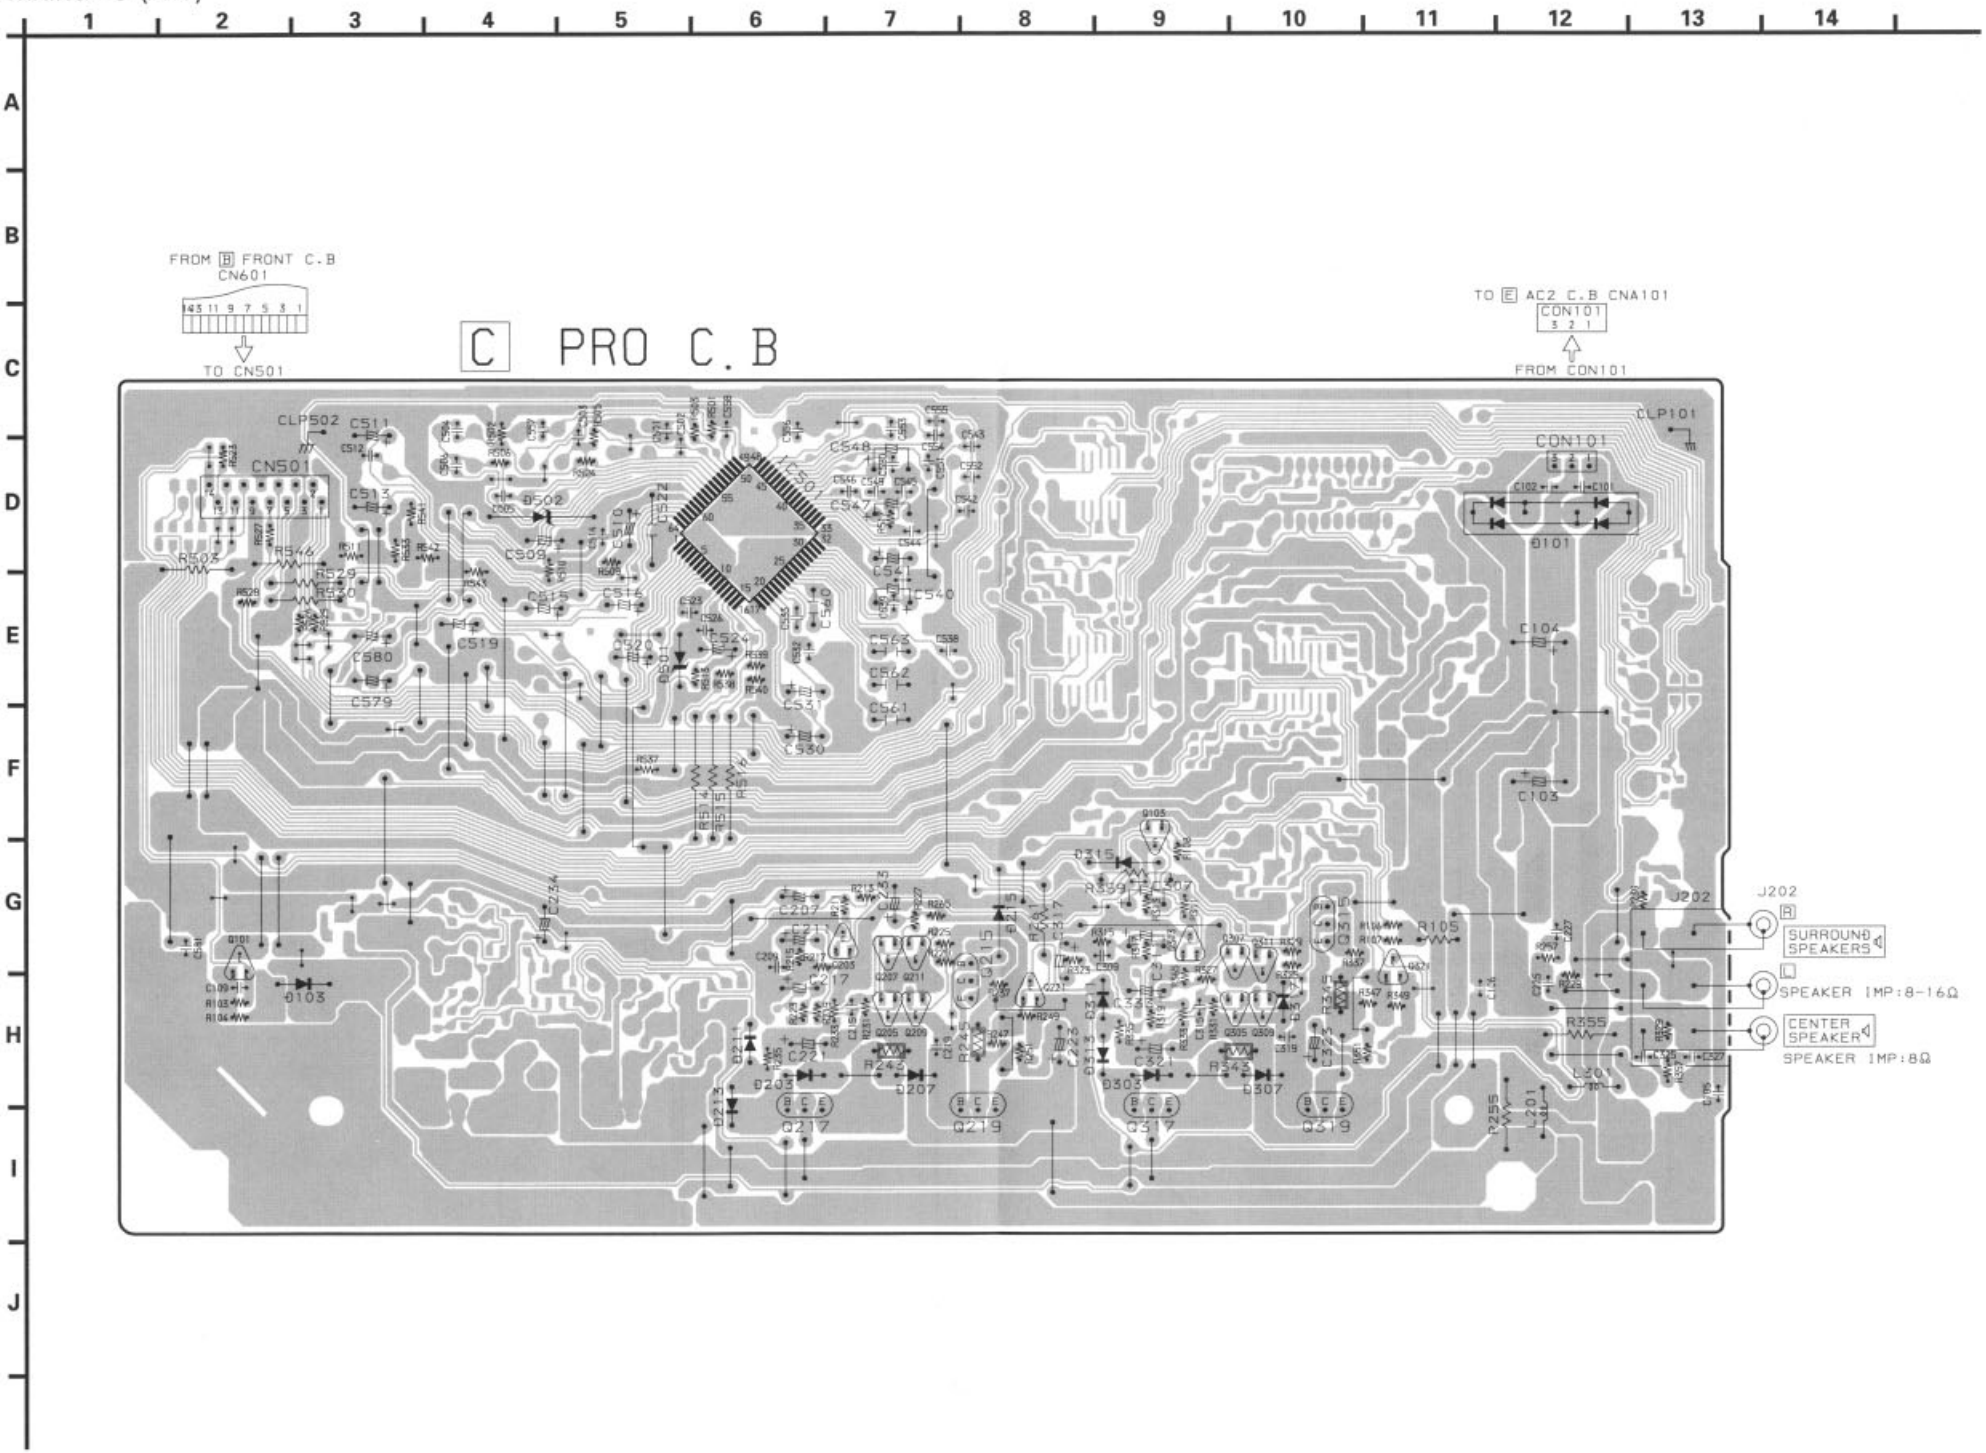
1 2 3 4 5 6 7 8 9 10 11 12 13 14
A B C D E F G H I J
FROM B FRONT C.B
CN601
14 13 11 9 7 5 3 1
TO CN501
C PRO C.B
TO E AC2 C.B CNA101
CON101
3 2 1
FROM CON101
CLP502
CN501
CLP101
CON101
J202
SURROUND SPEAKERS
SPEAKER IMP:8-16Ω
CENTER SPEAKER
SPEAKER IMP:8Ω

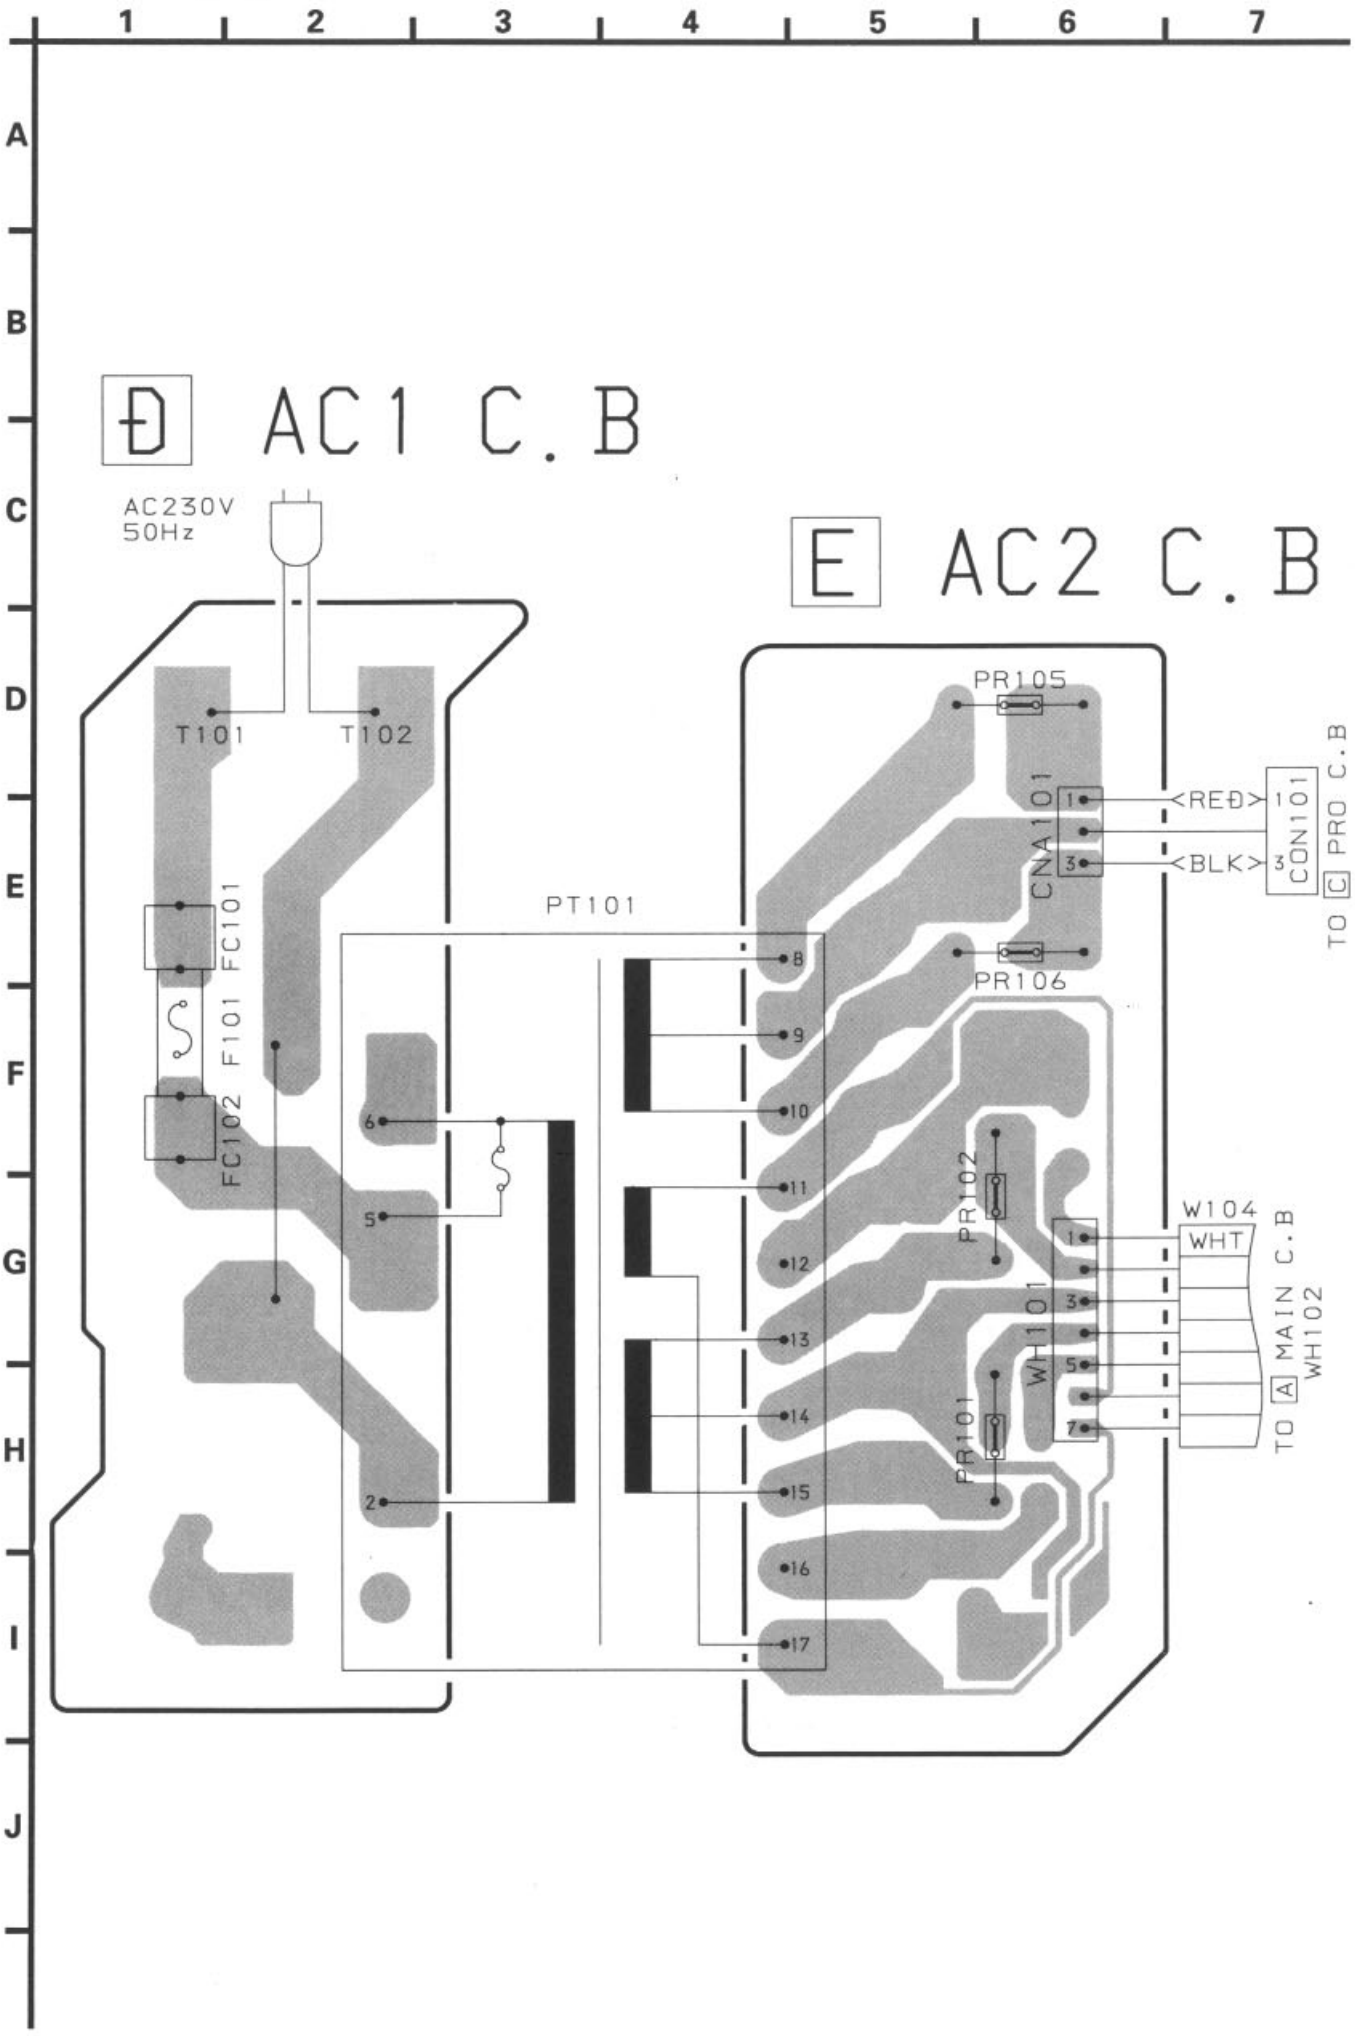
1
2
3
4
5
6
7
A
B
C
D
E
F
G
H
I
J
Đ AC1 C.B
AC230V
50Hz
T101
T102
FC101
F101
FC102
PT101
E AC2 C.B
PR105
CNA101
RED
BLK
CON101
TO C PRO C.B
PR106
PR102
PR101
WH101
W104
WHT
TO A MAIN C.B
WH102

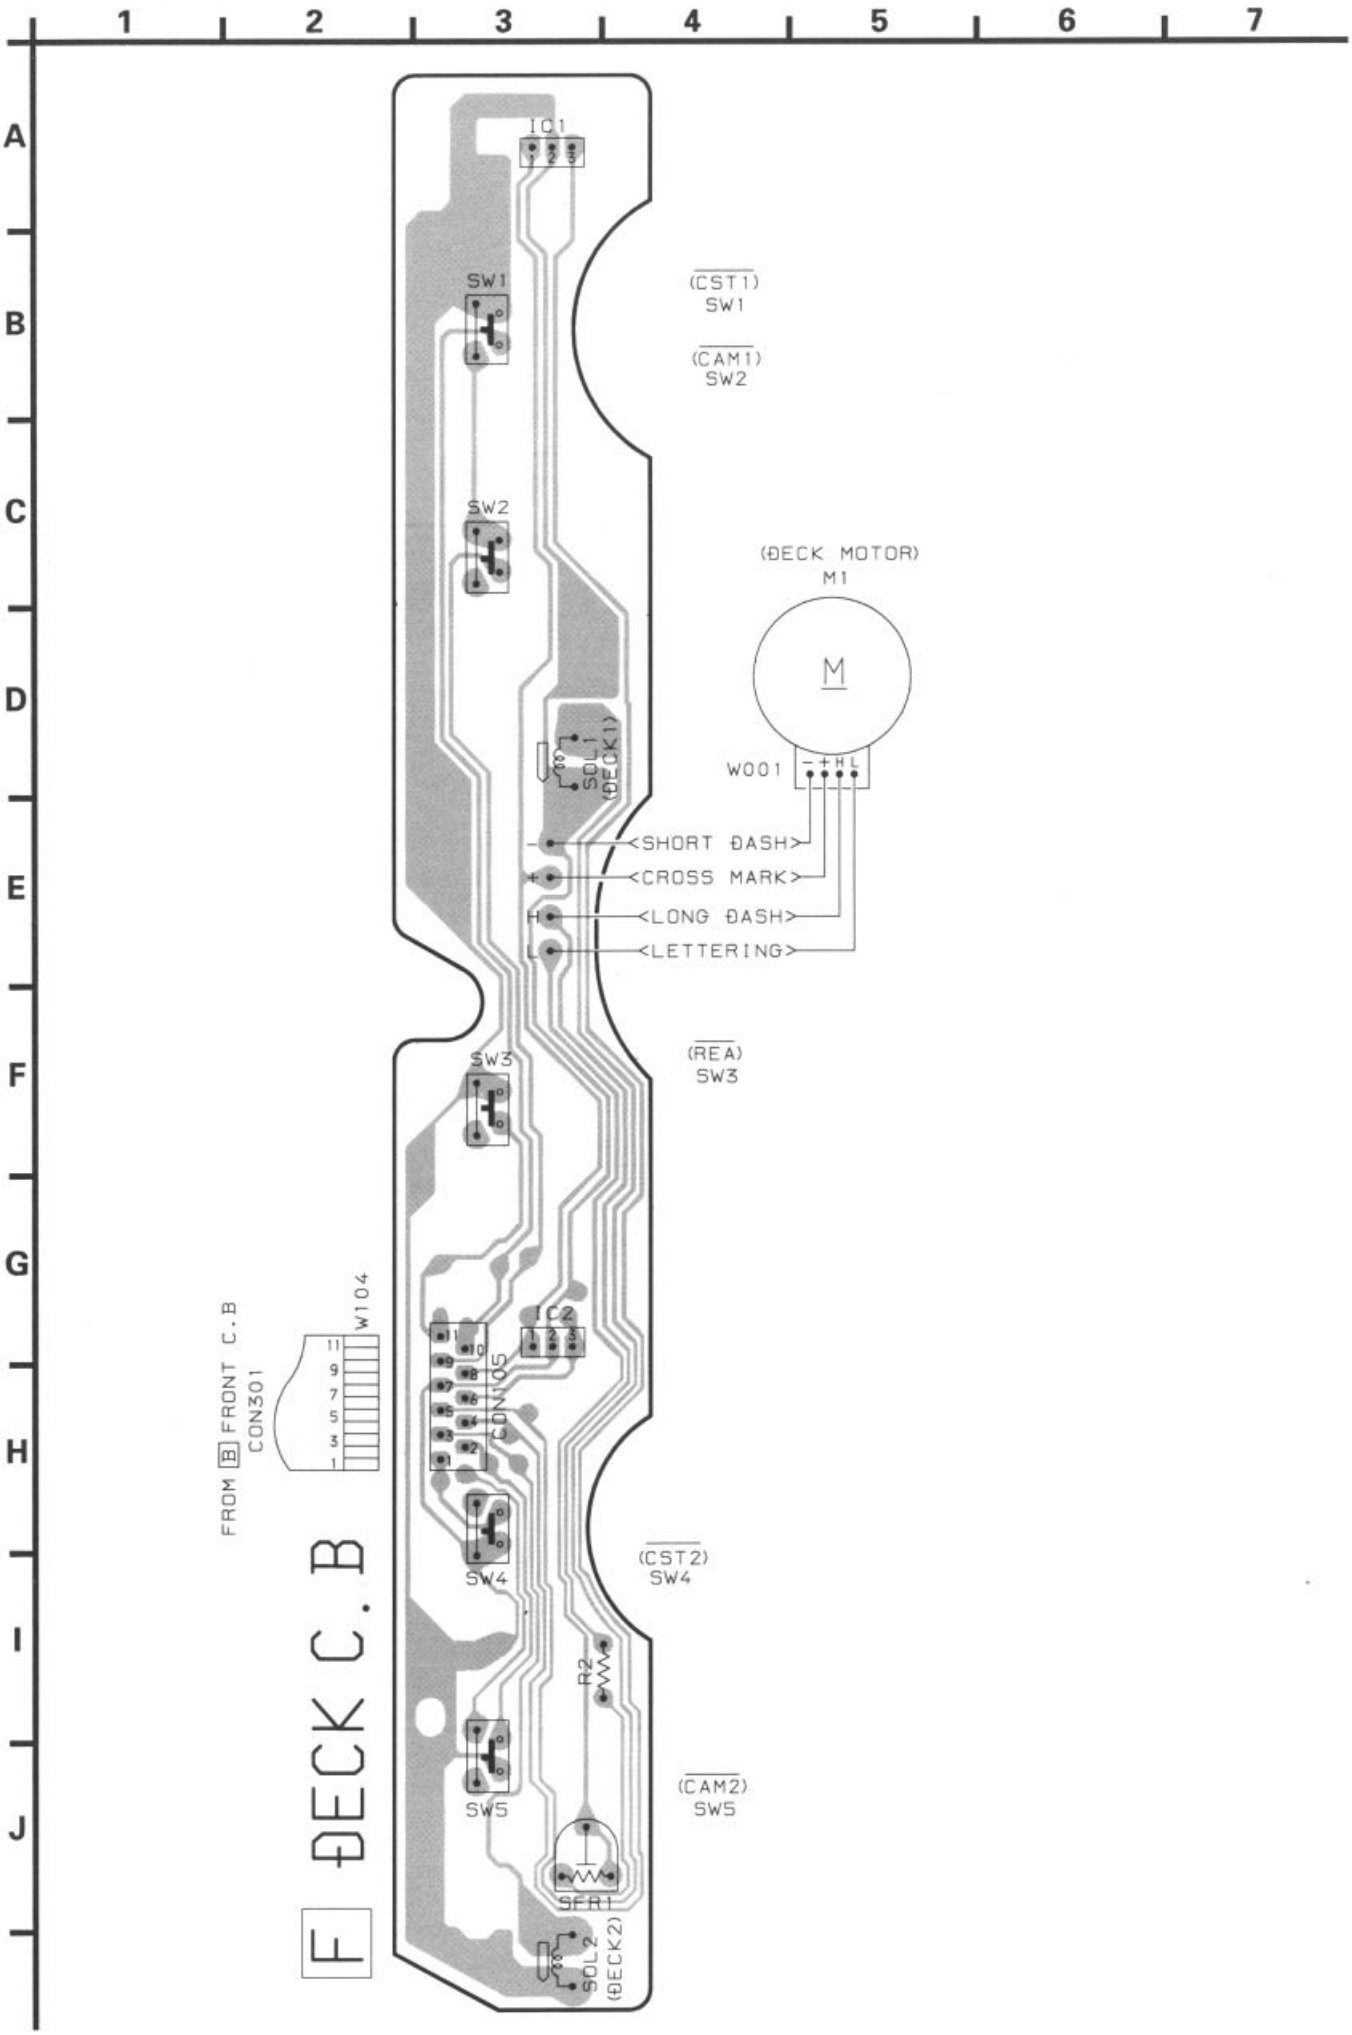
1
2
3
4
5
6
7
A
B
C
D
E
F
G
H
I
J
IC1
SW1
(CST1)
SW1
(CAM1)
SW2
SW2
(DECK MOTOR)
M1
M
SOL1
(DECK1)
W001
- + H L
<SHORT DASH>
<CROSS MARK>
<LONG DASH>
<LETTERING>
SW3
(REA)
SW3
FROM B FRONT C.B
CON301
W104
11
9
7
5
3
1
IC2
CON105
SW4
(CST2)
SW4
R2
SW5
(CAM2)
SW5
SEAT
SOL2
(DECK2)
F DECK C.B

SCHEMATIC DIAGRAM – 4 (MAIN 2 / 2)

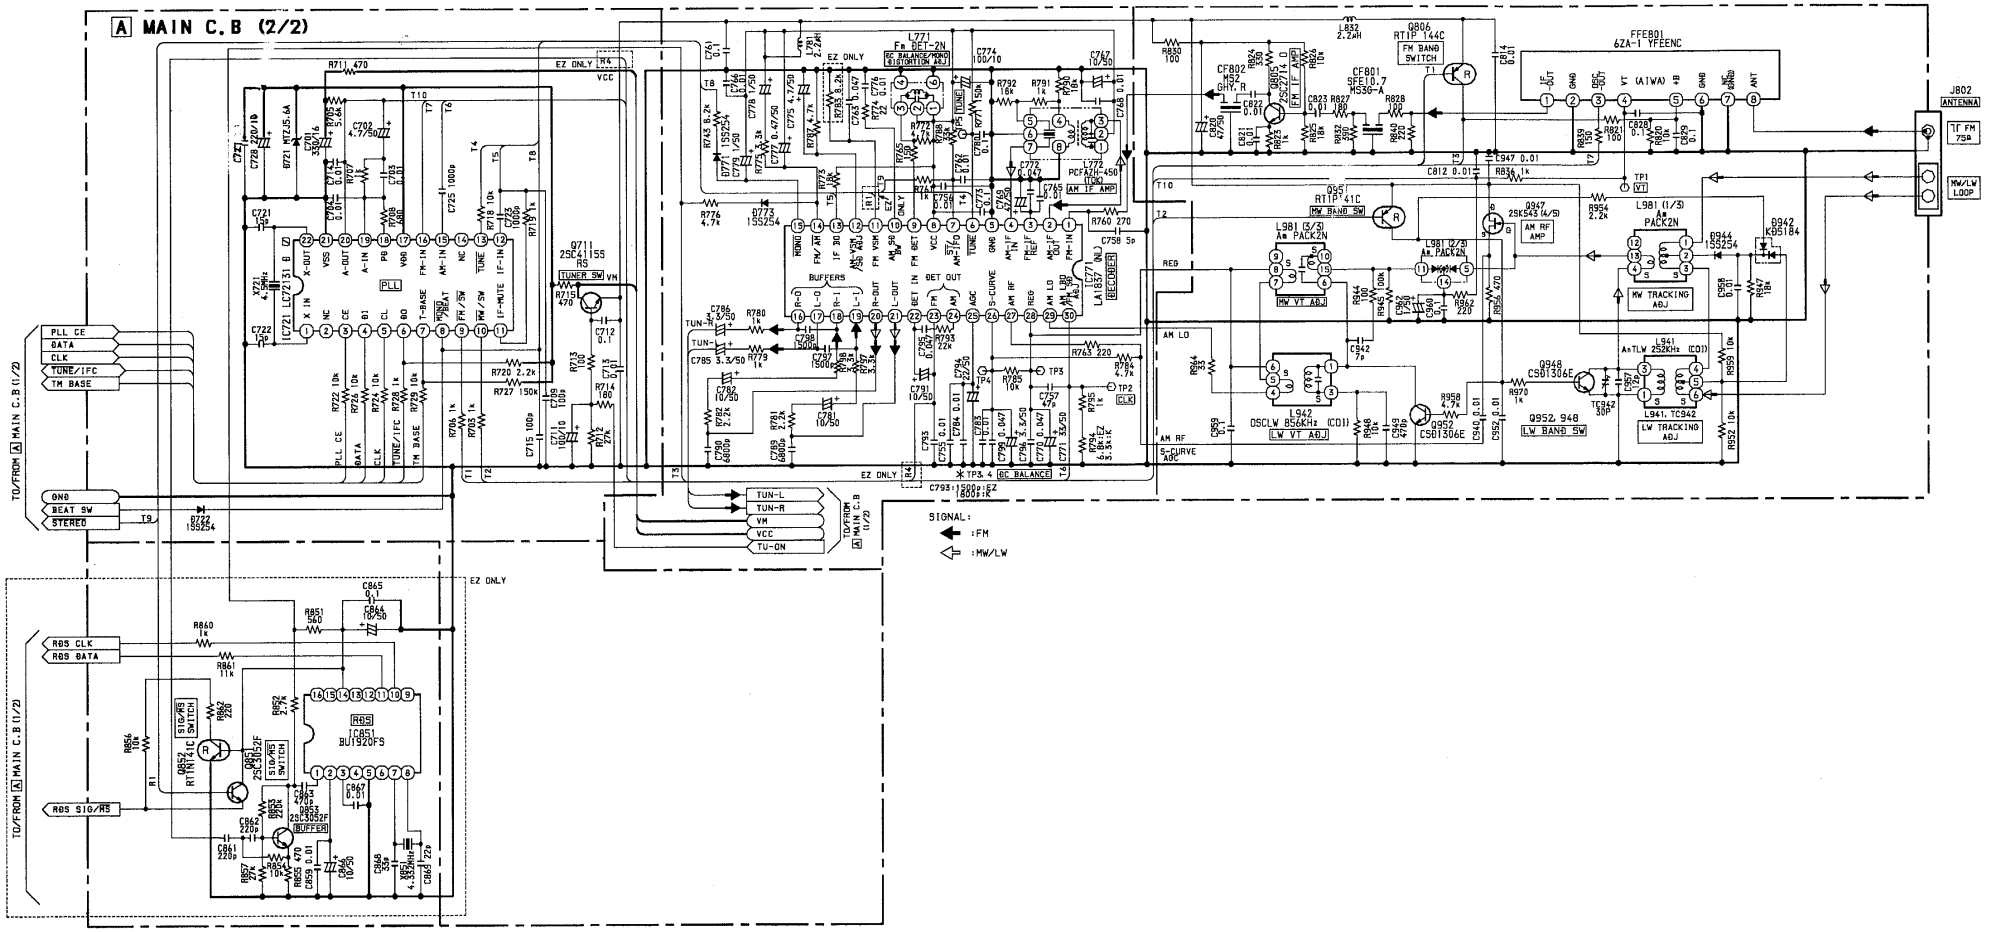

IC BLOCK DIAGRAM – 2

IC, LC72131D

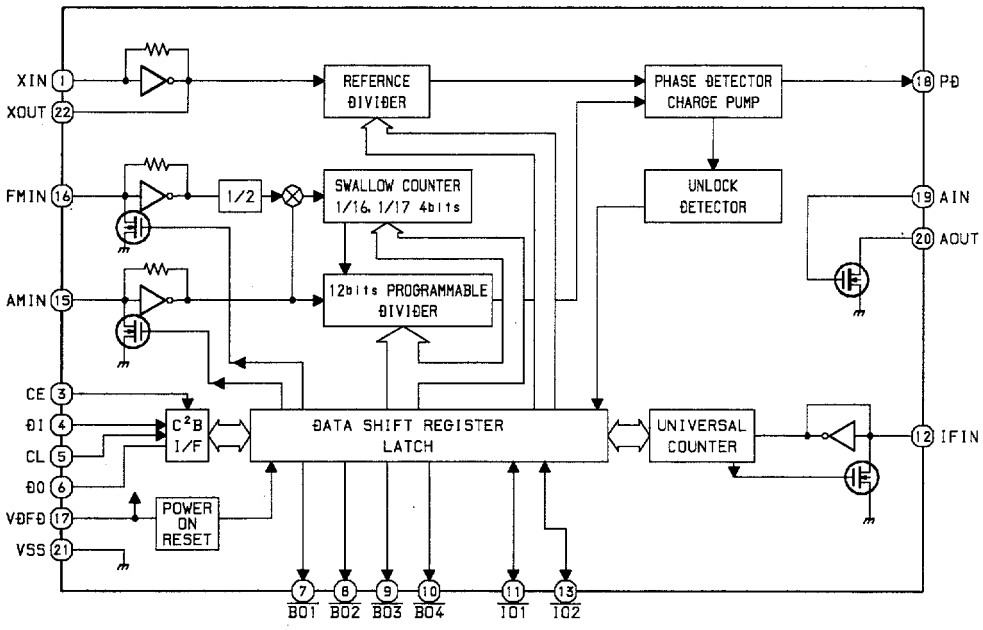

IC, LA1837NL

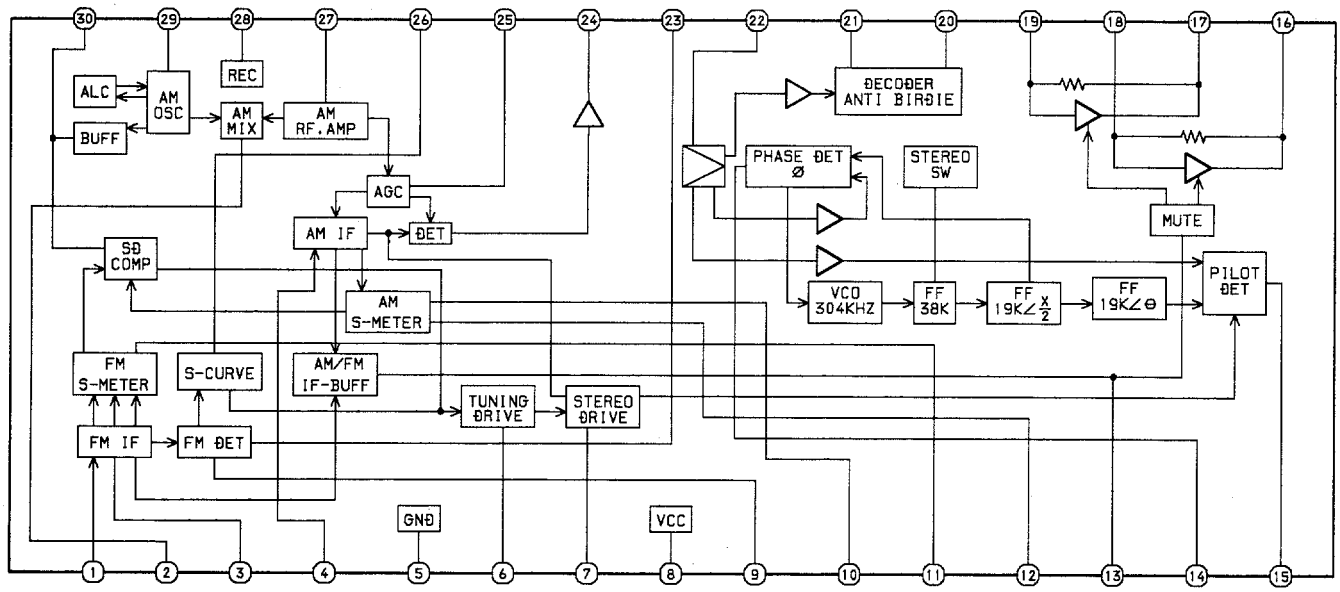

IC, BA3835S

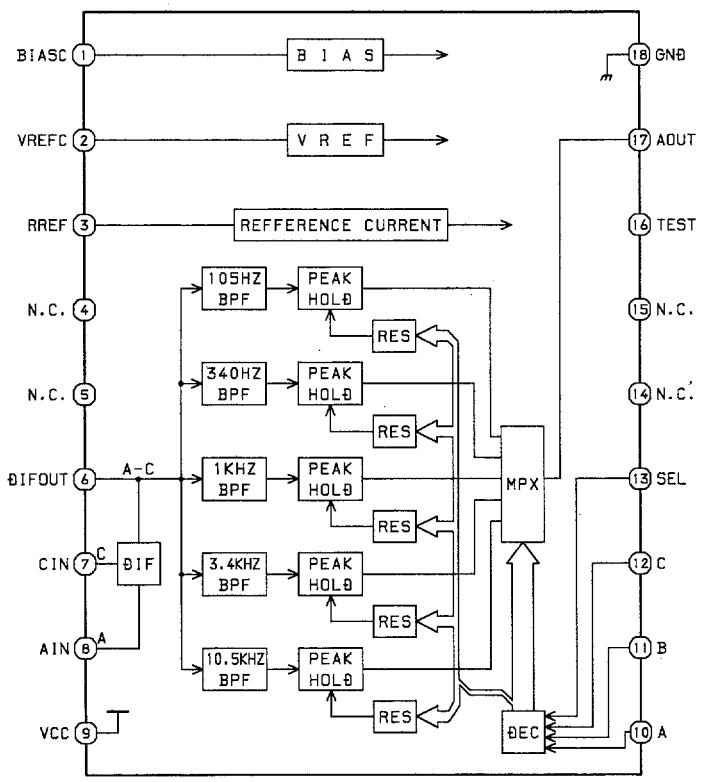

IC, BU4094BCF

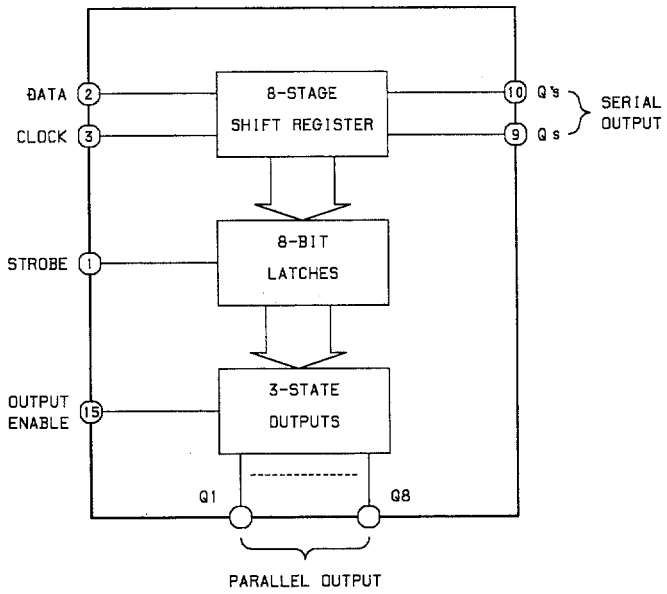

TRUTH TABLE

CLOCK	OUTPUT ENABLE	STROBE	ÐATA	PARALLEL OUTPUTS		SERIAL OUTPUTS	
				Q1	Qn	Qs	Q's
↑	L	X	X	Z	Z	Q7	NO Chg.
↓	L	X	X	Z	Z	No Chg.	Qs
↑	H	L	X	No Chg.	No Chg.	Q7	No Chg.
↑	H	H	L	L	Qn-1	Q7	No Chg.
↑	H	H	H	H	Qn-1	Q7	No Chg.
↓	H	X	X	No Chg.	No Chg.	No Chg.	Qs

Z=High Impedance

X=Ðon't Care

IC, M62463FP

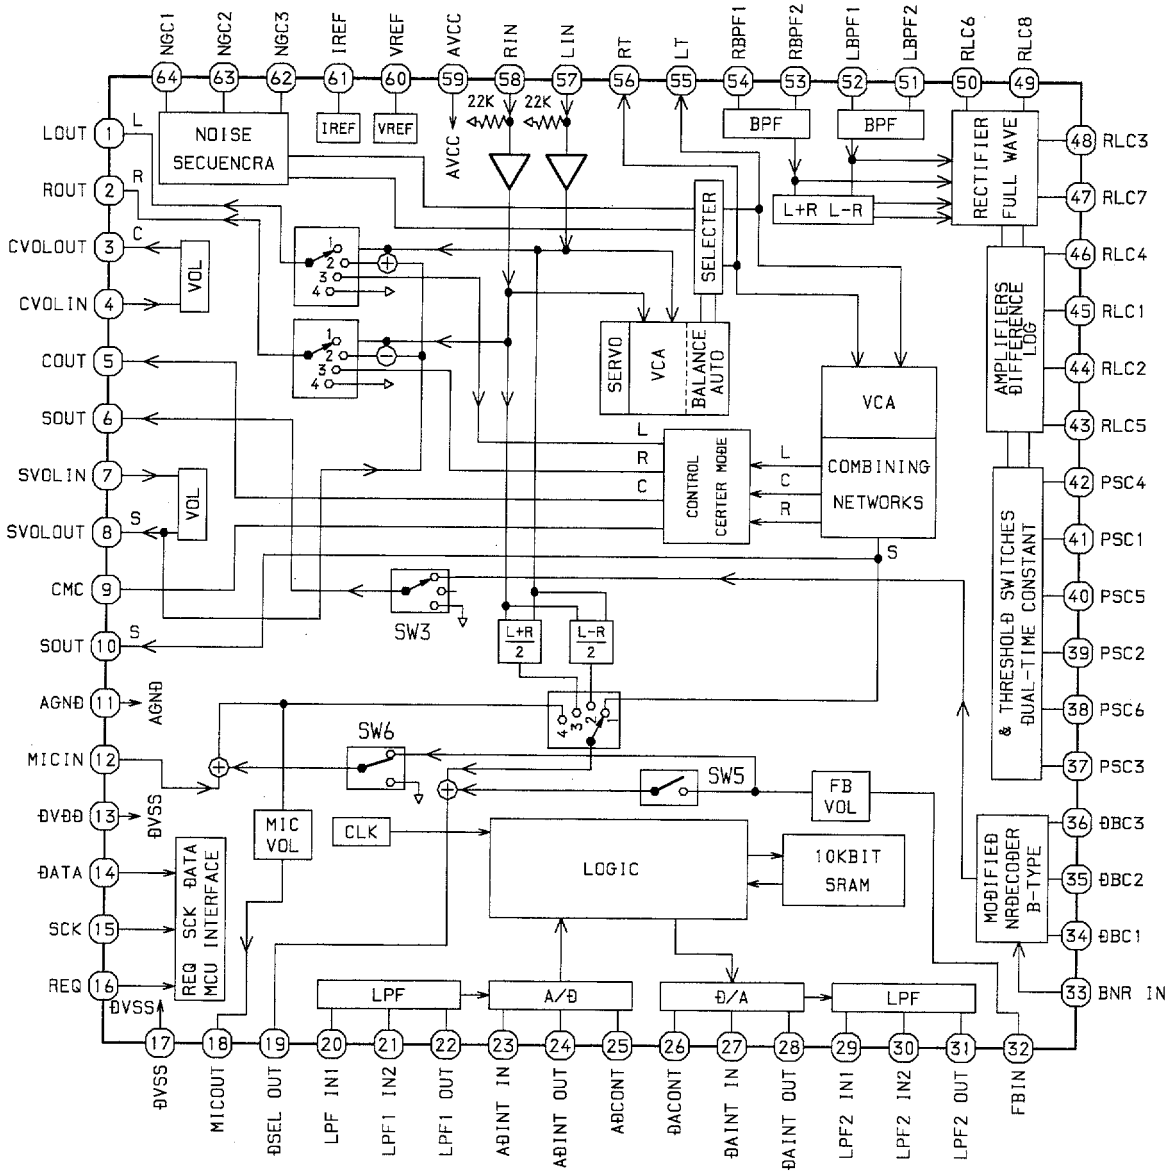

IC, BU1920FS <EZ>

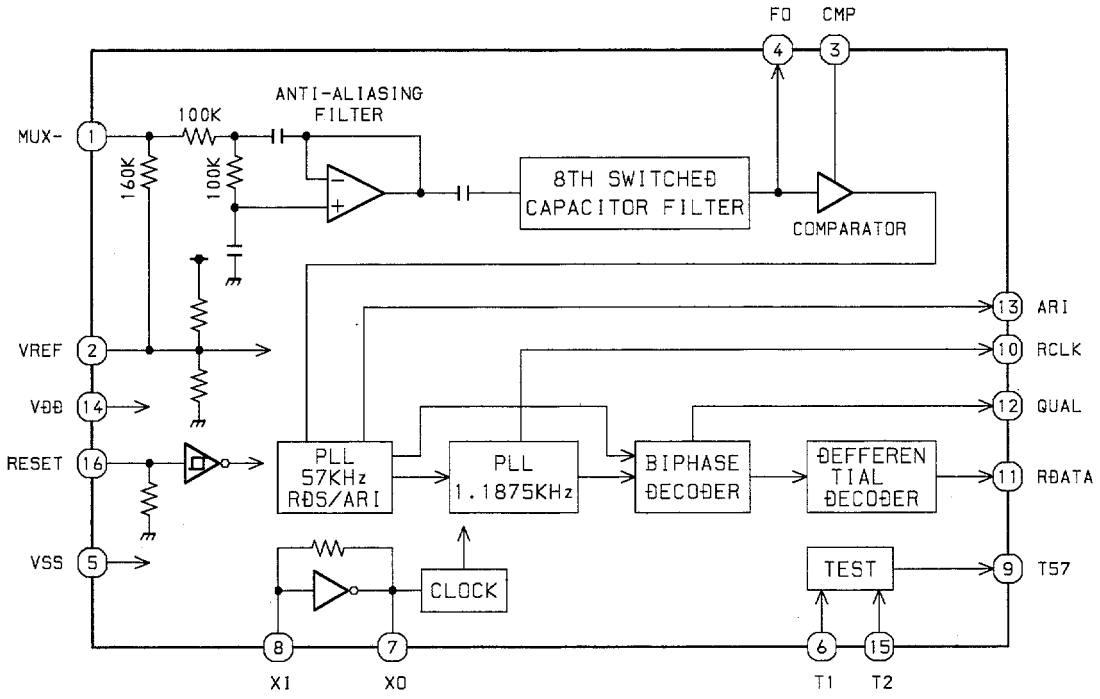

FL GRID ASSIGNMENT AND ANODE CONNECTION

GRID ASSIGNMENT

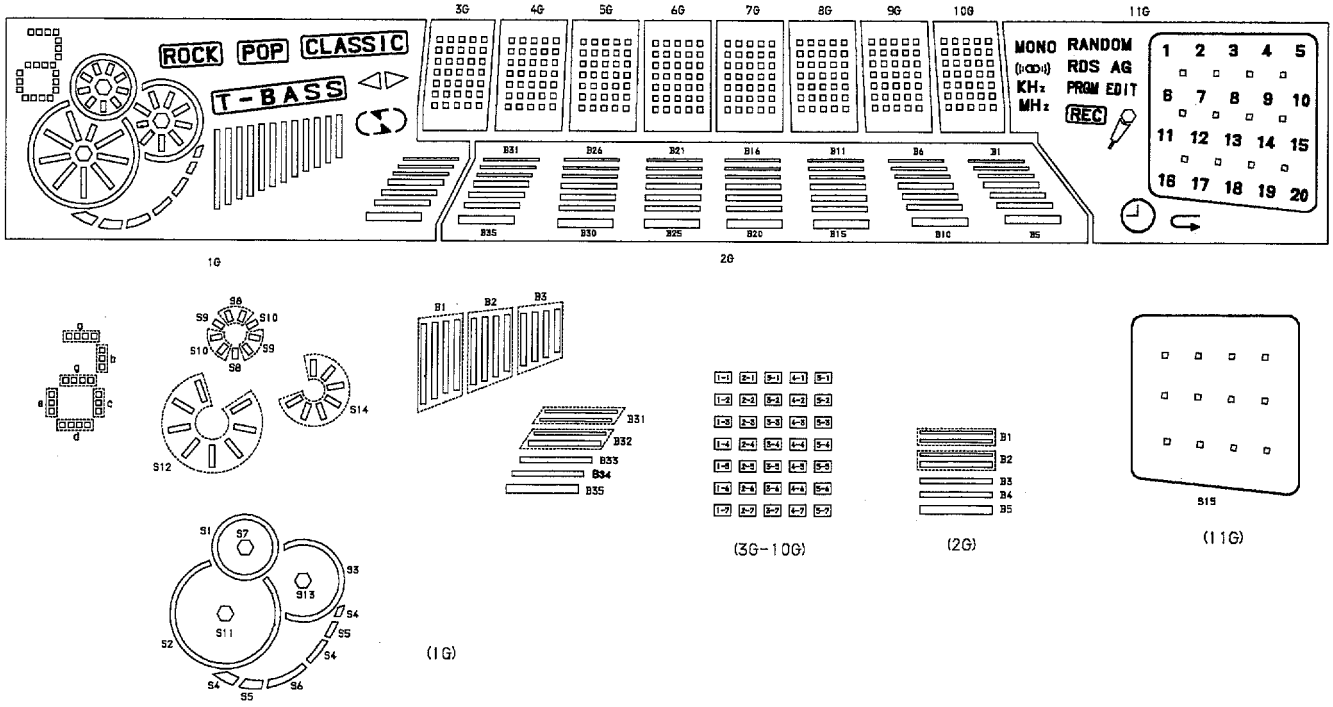

ANODE CONNECTION

	1G	2G	3G-10G	11G
P1	a, g, d	B35	1-1	MONO
P2	b	B30	2-1	((CD))
P3	c	B25	3-1	KHz
P4	e	B20	4-1	MHz
P5	S1	B15	5-1	RDS
P6	S7	B10	1-2	RANDOM
P7	S8	B5	2-2	AG
P8	S9	B34	3-2	
P9	S10	B29	4-2	EON
P10	S2	B24	5-2	EDIT
P11	S11	B19	1-3	REC
P12	S12	B14	2-3	
P13	S3	B9	3-3	
P14	S13	B4	4-3	
P15	S14	B33	5-3	S15
P16	S4	B28	1-4	20
P17	S5	B23	2-4	19
P18	S6	B18	3-4	18

	1G	2G	3G-10G	11G
P19	ROCK	B13	4-4	17
P20	POP	B8	5-4	16
P21	CLASSIC	B3	1-5	15
P22	▷	B32	2-5	14
P23	◁	B27	3-5	13
P24	)	B22	4-5	12
P25		B17	5-5	11
P26	(	B12	1-6	10
P27	T-BASS	B7	2-6	9
P28	B1	B2	3-6	8
P29	B2	B31	4-6	7
P30	B3	B26	5-6	6
P31	B31	B21	1-7	5
P32	B32	B16	2-7	4
P33	B33	B11	3-7	3
P34	B34	B6	4-7	2
P35	B35	B1	5-7	1

IC DESCRIPTION

IC, μPD780228-019-3BA

Pin No.	Pin Name	I/O	Description
1	$\overline{\text{K-SCAN}}$	O	Key scan output.
2	$\overline{\text{LED ▶}}$	O	▶ LED $\overline{\text{ON}}$/OFF output.
3	$\overline{\text{LED ▶▶}}$	O	▶▶ LED $\overline{\text{ON}}$/OFF output.
4	$\overline{\text{LED ◀◀}}$	O	◀◀ LED $\overline{\text{ON}}$/OFF output.
5	$\overline{\text{LED ■}}$	O	■ LED $\overline{\text{ON}}$/OFF output.
6	$\overline{\text{LED ❚❚}}$	O	❚❚ LED $\overline{\text{ON}}$/OFF output.
7	O-MOTOR	O	DECK MOTOR ON/$\overline{\text{OFF}}$ output.
8	$\overline{\text{O-SOL2}}$	O	DECK 2 solenoid output.
9	$\overline{\text{O-SOL1}}$	O	DECK 1 solenoid output.
10	S-MUTE	O	Surround mute output.
11	O-DATA	O	Data output for MAIN,FRONT,PRO C.B.
12	O-PRO-CE	O	Prologic IC chip enable output.
13	O-4094.CE	O	Latch strobe output to shift register IC.
14	O-ECHO.CE (N.C)	–	Not connected.
15	$\overline{\text{O-POWER}}$	O	System power supply $\overline{\text{ON}}$/OFF output.
16	O-PLL.CE	O	PLL IC chip enable output.
17	IC	–	Internal connection.(Connected to GND.)
18	VSS	–	GND.
19	VDD	–	Power supply input.
20	$\overline{\text{I-HP MUTE}}$	I	"L" input prologic DSP off.
21	M-STB	O	Latch strobe output for MAIN C.B.
22	O-CD.OPEN	O	CD tray open data output.
23	O-CD.CLOSE	O	CD tray close data output.
24	O-CD.DISH.F	O	CD turntable forward rotation output.
25	O-CD.DISH.R	O	CD turntable reverse rotation output.
26	I-WRQ/$\overline{\text{I-STEREO}}$	I	CD WRQ input/Tuner stereo input.
27	I-DRF/$\overline{\text{I-IFCNT}}$	I	CD DRF input/Tune IF count serial data input.
28	RDS CLK	I	Tuner RDS clock input.
29	I-SUBQ/RDS-DATA	I	CD SUBQ data input/RDS data input.
30	$\overline{\text{RESET}}$	I	System reset.
31	O-CD DATA/O-CLK	O	CD data output/Main PLL shift register clock output.
32	O-CDCLK	O	CD clock output.
33	O-CD.CE	O	CD enable output.
34	I-RMC	I	System remote control input.
35	I.DISH.SENSE	I	CD turntable photo sensor input.
36	$\overline{\text{O-C.SHIFT}}$	O	Micon clock shift output.
37	VDD1	–	Power supply input.
38,39	X2,X1	–	4.19MHz oscillator circuit.
40	VSS1	–	GND.
41	AVDD	–	Power supply input.
42	$\overline{\text{I-HOLD}}$	I	Power failure detected input "L" to stop clock and main memory. "H" for normal operation.
43	I-CD.SW	I	CD mecha switch input.

Pin No.	Pin Name	I/O	Description
44	I-SPEANA	I	A/D input for spectrum analyser display.
45	I-RE.VOL	I	Volume jog AD input.
46	I-RE.MULTI	I	Multi jog AD input.
47	I-SIG	I	RDS Tuner signal input.
48,49	I-KEY2,1	I	Key2,1 input.
50	AVSS	–	GND.
51	O-CDLED	O	CD flash window LED ON/OFF output.
52	LED ◀ (N.C)	O	◀ LED switch ON/OFF output. (Not connected)
53~58	P1~P6	O	FL segment P1~6 output.
59	P7/REV2	I/O	FL segment P7 output / REV2 data input.
60	P8/REV1	I/O	FL segment P8 output / REV1 data input.
61	P9/AM10K	I/O	FL segment P9 output / AM10K data input.
62	P10/AMST.WIDE	I/O	FL segment P10 output / AMSTWIDE data input.
63	P11/LW	I/O	FL segment P11 output / LW mode data input.
64	P12/SW	I/O	FL segment P12 output / SW mode data input.
65	P13/FM1	I/O	FL segment P13 output / FM1 data input.
66	P14/RDS	I/O	FL segment P14 output / RDS data input.
67	P15/CST2	I/O	FL segment P15 output / DECK2 cassette detect switch data input.
68	P16/REB	I/O	FL segment P16 output / DECK2 side B record OK switch data input.
69	P17/CAM2	I/O	FL segment P17 output / DECK2 CAM switch data input.
70	P18/AUTO1	I/O	FL segment P18 output / DECK1 AUTO stop switch data input.
71	P19/AUTO2	I/O	FL segment P19 output / DECK2 AUTO stop switch data input.
72	P20/CAM1	I/O	FL segment P20 output / DECK1 CAM stop switch data input.
73	P21/CST1	I/O	FL segment P21 output / DECK1 cassette detect switch data input.
74	P22/REA	I/O	FL segment P22 output / DECK2 side A record OK switch data input.
75	P23/KARAOKE	I/O	FL segment P23 output / KARAOKE data input.
76	P24/TM-BASE	I/O	FL segment P24 output / TM-BASE data input.
77,78	P25,P26	O	FL segment P25,P26 output.
79	VDD2	–	Power supply input.
80	–VFL	–	Power supply for FL display.
81	SPEANA-A/P27	O	FL segment P27 output / Spectrum analyser band switching data output.
82	SPEANA-B/P28	O	FL segment P28 output / Spectrum analyser band switching data output.
83	SPEANA-C/P29	O	FL segment P29 output / Spectrum analyser band switching data output.
84~89	P30~P35	O	FL segment P30~35 output.
90~100	G11~G1	O	FL grid G11~1 output.

IC, LC72131

<table>
<tr><th>Pin No.</th><th>Pin Name</th><th>I/O</th><th>Description</th></tr>
<tr><td>1</td><td>XIN</td><td rowspan="2">I/O</td><td rowspan="2">A crystal oscillator (4.5MHz) is connected between these pins.</td></tr>
<tr><td>22</td><td>XOUT</td></tr>
<tr><td>2</td><td>NC</td><td>–</td><td>Not used.</td></tr>
<tr><td>3</td><td>CE</td><td>I</td><td>To enable the IC. Active "H".</td></tr>
<tr><td>4</td><td>DI</td><td>I</td><td>Digital data input from CPU (μPD780228-019-3BA) when relevant key is operated. Active "H".</td></tr>
<tr><td>5</td><td>CL</td><td>I</td><td>To clock in the data DI.</td></tr>
<tr><td>6</td><td>DO</td><td>O</td><td>Digital data output to CPU (μPD780228-019-3BA).</td></tr>
<tr><td>7</td><td>T-BASE</td><td>O</td><td>Outputs a reference clock signal (8Hz) for the clock.</td></tr>
<tr><td>8</td><td>$\overline{\text{MONO}}$ / BEAT</td><td>O</td><td>Outputs "H" when MONO / BEAT is switched.</td></tr>
<tr><td>9</td><td>$\overline{\text{FM}}$ / $\overline{\text{SW}}$</td><td>O</td><td>Outputs "L" or "H" as follows:
<table>
<tr><th colspan="2">2 BAND</th><th colspan="3">3 BAND</th><th colspan="3">3 BAND</th></tr>
<tr><th>AM</th><th>FM</th><th>LW</th><th>MW</th><th>FM</th><th>MW</th><th>SW</th><th>FM</th></tr>
<tr><td>H</td><td>L</td><td>H</td><td>H</td><td>L</td><td>H</td><td>L</td><td>L</td></tr>
</table></td></tr>
<tr><td>10</td><td>$\overline{\text{MW}}$/SW</td><td>O</td><td>Outputs "L" or "H" as follows:
<table>
<tr><th colspan="2">2 BAND</th><th colspan="3">3 BAND</th><th colspan="3">3 BAND</th></tr>
<tr><th>AM</th><th>FM</th><th>LW</th><th>MW</th><th>FM</th><th>MW</th><th>SW</th><th>FM</th></tr>
<tr><td>L</td><td>L</td><td>H</td><td>L</td><td>L</td><td>L</td><td>H</td><td>L</td></tr>
</table></td></tr>
<tr><td>11</td><td>IF-MUTE</td><td>O</td><td>To control internal counter.</td></tr>
<tr><td>12</td><td>IF-IN</td><td>I</td><td>General purpose counter input.</td></tr>
<tr><td>13</td><td>$\overline{\text{TUNE}}$</td><td>I</td><td>Receives "L" when station is tuned.</td></tr>
<tr><td>14</td><td>NC</td><td>–</td><td>Not used.</td></tr>
<tr><td>15</td><td>AM-IN</td><td>I</td><td>Receives the AM local oscillator frequency signal.</td></tr>
<tr><td>16</td><td>FM-IN</td><td>I</td><td>Receives the FM local oscillator frequency signal.</td></tr>
<tr><td>17</td><td>VDD</td><td>–</td><td>Supply power to IC (+5V).</td></tr>
<tr><td>18</td><td>PD</td><td>O</td><td>PLL charge pump output.</td></tr>
<tr><td>19</td><td>A-IN</td><td>I</td><td rowspan="2">The MOS transistor for PLL active low pass filter.</td></tr>
<tr><td>20</td><td>A-OUT</td><td>O</td></tr>
<tr><td>21</td><td>VSS</td><td>–</td><td>Ground.</td></tr>
</table>

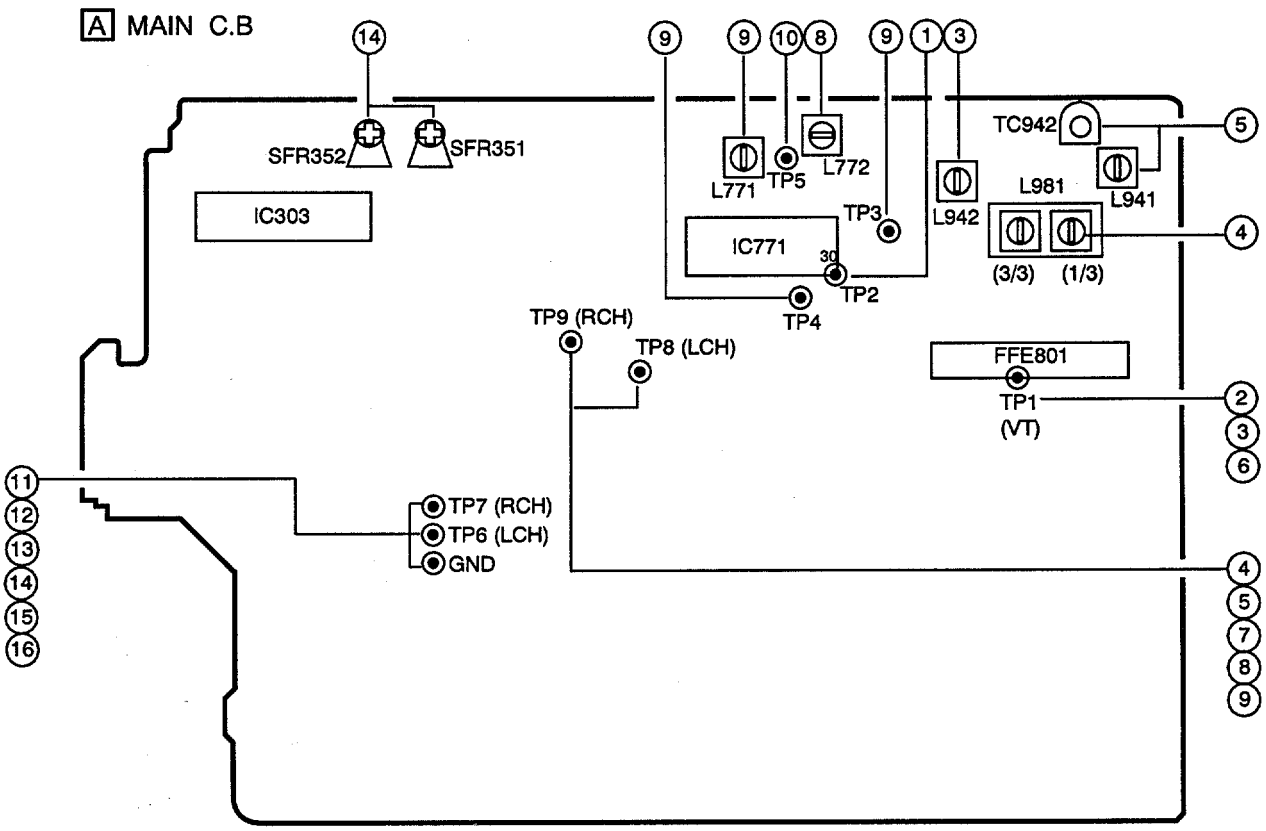

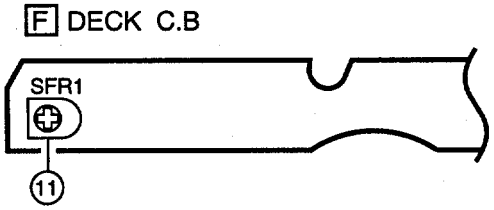

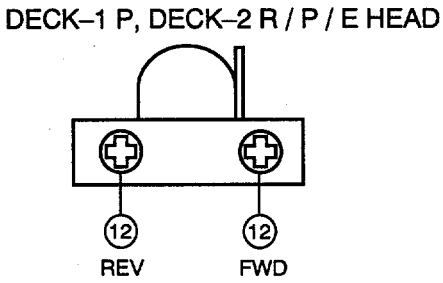

< TUNER SECTION >

1. Clock Frequency Check
   Settings : • Test point : TP2
   Method : Set to MW 1602kHz and check that the test point is 2052kHz ± 45Hz.

2. MW VT Check
   Settings : • Test point : TP1
   Method : Set to MW 1602kHz and MW 531kHz and check that the test point is less than 8.0V(1602kHz) and more than 0.6V(531kHz).

3. LW VT Adjustment
   Settings : • Test point : TP1
   • Adjustment location : L942
   Method : Set to LW 144kHz and adjust L942 so that the test point becomes 1.3V ± 0.05V. Then set to LW 290 kHz and check that the test point is less than 8.0V.

4. MW Tracking Adjustment
   Settings : • Test point : TP8(Lch), TP9(Rch)
   • Adjustment location :
   L981(1/3) 999kHz
   Method : Set to MW 999kHz and adjust L981(1/3) so that the test point is max.

5. LW Tracking Adjustment
   Settings : • Test point : TP8(Lch), TP9(Rch)
   • Adjustment location :
   L941 ..... 144kHz
   TC942 ..... 290kHz
   Method : Setup TC942 to center before adjustment. The level at 144kHz is adjusted to max by L941. Then the level at 290 kHz is adjusted to max by TC942.

6. FM VT Check
   Settings : • Test point : TP1
   Method : Set to FM 108.0MHz and check that the test point is less than 8.0V.
   Set to FM 87.5MHz and check that the test point is more than 0.5V.

7. FM Tracking Check
   Settings : • Test point : TP8(Lch), TP9(Rch)
   Method : • Set to FM 98.0MHz and check that the test point is less than 10dB.

8. MW IF Adjustment
   Settings : • Test point : TP8(Lch), TP9(Rch)
   • Adjustment location :
   L772 ..... 450kHz

9. DC Balance / Mono Distortion Adjustment
   Settings : • Test point : TP3, TP4 (DC Balance)
   TP8, TP9 (Distortion)
   • Adjustment location : L771
   • Input level : 54dB
   Method : Set to FM 98.0MHz and adjust L771 so that the voltage between TP3 and TP4 becomes 0V ± 0.04V. Next, check that the distortion is less than 1.3%

10. Auto Stop Level Check
    MW
    Settings : • Test point : TP5
    • Input level : 52dB
    Method : Set to MW 999kHz and check that the auto stop is at 37 ~ 62dB.

    FM
    Settings : • Test point : TP5
    • Input level : 25dB
    Method : Set to FM 98.0MHz and check that the auto stop is at 25dB ± 10dB.

< DECK SECTION >

11. Tape Speed Adjustment
    Settings : • Test tape : TTA–100
    • Test point : TP6(Lch), TP7(Rch)
    • Adjustment location : SFR1
    Method : Play back the test tape and adjust SFR1 so that the frequency counter reads 3000Hz ± 5Hz.

12. Head Azimuth Adjustment
    Settings : • Test tape : TTA–300
    • Test point : TP6(Lch), TP7(Rch)
    • Adjustment location : Head azimuth adjustment screw
    Method : Play back (FWD) the 10kHz signal of the test tape and adjust screw so that the output becomes maximum. Next, perform on REV PLAY mode.

13. PB Frequency Response Check (DECK 1, DECK 2)
    Settings : • Test tape : TTA–330
    • Test point :TP6(Lch), TP7(Rch)
    Method : Play back the 315Hz and 8kHz signals of the test tape and check that the output ratio of the 8kHz signal with respect to that of the 315Hz signal is within 5dB.

14. REC/PB Frequency Response Adjustment
    Settings : • Test tape : TTA–602
    • Test point : TP6(Lch), TP7(Rch)
    • Input signal : 1kHz / 10kHz (LINE IN)
    • Adjustment location : SFR351 (Lch)
    SFR352 (Rch)
    Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP6, TP7 becomes -28dBV. Record and play back the 1kHz and 10kHz signals and adjust SFRs so that the output of the 10kHz signals becomes 0dB ± 0.5dB with respect to that of the 1kHz signal.

15. PB Sensitivity Check
    Settings : • Test tape : TTA–200
    • Test point : TP6(Lch), TP7(Rch)
    Method : Playback the test tape and check that the output level of the test point is 300mV ± 3dB.

16. REC/PB Sensitivity Check
    Settings : • Test tape : TTA–602
    • Test point : TP6(Lch), TP7(Rch)
    • Input signal : 1kHz (LINE IN)
    Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP6, TP7 becomes -8dBV. Record and play back the ` 1kHz signals and check that the output is 0 ± 3.5dB.

PRACTICAL SERVICE FIGURE

<TUNER SECTION>

<FM SECTION>

IHF Sensitivity :	Less than 11 / 10 /10dB
(THD 3%)	[at 87.5 / 98.0 / 108.0MHz]
S/N 50dB Quieting sensitivity :	
	Less than 38dB
	[at 98.0MHz]
Signal to noise ratio :	Mono : More than 68dB
	Stereo : More than 66dB
	[at 98.0MHz]
Distortion :	Mono : Less than 1.2%
	Stereo : Less than 2.0%
	[at 98.0MHz]
Auto stop level :	25dB ± 10dB [at 98.0MHz]
Stereo separation :	More than 14dB [at 98.0MHz]
Intermediate frequency :	10.7MHz

<MW SECTION>

Sensitivity :	Less than 60dB
(S/N 20 dB)	[at 603kHz]
	Less than 58dB
	[at 999kHz]
	Less than 58dB
	[at 1404kHz]
Signal to noise ratio :	More than 36dB
	[at 999kHz]
Distortion :	Less than 1.5%
	[at 999kHz]
Auto stop level :	52dB +10/-15dB
	[at 999kHz]
Intermediate frequency :	450kHz

<LW SECTION>

Sensitivity :	Less than 70dB
(S/N 20 dB)	[at 144kHz]
	Less than 68dB
	[at 198kHz]
	Less than 66dB
	[at 290kHz]
Intermediate frequency :	450kHz

<DECK SECTION>

Tape speed :	3000Hz ± 45Hz
Wow & flutter :	Less than 0.25%
	(W.R.M.S)
Take-up torque :	30 ~ 55g-cm
	(FWD, REV)
F.F torque :	75 ~ 180g-cm
REW torque :	75 ~ 180g-cm
Back tension :	2 ~ 7g-cm
	(FWD, REV)
PB output level :	2.8V ± 3dB
	(SP OUT 2V)
REC/PB output level :	-2 ± 3dB
	(SP OUT 2V,NORM)
Distortion (REC/PB) :	Less than 2.0%
	(NORM)
Noise level (PB) :	Less than 25mV
	(NORM, SP OUT 2V)
Noise level (REC/PB) :	Less than 30mV
	(NORM, SP OUT 2V)
Erasing ratio :	More than 60dB
	(at 125Hz, +10VU, NORM)
Test tape :	TTA-602 (NORM)

MECHANICAL EXPLODED VIEW 1 / 1

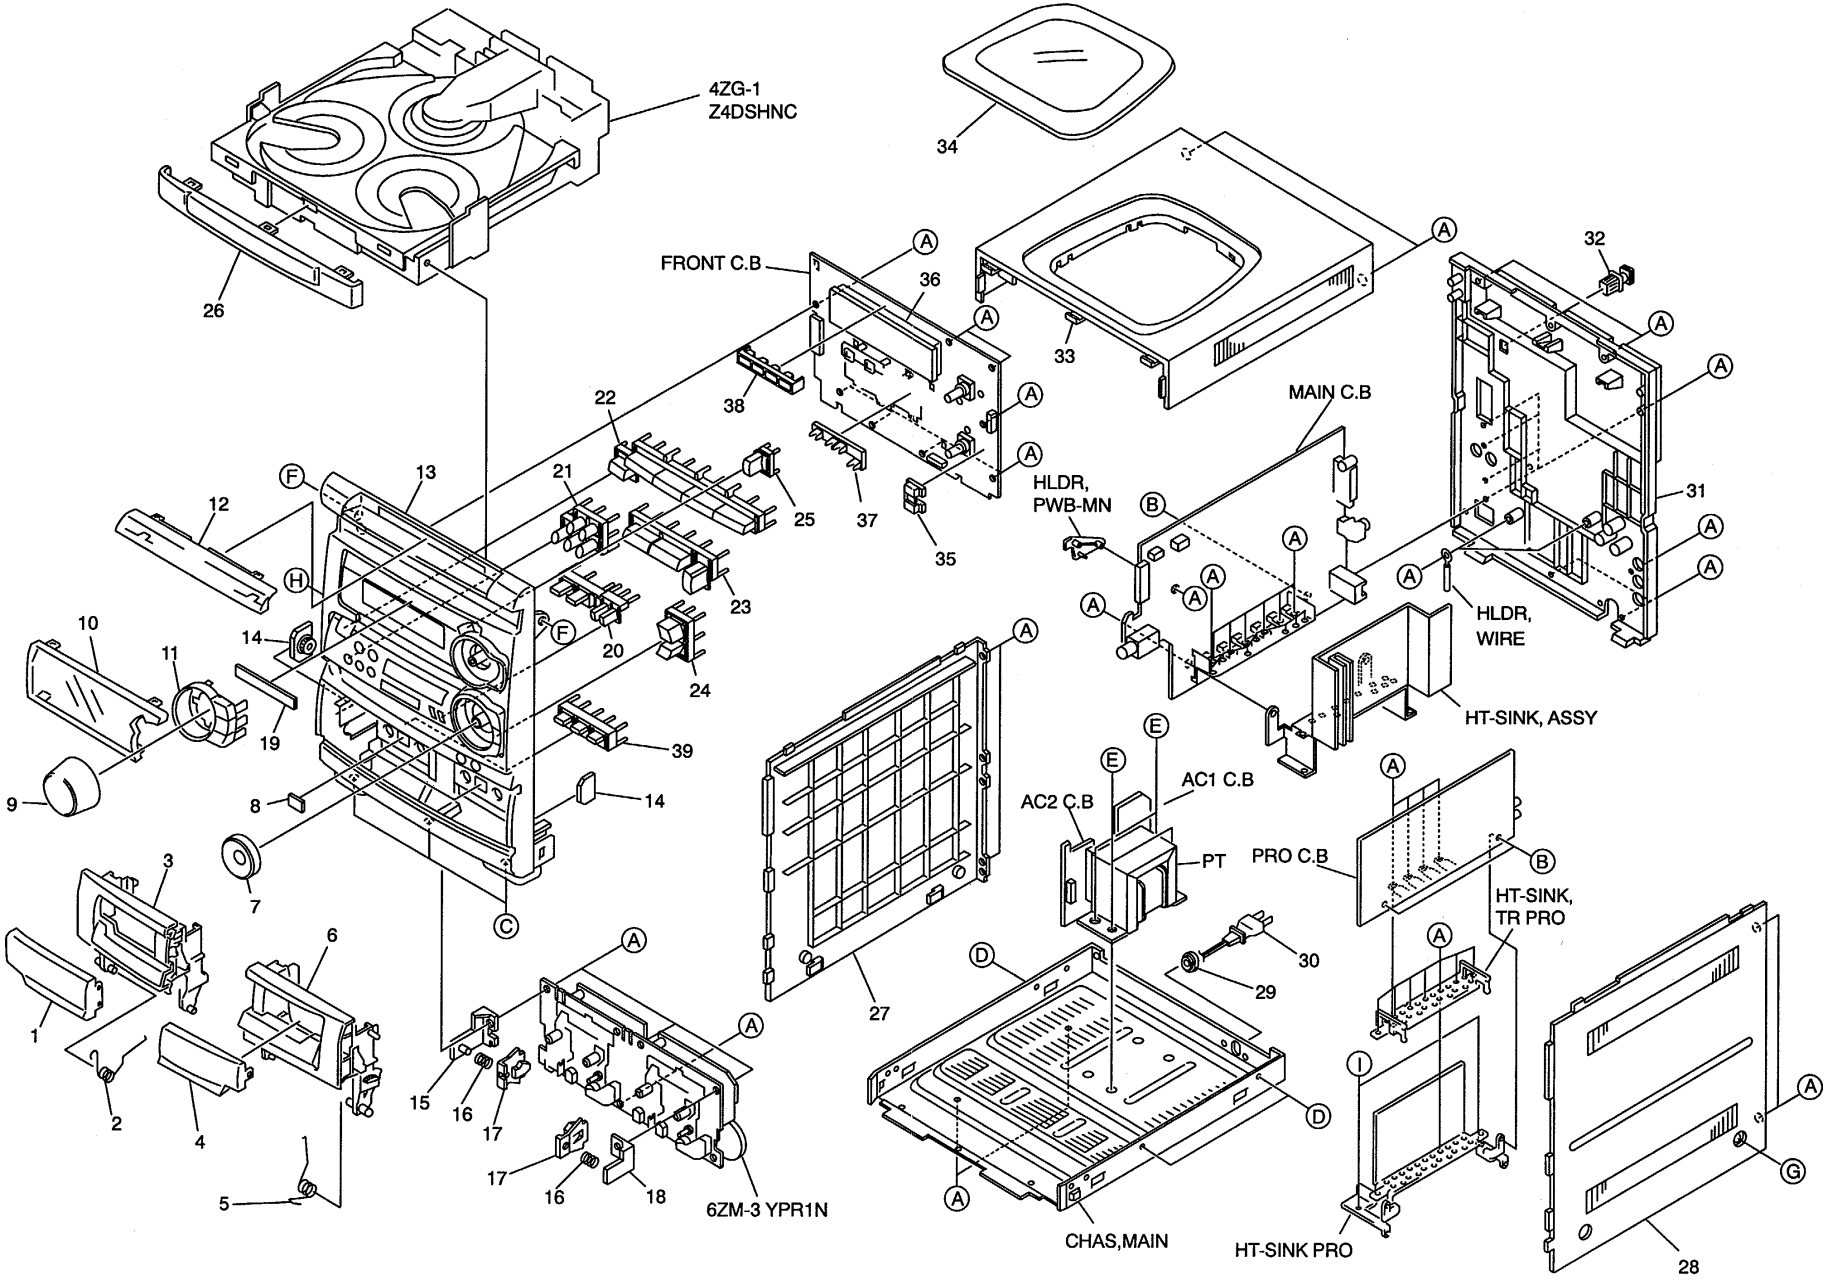

MECHANICAL PARTS LIST 1 / 1

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	87-NB8-012-010		WINDOW,CASS 1
2	82-NF5-218-010		SPR-T,EJECT 1 (SIN)
3	88-NF8-044-010		BOX,CASS 1 1WAY>
4	87-NB8-013-010		WINDOW,CASS 2
5	82-NF5-219-010		SPR-T,EJECT 2 (SIN)
6	88-NF8-043-010		BOX,CASS 2 1WAY
7	88-NF8-016-010		KNOB,RTRY JOG
8	81-532-080-010		LABEL, CASS. COMPT
9	87-NB8-015-010		KNOB,RTRY VOL
10	88-NFV-013-010		WINDOW,DISPLAY E AV320<EZ>
10	88-NFV-014-010		WINDOW,DISPLAY K<K>
11	88-NFV-007-010		KEY,GEQ PRO
12	87-NB8-009-010		WINDOW,CD
13	88-NFV-003-010		CABI,FR E AV320<EZ>
13	88-NFV-004-010		CABI,FR K<K>
14	87-NF8-220-010		DMPR,150
15	87-NF4-216-010		HLDR,LOCK 1
16	86-NF9-224-010		SPR-C,LOCK
17	82-NF5-229-010		PLATE,LOCK
18	87-NF4-217-010		HLDR,LOCK 2
19	88-NFV-010-010		PLATE,PRO
20	88-NF8-006-210		KEY,REC
21	88-NF8-014-110		KEY,CD
22	88-NF8-007-010		KEY,FUNCTION
23	88-NF8-019-010		KEY,PLAY 1WAY ASSY
24	88-NF8-013-010		KEY,ASSY FF
25	88-NFV-006-010		KEY,PRO
26	88-NF8-046-010		PANEL,TRAY
27	87-NB8-005-010		PANEL,LEFT
28	88-NF8-047-010		PANEL,RIGHT 2

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
29	87-085-185-010		BUSHING, AC CORD (E)
⚠ 30	87-050-034-010		AC CORD ASSY,E<EZ>
31	88-NFV-024-010		CABI,REAR EZSTNE AV320<EZ>
31	88-NFV-025-010		CABI,REAR KSTNE<K>
32	84-ZG1-245-210		CAP,OPTICAL
33	87-NF9-055-010		PANEL,TOP
34	86-NFZ-001-010		WINDOW,TOP
35	88-NF8-207-010		GUIDE,FF
36	88-NF8-205-010		GUIDE,FL
37	88-NF8-208-010		GUIDE,PLAY 1WAY
38	88-NFV-201-010		GUIDE,PRO
39	88-NF8-015-110		KEY,RDS<EZ>
A	87-067-703-010		TAPPING SCREW, BVT2+3-10
B	87-NF4-224-010		S-SCREW,IT3B+3-8 CU
C	87-067-688-010		BVTT+3-6
D	87-721-096-410		QT2+3-10 GLD
E	87-078-019-010		S-SCREW,IT+4-6
F	87-721-097-410		QT2+3-12 GLD
G	87-067-641-010		UTT2+3-8(W/O SLOT)BL
H	87-723-096-410		QT2+3-10W/O SLOT BL
I	87-067-579-010		TAPPING SCREW, BVT2+3-8

TAPE MECHANISM EXPLODED VIEW 1 / 1

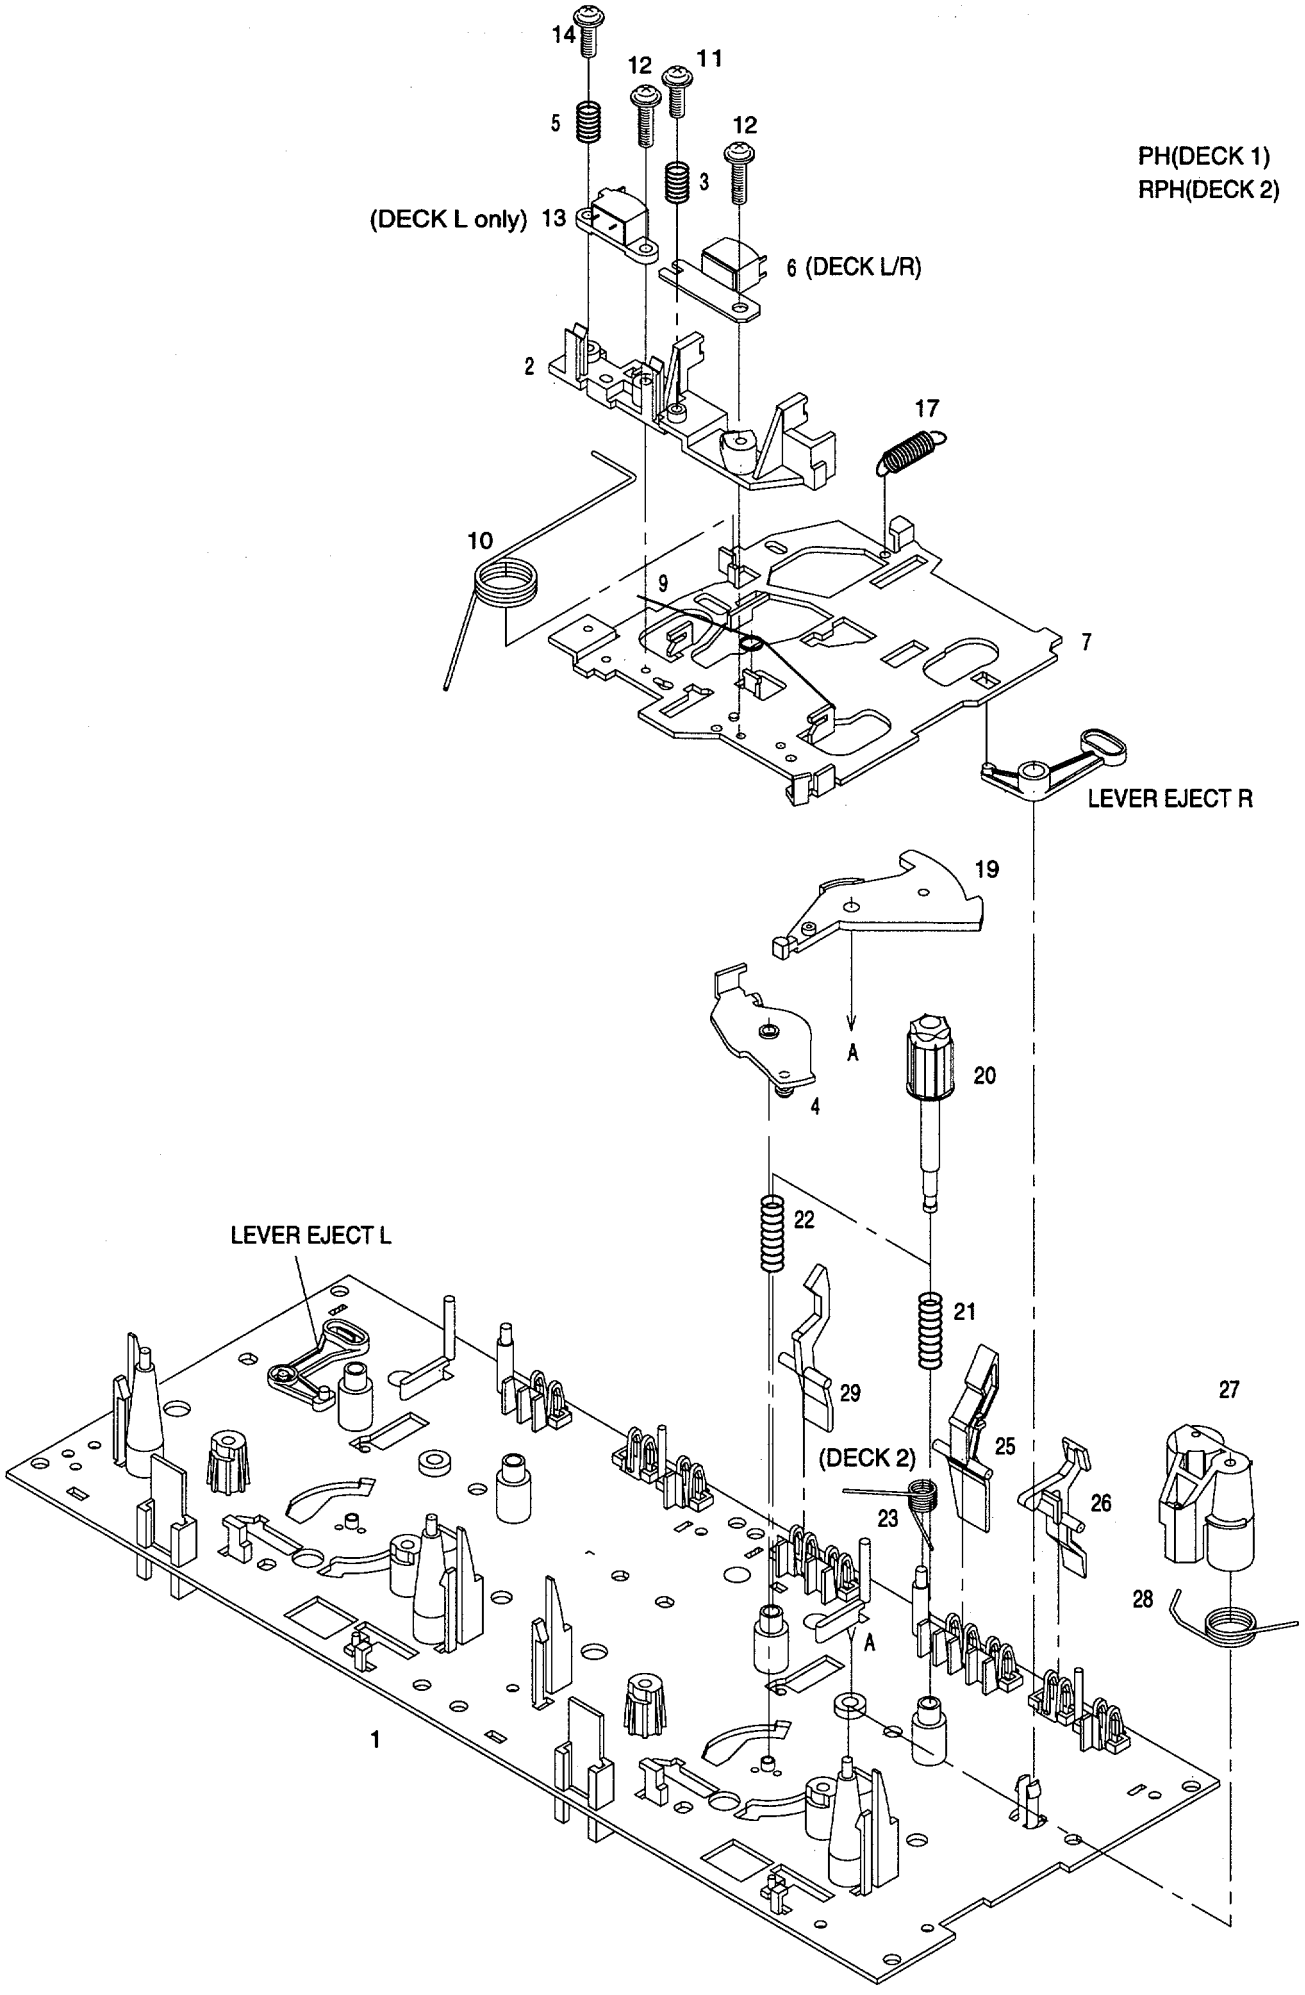

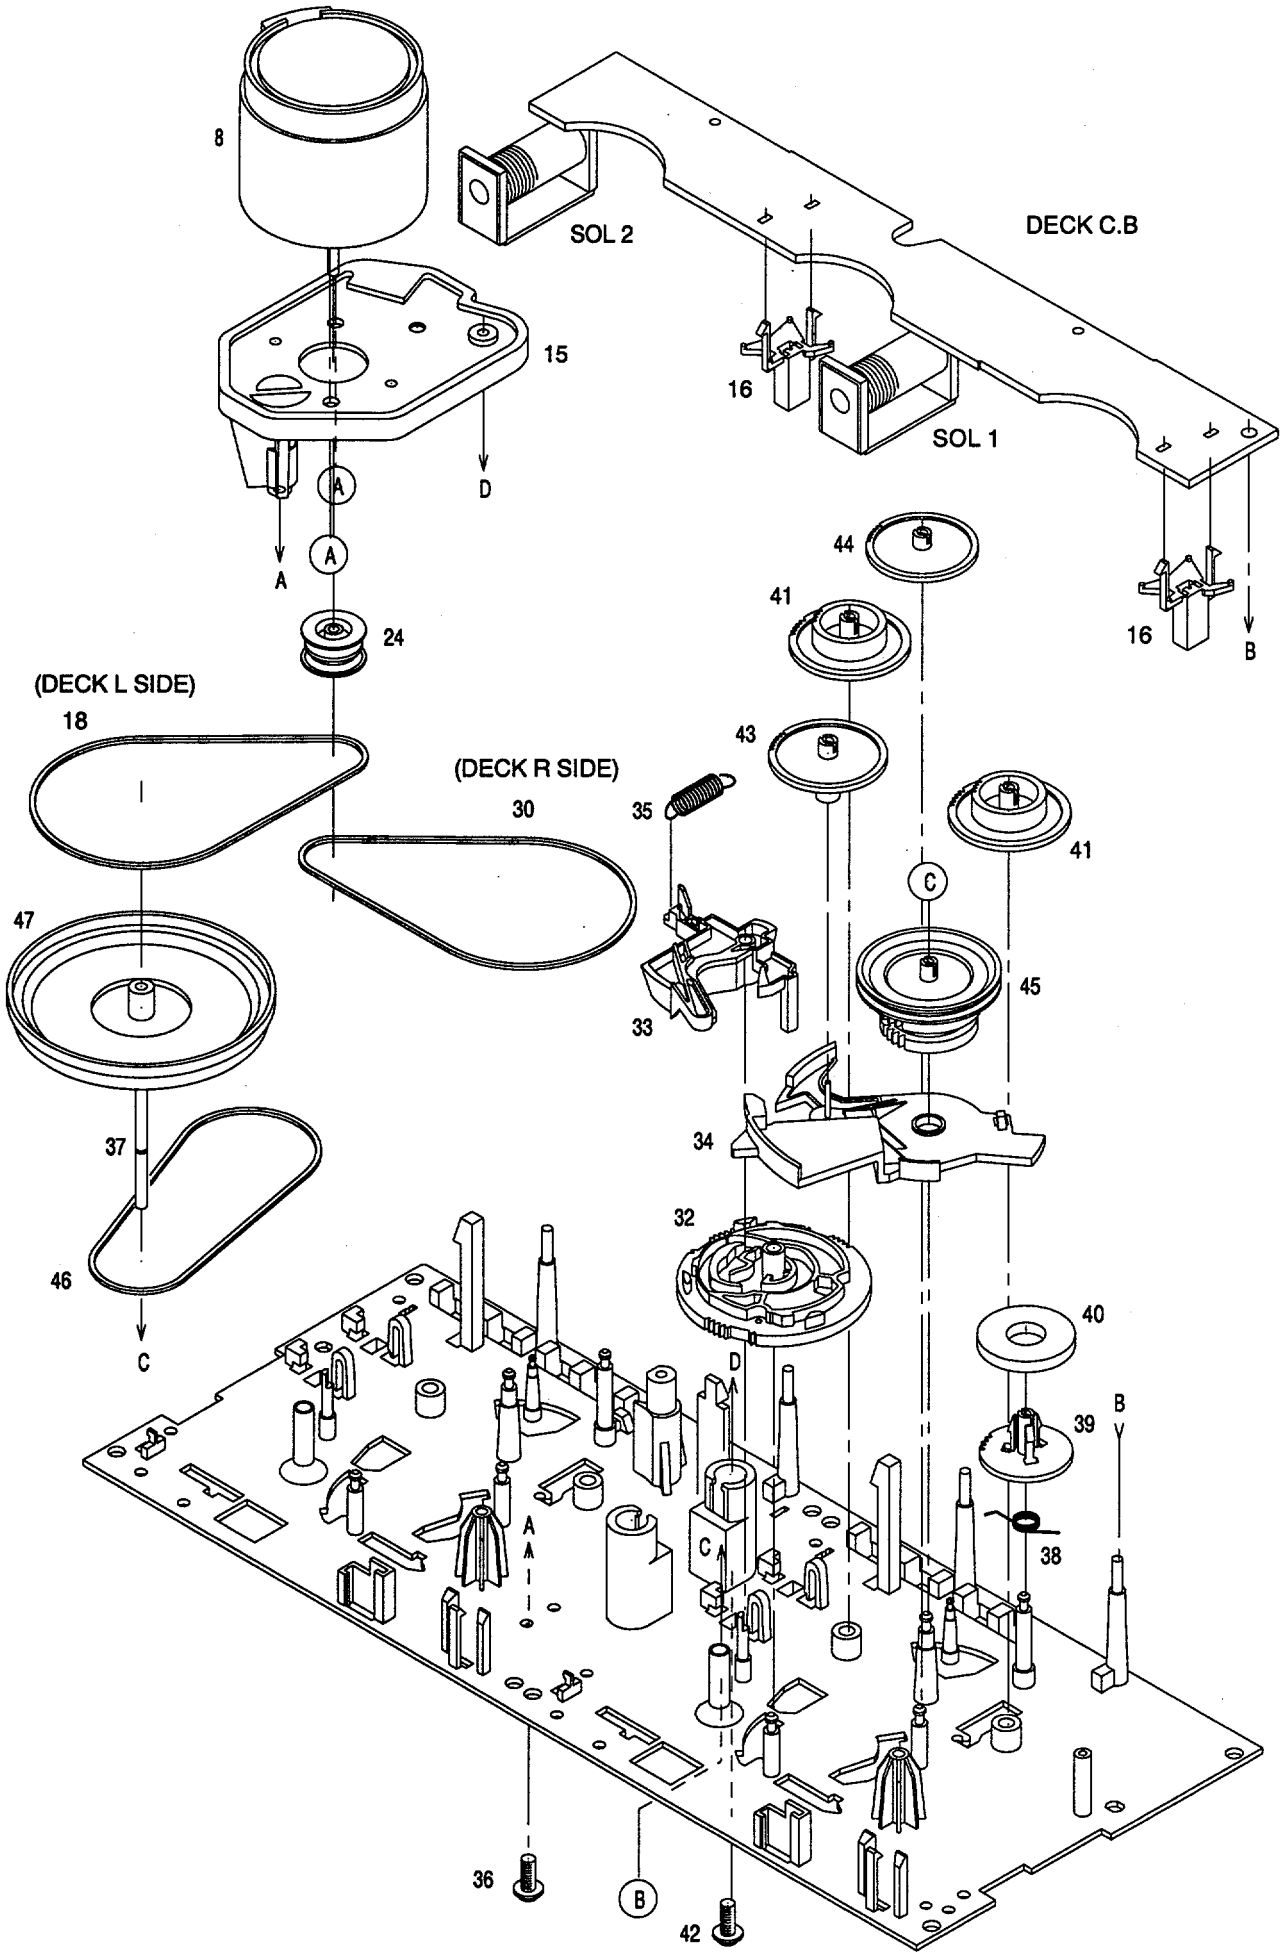
8
SOL 2
DECK C.B
15
16
SOL 1
D
A
A
A
44
41
24
16
B
(DECK L SIDE)
18
(DECK R SIDE)
30
43
35
41
47
C
45
33
37
34
32
46
C
40
D
B
39
A
C
38
36
B
42

TAPE MECHANISM PARTS LIST 1 / 1

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	86-ZM3-212-010		CHAS ASSY,SS
2	86-ZM3-202-010		BASE,HEAD S
3	86-ZM3-205-010		SPR-C,RPH S
4	82-ZM1-333-210		PLATE,LINK 2
5	86-ZM3-206-010		SPR-C,EH S
6	87-A90-403-019		HEAD,RPH MS15R
7	86-ZM3-201-010		CHAS,HEAD S
8	87-045-347-019		MOT,SHU2L 70(M1)
9	82-ZM1-269-219		SPR-T,BRG
10	82-ZM3-323-119		SPR-T,LINK
11	86-ZM3-209-010		S-SCREW,AZIMUTH
12	86-ZM3-207-010		S-SCREW,RPH
13	87-A90-404-019		HEAD,EH LE15B
14	86-ZM3-208-010		S-SCREW,EH
15	86-ZM3-203-010		HLDR,MOTS
16	82-ZM1-245-210		HLDR,IC
17	82-ZM1-218-019		SPR-E,HB
18	86-ZM3-211-010		BELT,RS
19	82-ZM1-222-219		LVR,PLAY
20	82-ZM1-217-419		REEL,TABLE
21	82-ZM1-244-519		SPR-C,BT
22	82-ZM1-285-410		SPR-C,BT L
23	82-ZM1-257-019		SPR-T,CAS
24	82-ZM3-221-010		PULLEY,MOT 2M
25	82-ZM1-242-019		LVR,CAS
26	82-ZM1-243-019		LVR,STOP
27	82-ZM1-344-119		LVR ASSY,PINCH
28	86-ZM3-204-010		SPR-T,PINCHDS
29	82-ZM1-240-119		LVR,REC (DECK 2)
30	86-ZM3-210-010		BELT,PS
31	82-ZM1-223-010		GEAR,PLAY
32	82-ZM3-305-019		GEAR,CAM M2
33	82-ZM1-227-319		LVR,TRIG
34	82-ZM3-306-110		LVR,FR M2
35	82-ZM1-265-119		SPR-E,TRIG
36	85-ZM3-203-019		S-SCREW MOTOR M3
37	82-ZM1-236-019		CAPSTAN N 2-41.5
37	82-ZM1-239-019		CAPSTAN N 2.2-41.7
38	82-ZM1-322-019		SPR-T,FR60
39	82-ZM1-220-219		GEAR,IDLER
40	82-ZM3-616-019		RING MAGNET 4
41	82-ZM1-216-319		GEAR,REEL
42	85-ZM3-213-010		S-SCREW,HLDR MOT 3
43	82-ZM1-225-219		GEAR,FR
44	82-ZM1-226-019		GEAR,REW
45	82-ZM3-333-210		SLIP DISK ASSY 2
46	82-ZM1-338-010		BELT FR4
47	82-ZM1-349-019		FLY-WHL RW (DECK L)
47	82-ZM3-331-019		FLY-WHL R2W (DECK R)
A	87-251-071-417		U+2.6-4
B	80-ZM6-243-019		SH,1.75-3.6-0.5 SLT

SPRING APPLICATION POSITION

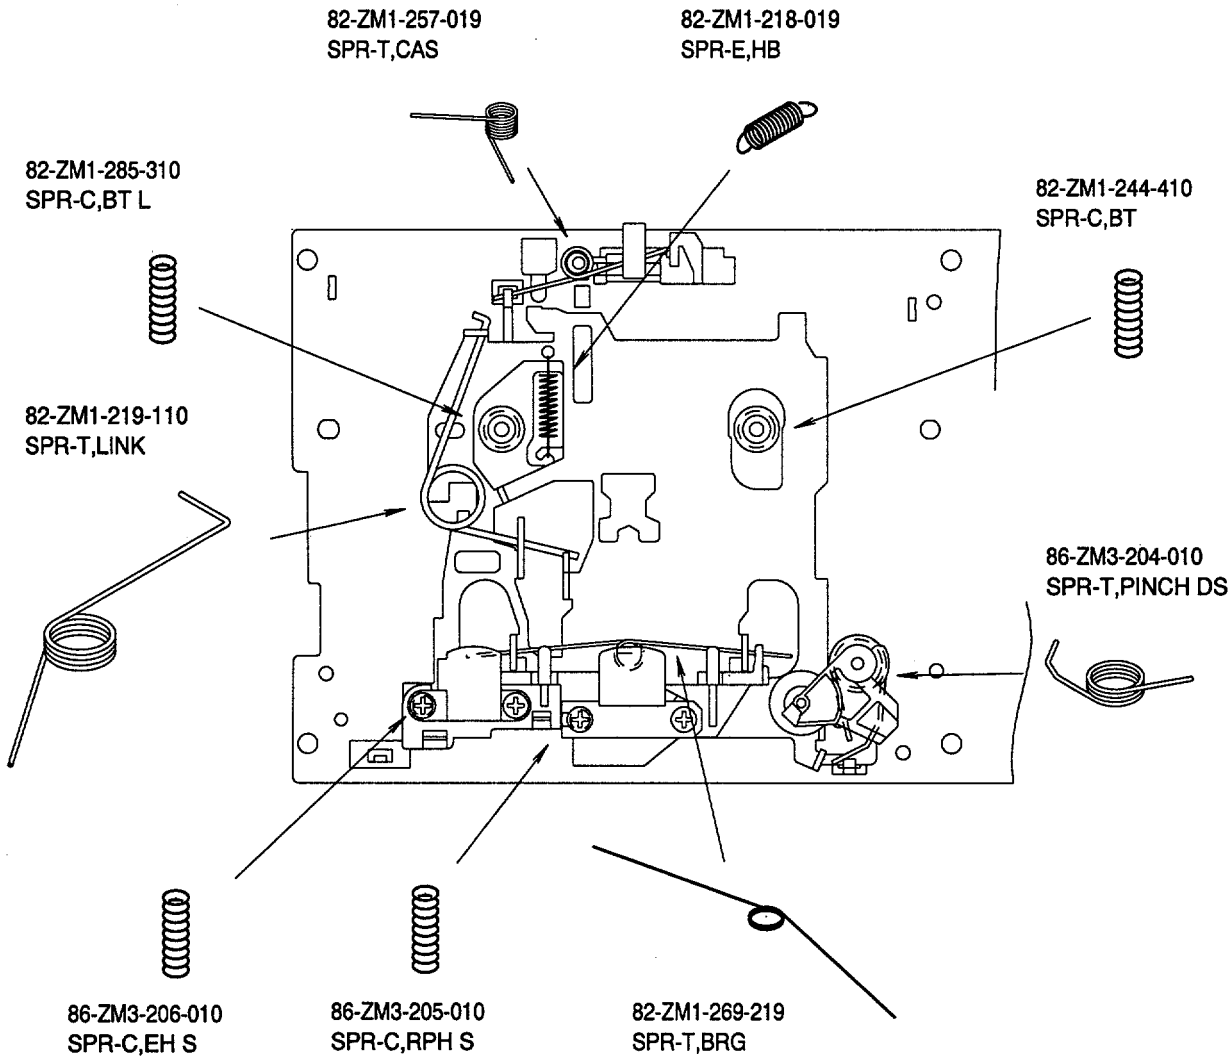

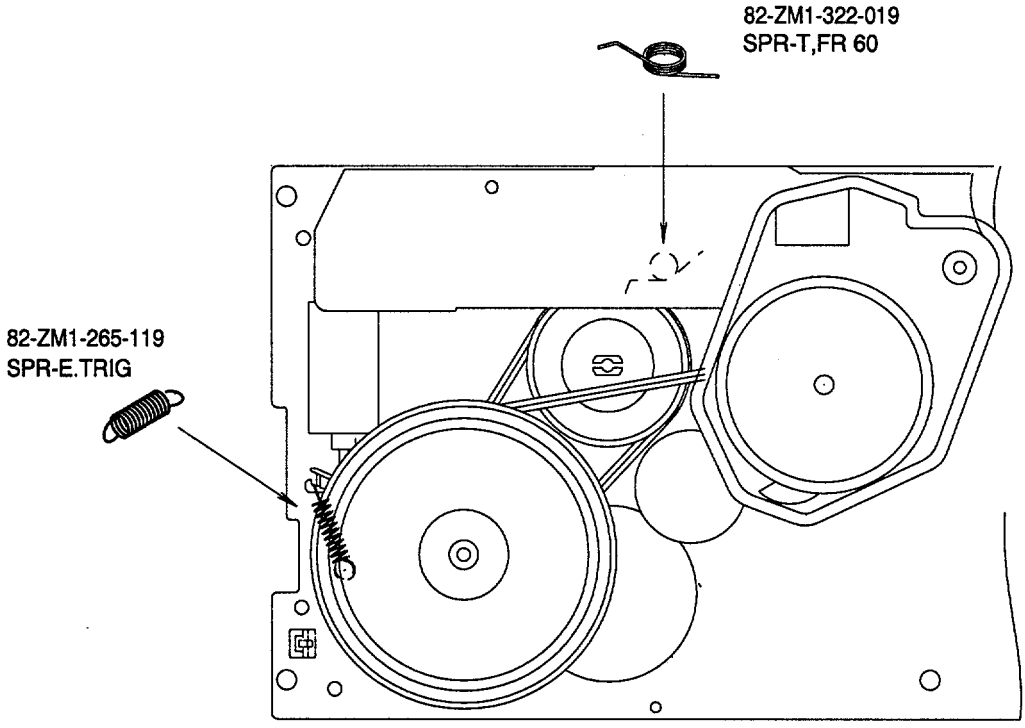

SPEAKER DISASSEMBLY INSTRUCTIONS

Type.1

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

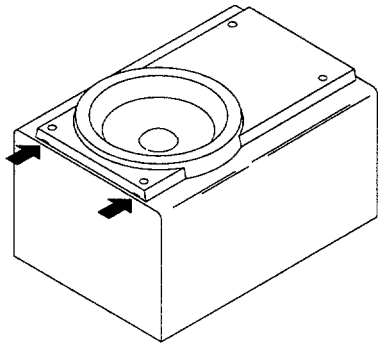

Type.2

グリルフレームを外し、4個のゴムキャプをマイナスドライバーで端の方から持ち上げて外すと中にビスが有りますので、ビスを取り外します。矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。

Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

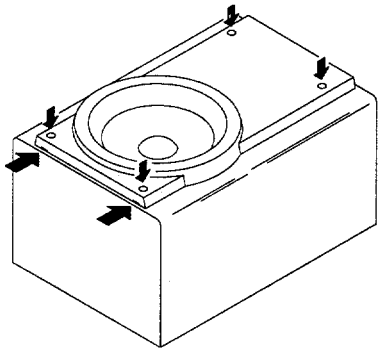

Type.3

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットの凹にマイナスドライバーを差し込んで、反時計方向に回転させスピーカーユニットを外してください。スピーカーユニット交換後は時計方向にクリック音がするまで、回転させて取り付けます。

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Turn the speaker unit to counter-clockwise direction while inserting a flat-bladed screwdriver into one of the hollows around speaker unit, and then remove the speaker unit. After replacing the speaker unit, install it turning to clockwise direction until "click" sound comes out.

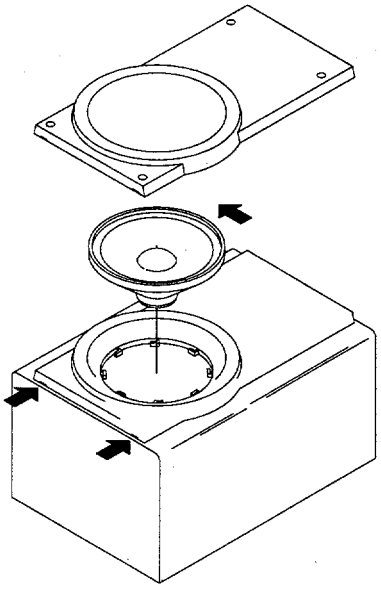

SPEAKER PARTS LIST (SX-NAV304 <YTNL,YBNL>)

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	83-096-614-010		SPEAKER CORD ASSY (YB)
2	83-MS2-603-310		SPKR,T 60
3	88-NST-006-010		GRILLE,FRAME ASSY
4	88-NSU-002-010		PANEL,FR
5	88-NSU-005-010		PANEL,TW ASSY
6	88-NSV-601-010		TERMINAL,ASSY
7	88-NSV-602-010		SPKR, W 160

SPEAKER PARTS LIST (SX-CR675 <YSTNC>)

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	87-YS1-001-010		CABI,REAR(R275)
2	87-YS1-004-010		GRILLE FRAME ASSY(R275)
3	87-YS1-002-010		GRILLE,FRAME(R275)
4	81-VSA-009-010		CORD BUSH(R275)
5	87-YS6-002-010		SPKR, CORD Y(R275)
6	87-YS6-601-010		SPKR, 100(R275)
7	87-010-384-010		CAP,E 100-25 SME(R275)
8	87-YS3-001-010		PANEL,FRONT ST(C605)
9	87-YS3-003-010		GRILLE,FRAME ASSY(C605)
10	83-NSM-010-010		SPEAKER CORD(C605)
11	87-YS7-602-010		SPKR,100(C605)

*NOTE : This SX-CR627 speaker contains SX-C605 (center speaker) and SX-R275 (rear speaker).

ACCESSORIES / PACKAGE LIST

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	88-NFV-905-010		IB,K(E)E <K>
1	88-NFV-906-010		IB,E(9L)E <EZ>
2	87-006-225-010		AM LOOP ANT NC2
3	87-NFV-605-010		RC UNIT,RC-8AS04
4	87-043-106-010		WIRE, FM ANT (Z)

REFERENCE NAME LIST

ELECTRICAL SECTION

DESCRIPTION	REFERENCE NAME
ANT	ANTENNAS
C-	CHIP
C-CAP	CAP, CHIP
C-CAP TN	CAP, CHIP TANTALUM
C-COIL	COIL, CHIP
C-DI	DIODE, CHIP
C-DIODE	DIODE, CHIP
C-FET	FET, CHIP
C-FOTR	FILTER, CHIP
C-JACK	JACK, CHIP
C-LED	LED, CHIP
C-RES	RES, CHIP
C-SFR	SFR, CHIP
C-SLIDE SW	SLIDE SWITCH, CHIP
C-SW	SWITCH, CHIP
C-TR	TRANSISTOR, CHIP
C-VR	VOLUME, CHIP
C-ZENER	ZENER, CHIP
CAP, CER	CAP, CERA-SOL
CAP, E	CAP, ELECT
CAP, M/F	CAP, FILM
CAP, TC	CAP, CERA-SOL
CAP, TC-U	CAP, CERA-SOL SS
CAP, TN	CAP, TANTALUM
CERA FIL	FILTER, CERAMIC
CF	FILTER, CERAMIC
DL	DELAY LINE
E/CAP	CAP, ELECT
FILT	FILTER
FLTR	FILTER
FUSE RES	RES, FUSE
MOT	MOTOR
P-DIODE	PHOTO DIODE
P-SNSR	PHOTO SENSER
P-TR	PHOTO TRANSISTOR
POLY VARI	VARIABLE CAPACITOR
PPCAP	CAP, PP
PT	POWER TRANSFORMER
PTR, RES	PTR, MELF
RC	REMOTE CONTROLLER
RES NF	RES, NON-FLAMMABLE
RESO	RESONATOR
SHLD	SHIELD
SOL	SOLENOID
SPKR	SPEAKER
SW, LVR	SWITCH, LEVER
SW, RTRY	SWITCH, ROTARY
SW, SL	SWITCH, SLIDE
TC CAP	CAP, CERA-SOL
THMS	THERMISTOR
TR	TRANSISTOR
TRIMER	CAP, TRIMMER
TUN-CAP	VARIABLE CAPACITOR
VIB, CER	RESONATOR, CERAMIC
VIB, XTAL	RESONATOR, CRYSTAL
VR	VOLUME
ZENER	DIODE, ZENER

MECHANICAL SECTION

DESCRIPTION	REFERENCE NAME
ADHESHIVE	SHEET ADHESHIVE
AZ	AZIMUTH
BAR-ANT	BAR-ANTENNA
BAT	BATTERY
BATT	BATTERY
BRG	BEARING
BTN	BUTTON
CAB	CABINET
CASS	CASSETTE
CHAS	CHASSIS
CLR	COLLAR
CONT	CONTROL
CRSR	CURSOR
CU	CUSHION
CUSH	CUSHION
DIR	DIRECTION
DUBB	DUBBING
FL	FRONT LOADING
FLY-WHL	FLYWHEEL
FR	FRONT
FUN	FUNCTION
G-CU	G-CUSHION
HDL	HANDOL
HIMERON	CLOTH
HINGE, BAT	HINGE, BATTERY
HLDR	HOLDER
HT-SINK	HEAT SINK
IB	INSTRUCTION BOOKLET
IDLE	IDLER
IND, L-R	INDICATOR, L-R
KEY, CONT	KEY, CONTROL
KEY, PRGM	KEY, PROGRAM
KNOB, SL	KNOB, SLIDE
LBL	LABEL
LID, BATT	LID, BATTERY
LID, CASS	LID, CASSETTE
LVR	LEVER
P-SP	P-SPRING
PANEL, CONT	PANEL, CONTROL
PANEL, FR	PANEL, FRONT
PRGM	PROGRAM
PULLY, LOAD MO	PULLY, LOAD MOTOR
RBN	RIBBON
S-	SPECIAL
SEG	SEGMENT
SH	SHEET
SHLD-SH	SHIELD-SHEET
SL	SLIDE
SP	SPRING
SP-SCREW	SPECIAL-SCREW
SPACER, BAT	SPACER, BATTERY
SPR	SPRING
SPR-P	P-SPRING
SPR-PC-PUSH	P-SPRING, C-PUSH
T-SP	T-SPRING
TERM	TERMINAL
TRIG	TRIGGER
TUN	TUNING
VOL	VOLUME
W	WASHER
WHL	WHEEL
WORM-WHL	WORM-WHEEL

サービス技術ニュース	
番号	連絡内容
G— —	
G— —	
G— —	

アイワ株式会社
AIWA CO.,LTD.

9620450, 750038
Tokyo Japan

〒110-8710 東京都台東区池之端1-2-11 ☎03（3827）3111（代表）

Printed in Singapore